

PT-LL2 Installation Instructions

SAVE THESE INSTRUCTIONS

WARNING – TO REDUCE THE RISK OF FIRE OR INJURY TO PERSONS:

- Turn power OFF or unplug fixture and allow it to cool before removal.
- Luminaire gets HOT quickly. Contact only switch/plug when turning on.
- Do not touch hot lens, guard, or fixture housing until it has cooled.
- Keep luminaire away from combustibles.


IMPORTANT SAFETY INSTRUCTIONS

- For outdoor use only.
- Make sure the power is turned OFF before installing or servicing this fixture.
- **WARNING:** Risk of electrical shock. Install all fixtures 10 feet (3.05 m) or more from a pool, spa, or fountain.
- This fixture is to be used with a low voltage power supply that does not exceed 15V.
- Position the wire and wire connector so that it is connected within 6 inches (15.2 cm) from a building structure, a fixture or fitting.
- The fixture wiring should be buried at a depth of six inches or less to ensure connectivity to the main supply cable.

FIXTURE MOUNTING INSTRUCTIONS (MASONRY OR HARDSCAPES)

- 1) Disconnect transformer from main power supply.
- 2) Place the stainless steel mounting bracket between layers of hardscape material.
- 3) Route the fixture wire to the main supply cable leads following standard masonry procedures.
- 4) Use the two screws to attach the housing to the mounting bracket.
- 5) Strip the two fixture wires.
- 6) Attach the two fixture wires to the two main supply cable leads using waterproof connectors.
- 7) Reconnect the transformer to the primary power supply.

Note: It is recommended that the installer leave additional wire behind the wall that would allow for the fixture to be removed.

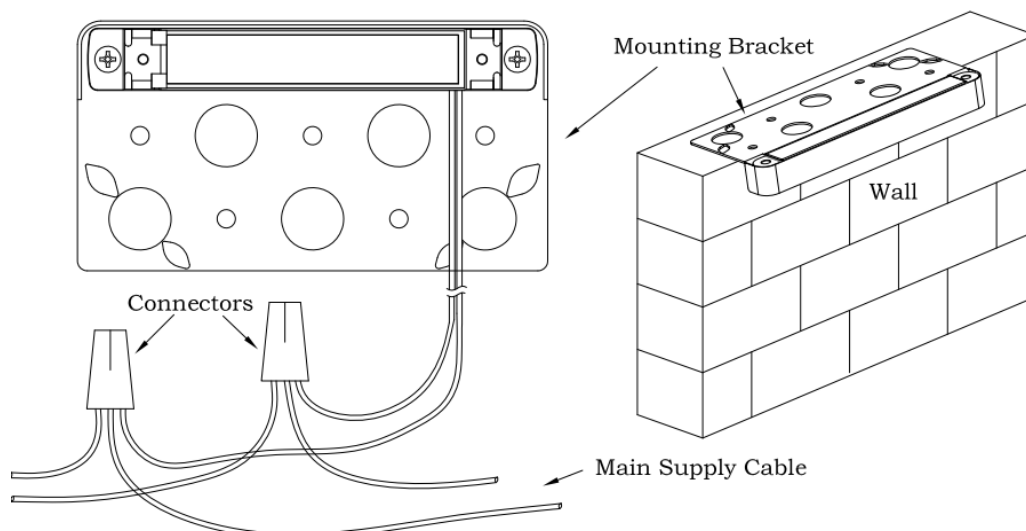

LED MODULE REPLACEMENT

- 1) Turn off power to the fixture from transformer
- 2) Using tabs located on one side of the LED module, pull module away from fixture and remove
- 3) Making sure to align the magnet on the new LED module with the magnet on the fixture, place new LED module into fixture
- 4) Reconnect the transformer to the primary power supply.

Note: if new LED module does not power on, check to make sure it is positioned correctly and that electrical contacts on both module and fixture are free of dirt and debris.