




**BRUSHCUTTER
PARTS CATALOG
MODEL LST-2400
S/N 0001001 & UP**

**LESCO, INCORPORATED
20005 LAKE ROAD
ROCKY RIVER, OH 44116**


LST-2400

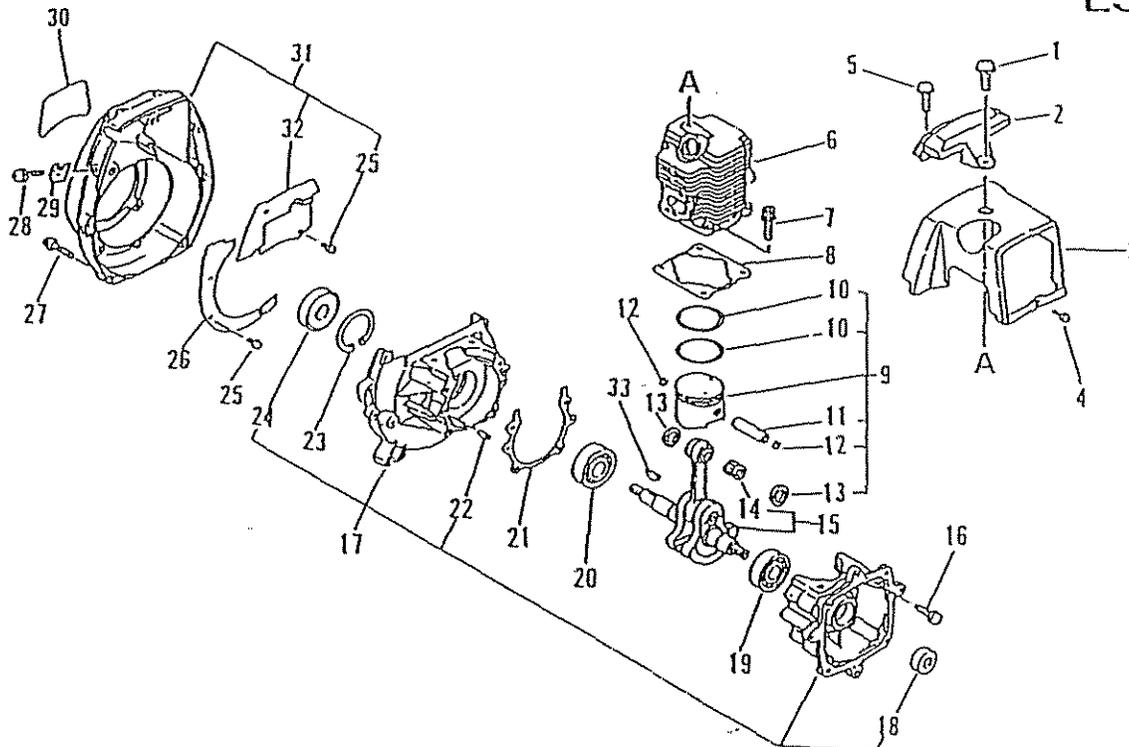

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	072951	1	SCREW 5X16	
2	031474	1	GUARD, TOP	
3	053597	1	COVER, CYLINDER	
4	080124	1	SCREW 4X10	
5	049789	2	SCREW 4X14	
6	056628	1	CYLINDER	
7	050713	4	BOLT, H.S. 5X20	
8	079326	1	GASKET, CYLINDER BASE	USE KIT 027396
9	090475	1	PISTON KIT	INCLUDES ITEMS 10 - 13
10	023943	2	RING, PISTON	
11	029168	1	PIN, PISTON	
12	048344	2	CIRCLIP, PISTON PIN	
13	093607	2	SPACER, PISTON PIN	
14	098861	1	BEARING, NEEDLE	
15	080586	1	CRANKSHAFT ASY	INCLUDES ITEM 4
16	057634	4	SCREW 5X25	
17	043120	1	CRANKSHAFT KIT	INCLUDES ITEMS 18 - 24
18	095345	1	OILSEAL	
19	055680	1	BEARING, BALL 6001	
20	027812	1	BEARING, BALL 6201	

CONTINUED
REVISED 03/92


LST-2400

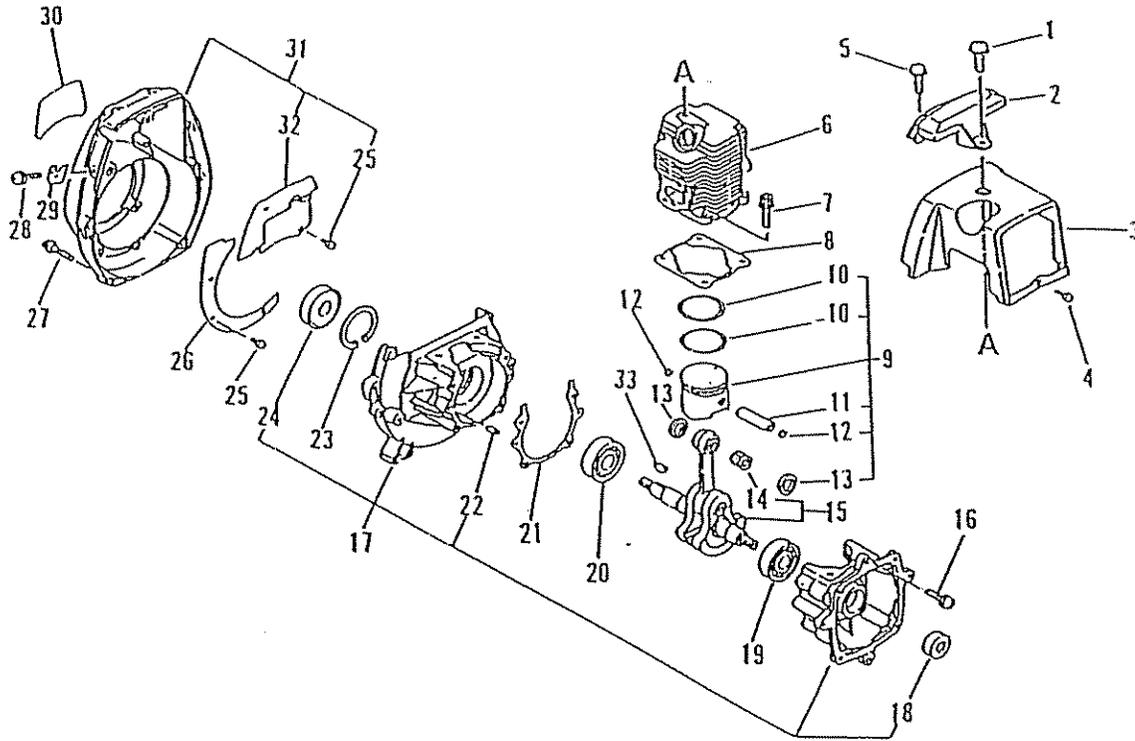

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
21	—	1	GASKET, CRANKCASE	USE KIT 027396
22	094428	2	PIN, DOWEL	
23	037941	1	CIRCLIP 32	
24	078742	1	OILSEAL	
25	048149	5	SCREW 4X8	
26	032586	1	DUCT, AIR	
27	059557	4	SCREW 5X20	
28	080124	1	SCREW 4X10	
29	056970	1	HOLDER, CABLE	
30	062695	1	LABEL, MODEL	
31	045369	1	COVER, FAN ASY	INCLUDES ITEMS 25, 26, 28, 29, 32
32	084812	1	DUCT, AIR	
33	017914	1	KEY, WOODRUFF	

REVISED 03/92


LST-2400

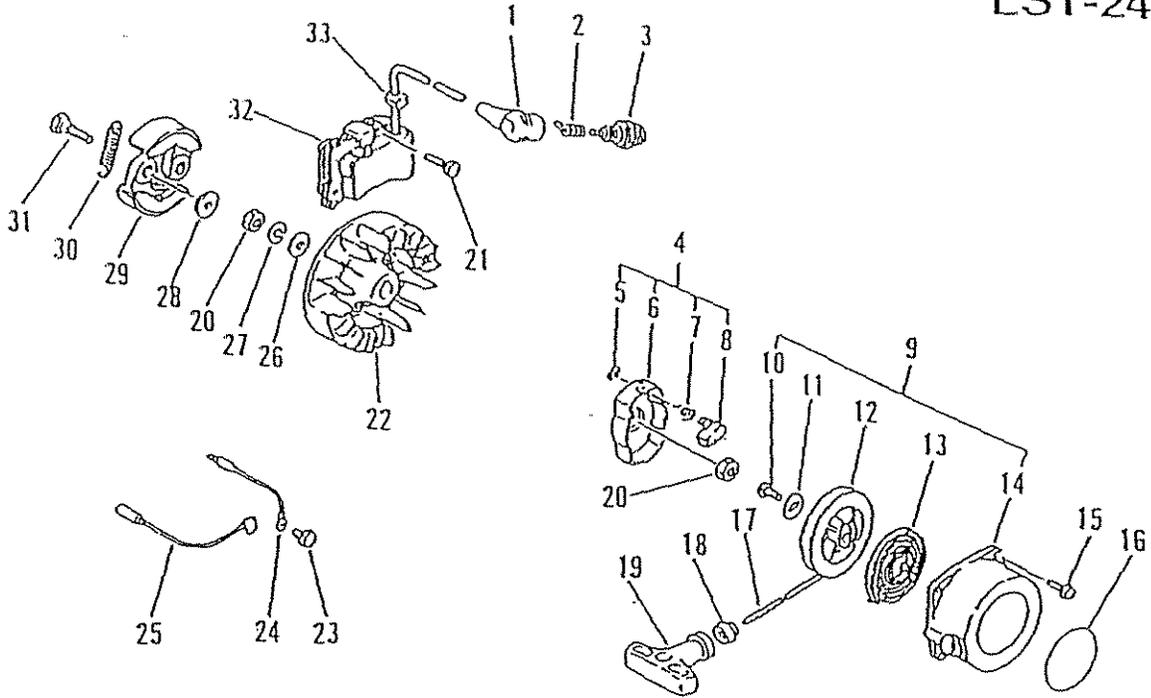

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	046403	1	CAP, SPARK PLUG	
2	024780	1	COIL, SPARK PLUG CAP	
3	058125	1	PLUG, SPARK BPM-7A	
4	018597	1	PAWL ASY, STARTER	INCLUDES ITEMS 5 - 8
5	038737	1	E-RING	
6	078335	1	CATCHER, PAWL	
7	055910	1	SPRING, RETURN	
8	038542	1	PAWL, STARTER	
9	032304	1	STARTER ASY	INCLUDES ITEMS 10 - 14, 17 - 19
10	059753	1	SCREW	
11	063224	1	WASHER	
12	068811	1	DRUM, STARTER	
13	062402	1	SPRING, REWIND	
14	048285	1	CASE, STARTER	
15	049789	4	SCREW 4X14	
16	091982	1	LABEL, LESCO	
17	098787	1	ROPE, STARTER	
18	052535	1	GUIDE, ROPE	
19	029106	1	GRIP, STARTER	
20	045796	2	NUT 8 (3)	


CONTINUED

LST-2400

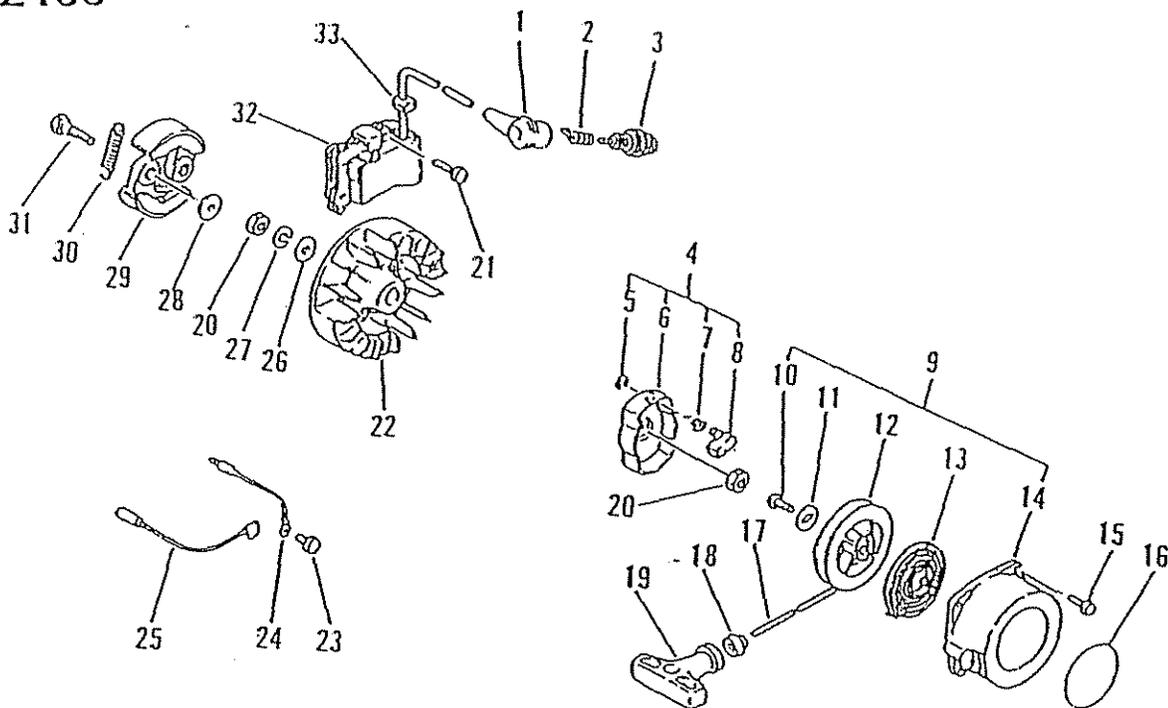

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
21	059557	2	SCREW 5X20	
22	026203	1	FLYWHEEL	
23	023944	1	SCREW 5X10	
24	042577	1	LEAD, GROUND	
25	080860	1	LEAD, GROUND	
26	043329	1	WASHER 8	
27	058803	1	WASHER, SPRING 8	
28	033531	2	WASHER 6	
29	068470	2	SHOE, CLUTCH	
30	041466	1	SPRING, CLUTCH	
31	065810	2	SHAFT, CLUTCH	
32	084304	1	COIL, IGNITION	
33	025986	1	GROMMET	

LST-2400

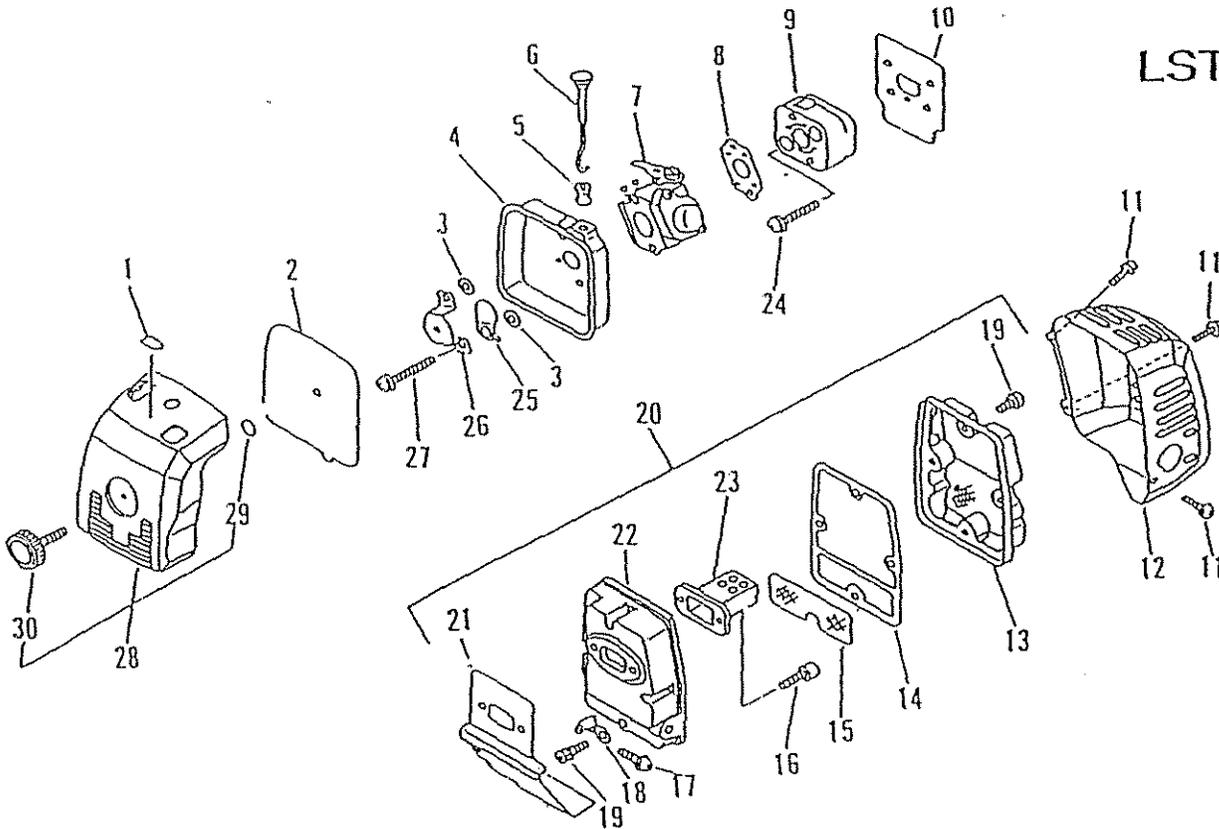


KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
-----	-------------	-----	-------------	---------

1	022057	1	LABEL, CHOKE	
2	098833	1	FILTER, AIR	
3	065134	2	WASHER 5	
4	082326	1	CASE, AIR CLEANER	
5	043043	1	GROMMET, CHOKE	
6	058713	1	KNOB, CHOKE	
7	076029	1	CARBURETOR C1U-K20	
8	089887	1	GASKET, INTAKE	
9	040639	1	INSULATOR	
10	036833	1	GASKET, INTAKE	
11	048149	6	SCREW 4X8	
12	032979	1	COVER, MUFFLER	
13	090550	1	LID, MUFFLER	
14	029960	1	GASKET, MUFFLER LID	
15	026891	1	SCREEN, MUFFLER	
16	091279	2	BOLT, H.S. 5X18	
17	023944	1	SCREW 5X10	
18	078198	1	STAY, MUFFLER	
19	055511	5	BOLT, H.S. 5X14	
20	063917	1	MUFFLER ASY	

INCLUDES ITEMS 13 - 19, 21 - 23



CONTINUED
REVISED 03/92

LST-2400

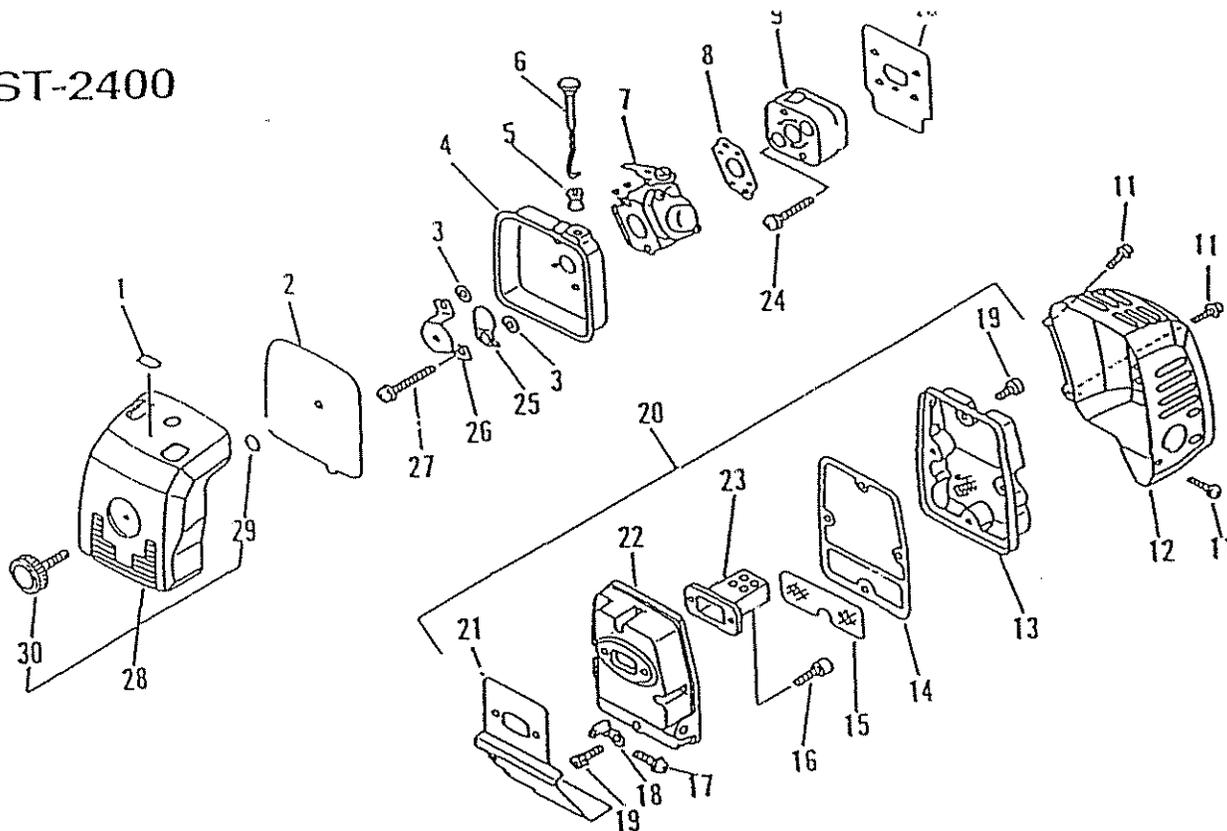


KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
21	089443	1	GASKET, MUFFLER	
22	000173	1	MUFFLER	
23	041516	2	DUFFUSER, MUFFLER	
24	057634	2	SCREW 5X25	
25	045829	1	SHUTTER, CHOKE	
26	075726	1	PLATE	
27	036310	2	SCREW 5X50	
28	099533	1	COVER ASY, AIR CLEANER	INCLUDES ITEMS 29 & 30
29	024527	1	O-RING 3	
30	051381	1	NUT, THUMB	

LST-2400

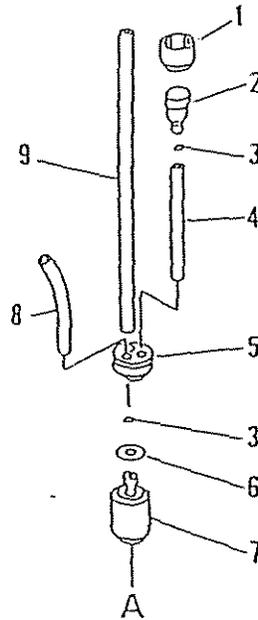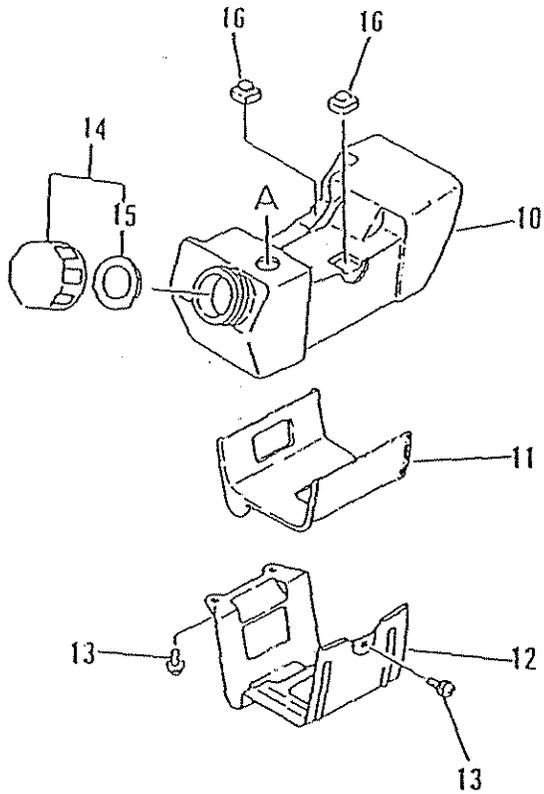

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	022289	1	COVER, VENT	
2	033688	1	VENT ASY	
3	051986	1	CLIP	
4	097444	1	PIPE, FUEL	
5	093287	1	GROMMET, FUEL	
6	060744	1	WASHER 5	
7	076420	1	STRAINER ASY, FUEL	
8	074945	1	PIPE, FUEL	
9	084229	1	PIPE, FUEL	
10	099691	1	TANK, FUEL	
11	086214	1	CUSHION	
12	045402	1	STAND	
13	023944	3	SCREW 5X10	
14	076047	1	CAP ASY, FUEL TANK	
15	097180	1	GASKET, FUEL TANK CAP	
16	072186	3	CUSHION	


LST-2400

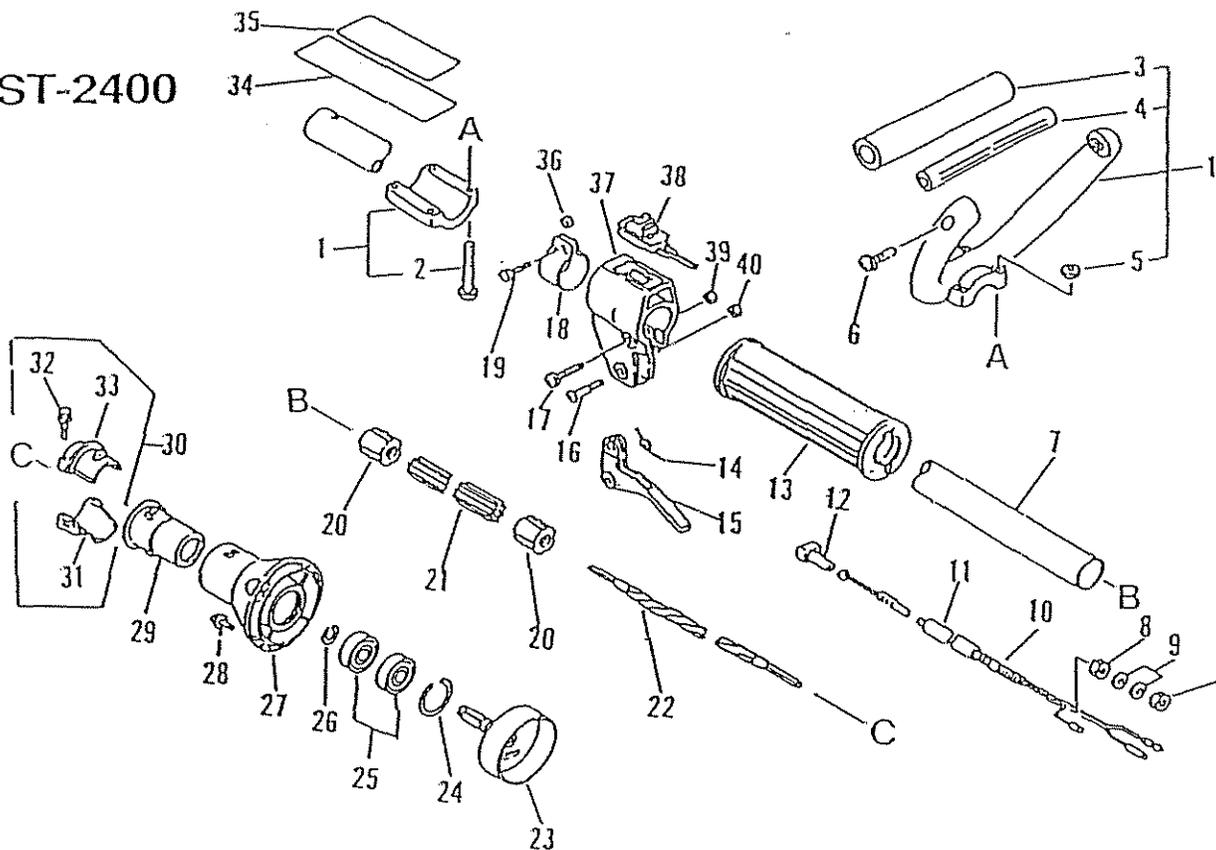

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	087791	1	HANDLE ASY, LOOP	INCLUDES ITEMS 2 - 6
2	062841	4	SCREW 5X35	
3	083333	1	GRIP, FRONT HANDLE	
4	094854	1	HANDLE, FRONT	
5	034589	4	NUT 5	
6	022034	2	SCREW 5X30	
7	042973	1	HOUSING ASY, DRIVESHAFT	INCLUDES ITEMS 20 & 21
8	082143	2	NUT 6 (3)	
9	045845	2	WASHER 6	
10	046980	1	WIRE, THROTTLE	
11	026315	1	TUBE	
12	020281	1	HOLDER, THROTTLE WIRE	
13	060280	1	GRIP, HANDLE	
14	083731	1	SPRING, THROTTLE RETURN	
15	092731	1	CONTROL, THROTTLE	
16	049365	1	SCREW	
17	056228	1	SCREW 5X30	
18	085593	1	HOOK	
19	042218	1	BOLT 5X18	
20	077792	2	FIXTURE, LINER	


CONTINUED
REVISED 03/92

LST-2400

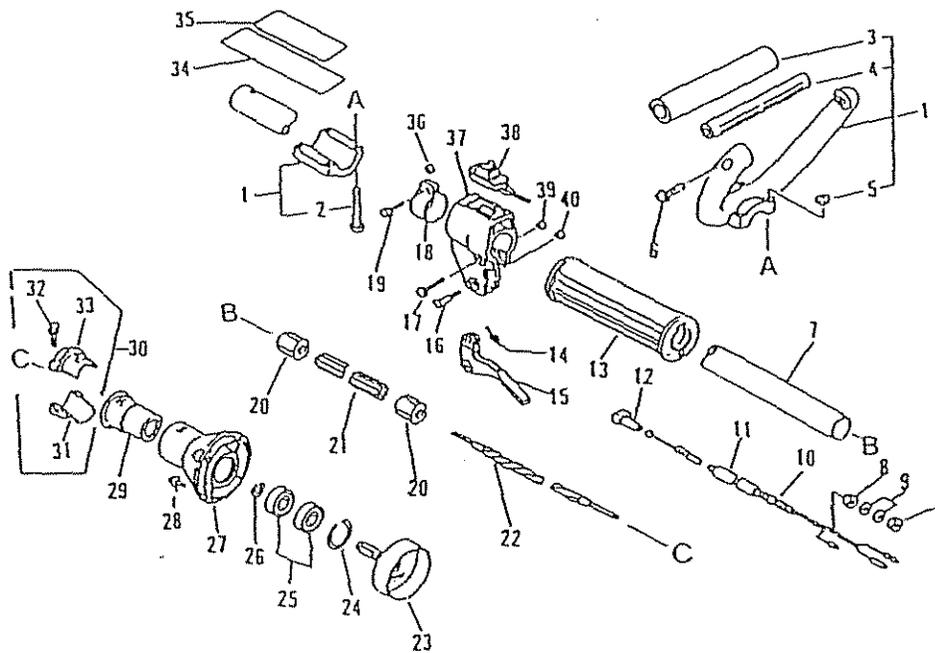


KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
21	063719	1	LINER, FLEXIBLE	
22	092682	1	SHAFT, FLEXIBLE	
23	019650	1	DRUM, CLUTCH	
24	030759	1	CIRCLIP 28	
25	061801	2	BEARING, BALL 6001	
26	035029	1	CIRCLIP 12	
27	086399	1	FLANGE, DRIVESHAFT HOUSING	
28	072951	4	SCREW 5X16	
29	057810	1	CUSHION	
30	039539	1	HOLDER KIT	INCLUDES ITEMS 31 - 33
31	025860	1	HOLDER	
32	025844	2	BOLT 5X25	
33	071747	1	HOLDER	
34	074384	1	LABEL, CAUTION	
35	067142	1	LABEL, CAUTION	
36	082339	1	SPACER	
37	060892	1	BRACKET, THROTTLE	
38	056862	1	SWITCH, IGNITION	
39	034589	1	NUT 5	
40	040800	1	LOCKNUT 5	

LST-2400

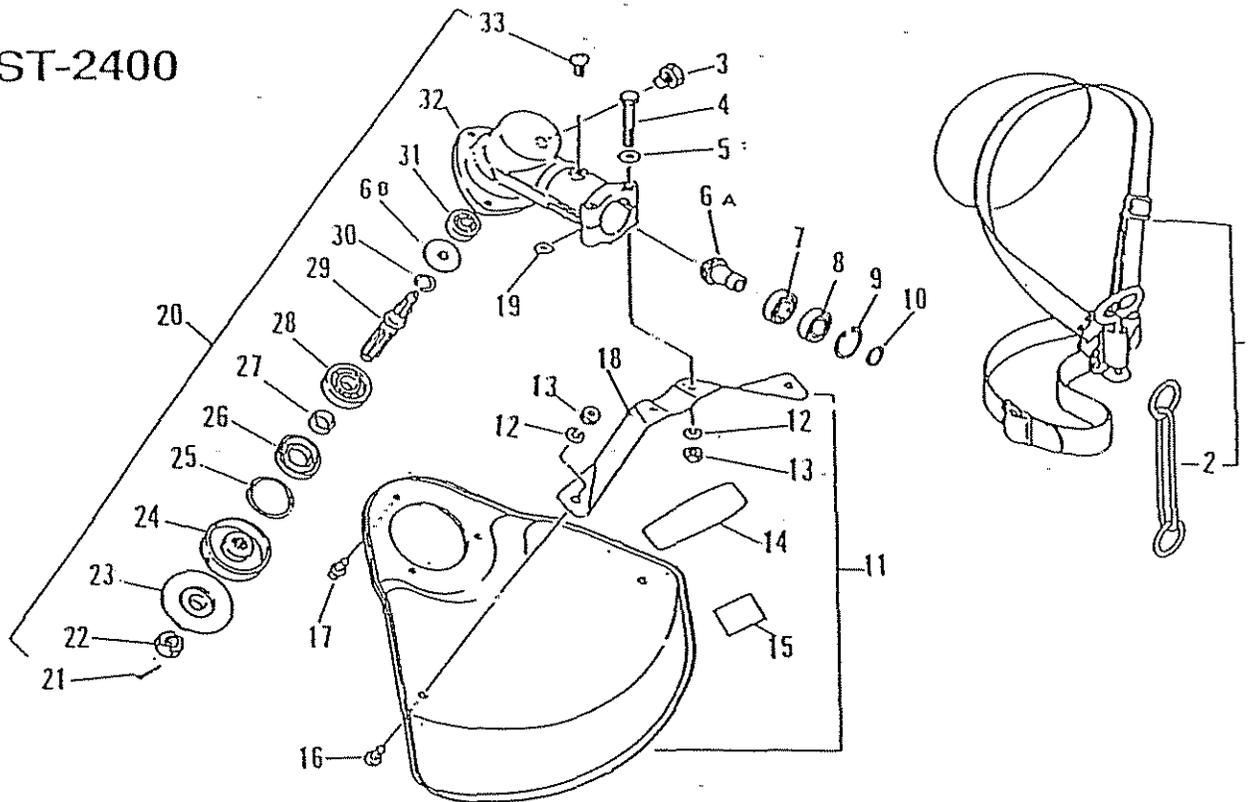

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	050993	1	HARNESS, SHOULDER	
2	027457	1	RING, HARNESS	
3	039571	1	BOLT 8X8	
4	043164	2	BOLT 5X35	
5	044153	2	WASHER 5	
6	053611	1	GEAR SET, BEVEL	
7	079385	1	BEARING, BALL 6900	
8	081725	1	BEARING, BALL 6900	
9	056909	1	CIRCLIP 22	
10	077700	1	CIRCLIP 12	
11	088381	1	SHIELD ASY	INCLUDES ITEMS 12, 13, 15 - 18
12	076801	2	WASHER, SHIELD	
13	034589	2	NUT 5	
14	036478	1	LABEL, LESCO	
15	096069	1	LABEL, CAUTION	
16	053357	2	SCREW 5X8	
17	044479	3	SCREW 5X10	
18	091156	1	BRACKET, SHIELD	
19	042538	2	WASHER, SHIM	
20	041134	1	HOUSING ASY, GEAR	INCLUDES ITEMS 3 - 10, 19, 21 - 33

CONTINUED

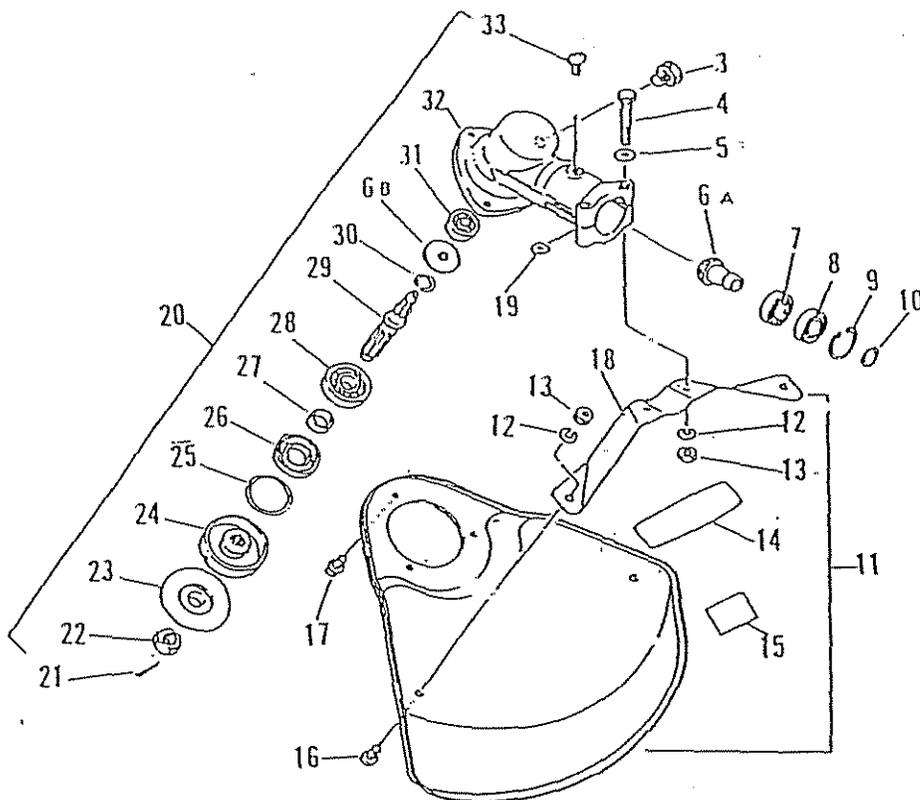


LST-2400

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
21	068233	1	PIN, SPLIT 2X22	
22	046544	1	NUT 10 (L-H)	
23	067937	1	PLATE, ADAPTER (L)	
24	022880	1	PLATE, ADAPTER (U)	
25	037941	1	CIRCLIP 32	
26	038615	1	OILSEAL	
27	084977	1	SPACER	
28	033069	1	BEARING, BALL 6201	
29	028260	1	SHAFT, P.T.O.	
30	030764	1	CIRCLIP 10	
31	061068	1	BEARING, BALL 609	
32	078899	1	HOUSING, GEAR	
33	044479	1	SCREW 5X10	

REVISED 03/92


LST-2400

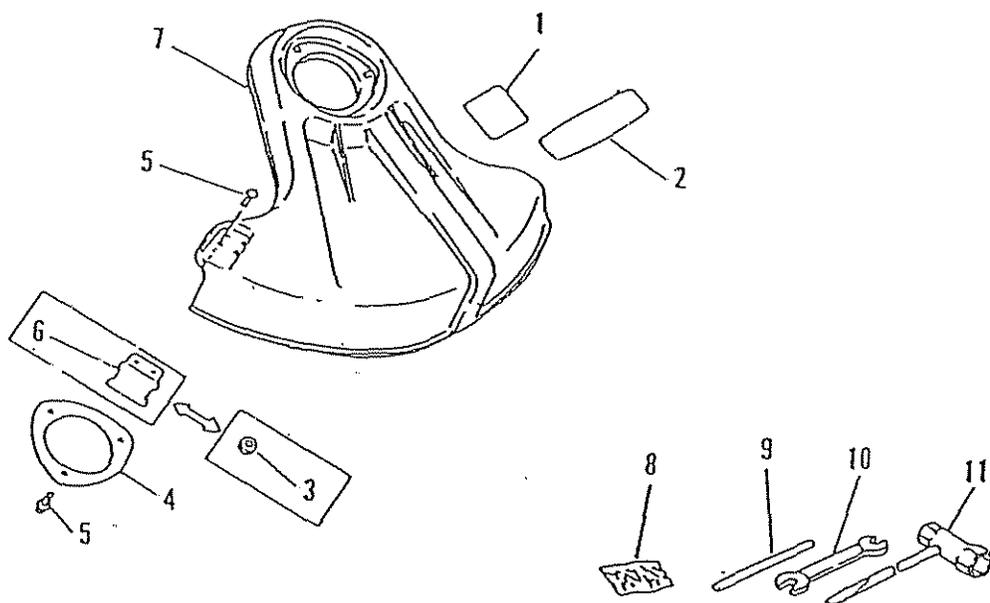

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	096069	1	LABEL, CAUTION	
2	036478	1	LABEL, LESCO	
3	034589	5	NUT 5	
4	024256	1	BRACKET, SHIELD	
5	038658	5	SCREW 5X16	
6	086152	1	CUTTER	
7	088446	1	SHIELD ASY	INCLUDES ITEMS 3, 4 & 5
8	084937	1	PIN 2X22 (W/POUCH)	
9	097929	1	LOCKING TOOL	
10	057704	1	SPANNER 8X10	
11	067062	1	WRENCH, W/SCREWDRIVER	

REVISED 03/92

LST-2400

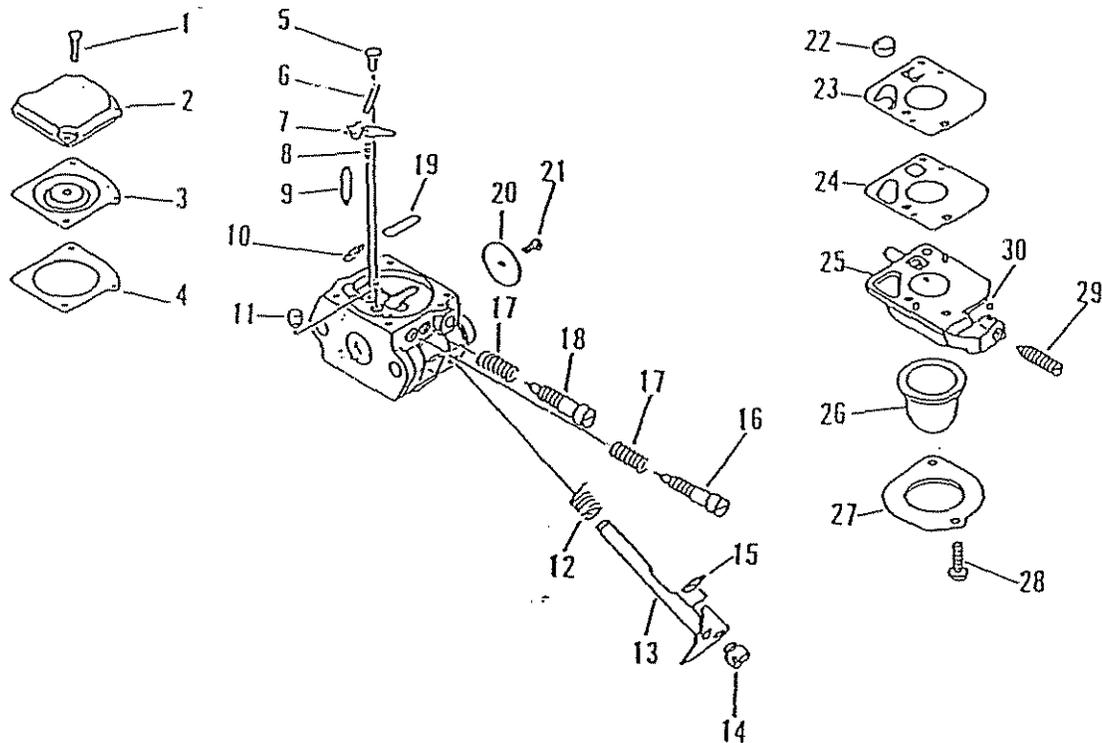

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
	055878	1	SCREW	
2	B	1	STRAINER	
23	A B	1	DIAPHRAGM, FUEL PUMP	
24	A B	1	GASKET, FUEL PUMP	
25	039961	1	COVER, PUMP	
26	074606	1	PUMP, PRIMER	
27	076192	1	RING	
28		2	SCREW	
29	032655	1	SCREW, IDLE ADJUST	
30	037461	1	PIECE, FRICTION	
A	033743	1	GASKET/DIAPHRAGM KIT	
B	091198	1	REPAIR KIT	

REVISED 03/92

LST-2400

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
	027396	1	GASKET KIT	INCLUDES THE FOLLOWING
		1	GASKET, CYLINDER BASE	
		1	GASKET, CRANKCASE	
		1	GASKET, INTAKE	
		1	GASKET, INTAKE	
		1	GASKET, MUFFLER	
		1	GASKET, MUFFLER LID	

REVISED 03/92