


Model LCS 4500 Chain Saw Parts List

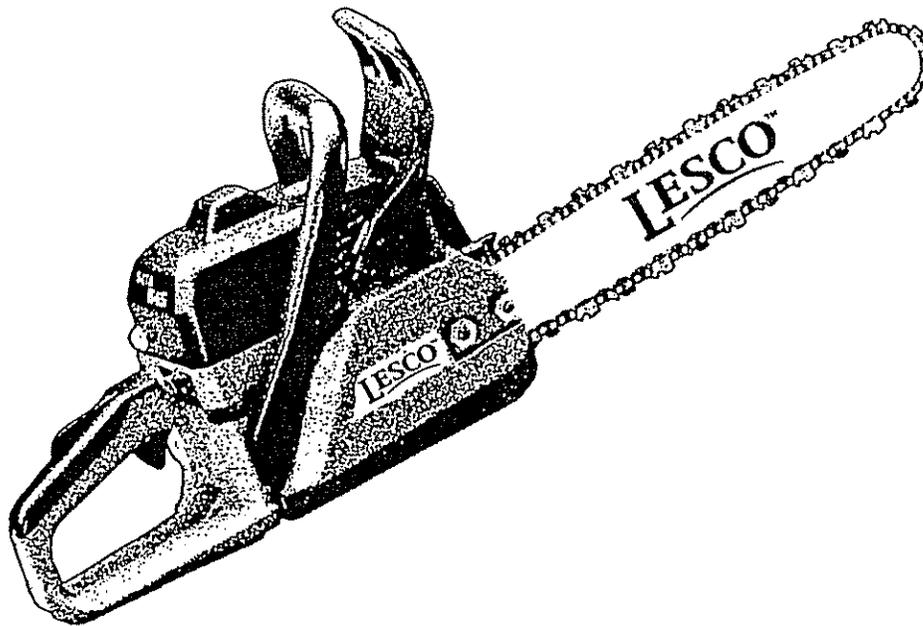


LESCO Model LCS 4500, LESCO No. 055516

Serial No. _____

Date Purchased _____


LESCO™

ENGINE

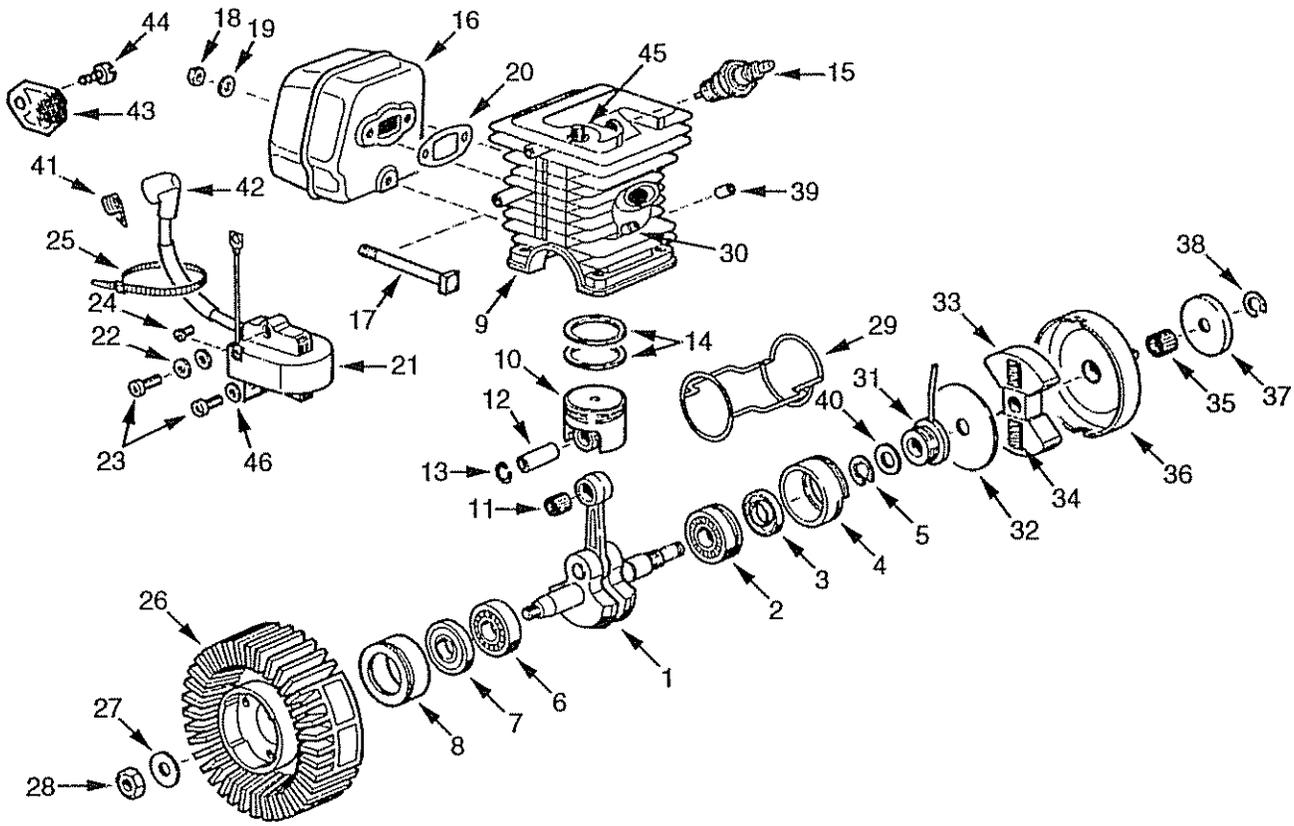


Ref. No.	LESCO No.	Description	No. Used	Ref. No.	LESCO No.	Description	No. Used
1	450600	Crankshaft	1	24	450622	Screw, Flat Hd.	1
2	450613	Bearing, Ball	1	25	450636	Cable Band	1
3	450623	Seal, Oil	1	26	450608	Fan Wheel	1
4	450607	Sleeve	1	27	450642	Washer, Spring	1
5	450624	Circlip	1	28	450646	Nut	1
6	450618	Bearing, Ball	1	29	450621	Gasket	1
7	450630	Seal, Oil	1	30	450637	Impulse Connection	1
8	450611	Bearing Sleeve	1	31	450604	Activator	1
9	450614	Cylinder	1	32	450923	Washer	1
10	450601	Piston	1	33	450609	Clutch, Centrifugal	1
11	450625	Bearing, Needle	1	34	450626	Spring, Pressure	2
12	450615	Piston Pin	1	35	450638	Bearing, Needle	1
13	450619	Ring	2	36	450643	Clutch Drum	1
14	450629	Piston Ring	2	37	450645	Cap, Protection	1
15	450632	Spark Plug	1	38	450605	Circlip	1
16	450602	Muffler	1	39	450639	Hose	1
17	450633	Screw	3	40	450644	Washer	1
18	450620	Nut, Lock	3	41	450610	Spring, Contact	1
19	450616	Washer	1	42	450627	Cap, Spark Plug	1
20	450634	Gasket, Exhaust	1	43	450612	Spark Arrestor	1
21	450641	Ignition Module	1	44	450640	Screw, Flat Hd.	1
22	450603	Washer	1	45	450617	Screw	1
23	450635	Screw, Flat Hd.	2	46	450606	Washer, Spring	2

HOUSING

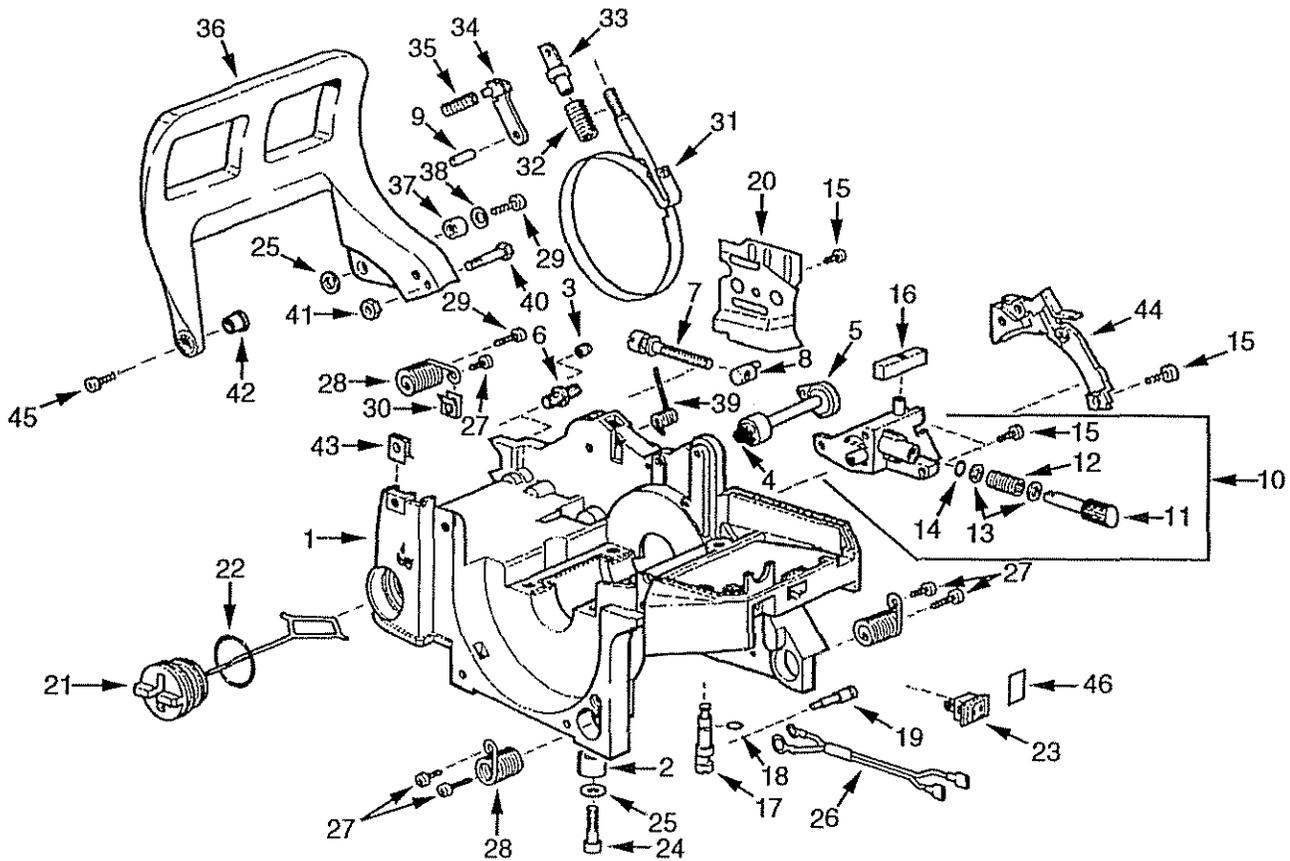


Ref. No.	LESCO No.	Description	No. Used	Ref. No.	LESCO No.	Description	No. Used
1	450042	Housing, Main	1	24	450684	Screw, Flat Hd.	4
2	450647	Tube, Spacer	4	25	450653	Washer, Spring	3
3	450660	Valve, Check	1	26	450680	Cable, Short Circuit	1
4	450668	Strainer, Oil	1	27	450685	Screw	5
5	450648	Hose, Oil	1	28	450665	Spring, Damping	3
6	450676	Screw	2	29	450654	Screw	2
7	450661	Screw, Tension	1	30	450686	Nut	1
8	450677	Bolt, Chain Tension	1	31	450689	Brake Band	1
9	450669	Pin	1	32	450655	Spring, Pressure	1
10	450649	Pump, Oil	1	33	450690	Adjuster	1
11	450662	Pump Piston	1	34	450666	Lock, Release	1
12	450670	Spring, Pressure	1	35	450691	Spring, Pressure	1
13	450681	Washer, Friction	2	36	450692	Hand Protector	1
14	450650	O-Ring	1	37	450667	Sleeve	1
15	450652	Screw	6	38	450657	Washer	1
16	450663	Seal	1	39	450672	Spring, Torsion	1
17	450671	Pin	1	40	450687	Bolt, Shift	1
18	450651	O-Ring	1	41	450688	Nut	1
19	450682	Bolt	1	42	450658	Rivet	1
20	450664	Plate, Chain Protection	1	43	450673	Nut	1
21	450678	Cap, Oil Tank	1	44	450059	Cover, Brake Band	1
22	450683	O-Ring	1	45	450674	Screw	1
23	450679	Button, Short Circuit	1	46	450659	Decal, "Stop"	1

CARBURETOR

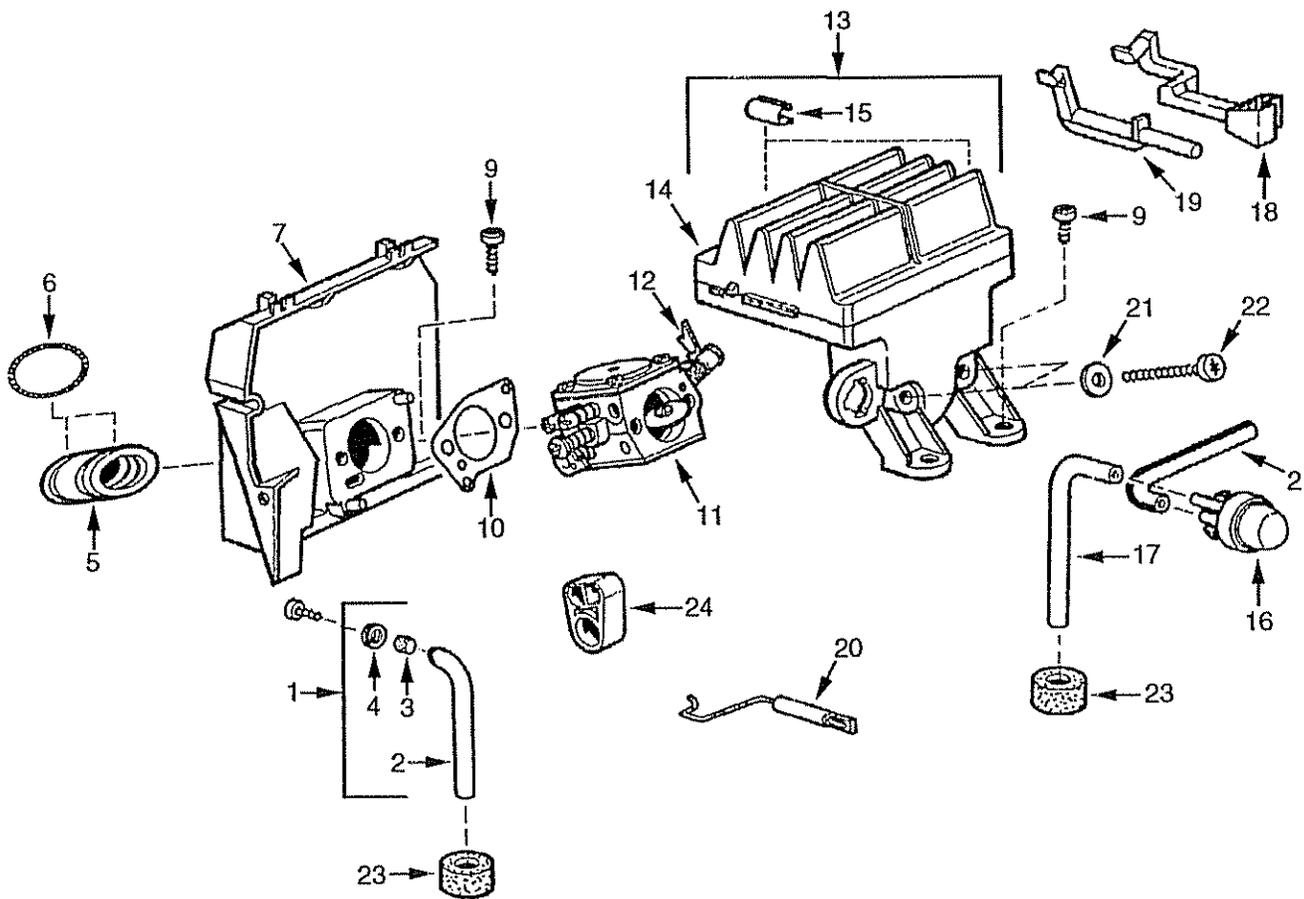


Ref. No.	LESCO No.	Description	No. Used	Ref. No.	LESCO No.	Description	No. Used
1	450700	Hose, Vent	1	13	450706	Filter, Air	1
2	450693	Tube	2	14	450710	Filter Housing	1
3	450708	Filter, Sinter	1	15	450696	Profile	2
4	450704	Tube Eye	1	16	450703	Primer	1
5	450712	Connection, Hose	1	17	450699	Hose, Fuel	1
6	450705	Spring Ring	2	18	450711	Lever, Choke	1
7	450697	Manifold	1	19	450714	Pin, Half Throttle	1
8	450694	Screw	1	20	450716	Throttle Linkage	1
9	450702	Screw	4	21	450698	Circlip	2
10	450707	Gasket, Manifold	1	22	450701	Screw	2
11	450695	Carburetor	1	23	450715	Hose Guide	3
12	450709	Lever, Stop	1	24	450713	Nozzle Guide	1

HANDLE BAR / HOUSING

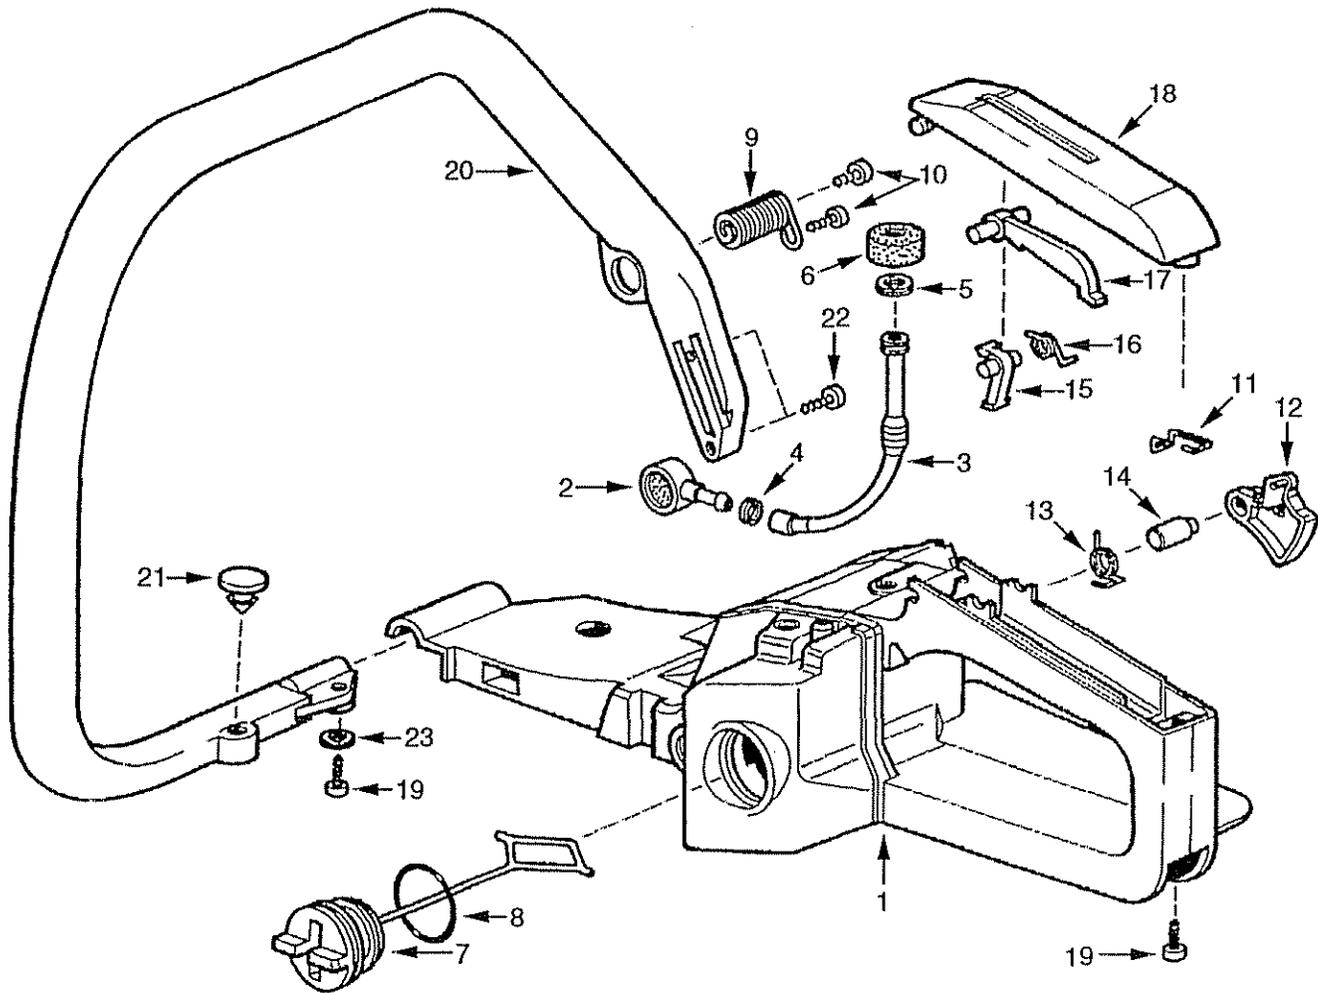


Ref. No.	LESCO No.	Description	No. Used	Ref. No.	LESCO No.	Description	No. Used
1	450065	Housing, Handle/Fuel	1	13	450718	Spring	1
2	450733	Fuel Pick-up	1	14	450724	Pin	1
3	450722	Hose, Fuel	1	15	450732	Lever, Lock	1
4	450731	Tube Eye	1	16	450728	Spring	1
5	450736	Hose Fitting	1	17	450726	Lever, Safety	1
6	450715	Hose Guide	1	18	450735	Cap, Handle	1
7	450734	Cap, Tank	1	19	450719	Screw	2
8	450717	O-Ring	1	20	450737	Handle Bar	1
9	450665	Spring, Damping	1	21	450721	Buffer	1
10	450702	Screw	2	22	450727	Screw	2
11	450723	Throttle Linkage	1	23	450657	Washer	1
12	450725	Throttle Lever	1				

STARTER

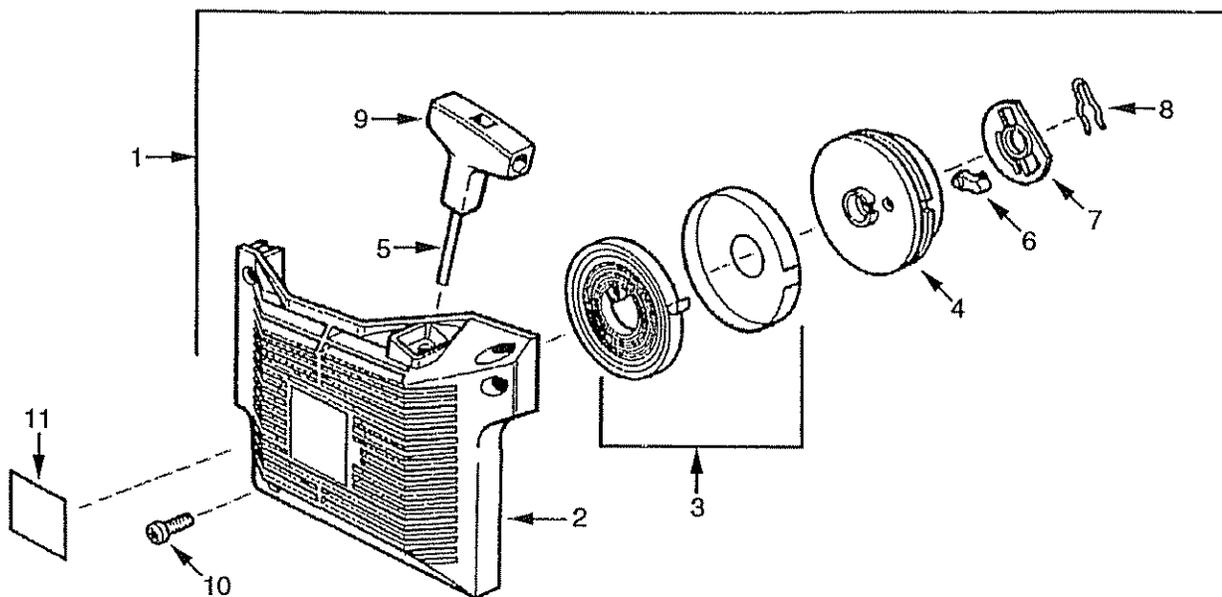

Ref. No.	LESCO No.	Description	No. Used
1	450949	Starter Assembly	1
2	450955	Housing, Starter	1
3	450656	Spring, Starter	1
4	450742	Pulley, Starter	1
5	450739	Rope, Starter	1
6	450743	Pawl, Starter	1
7	450740	Pawl Guide	1
8	450744	Pin	1
9	450741	Grip, Starter	1
10	450719	Screw	4
11	N/A	Decal, "LESCO"	1

COVERS

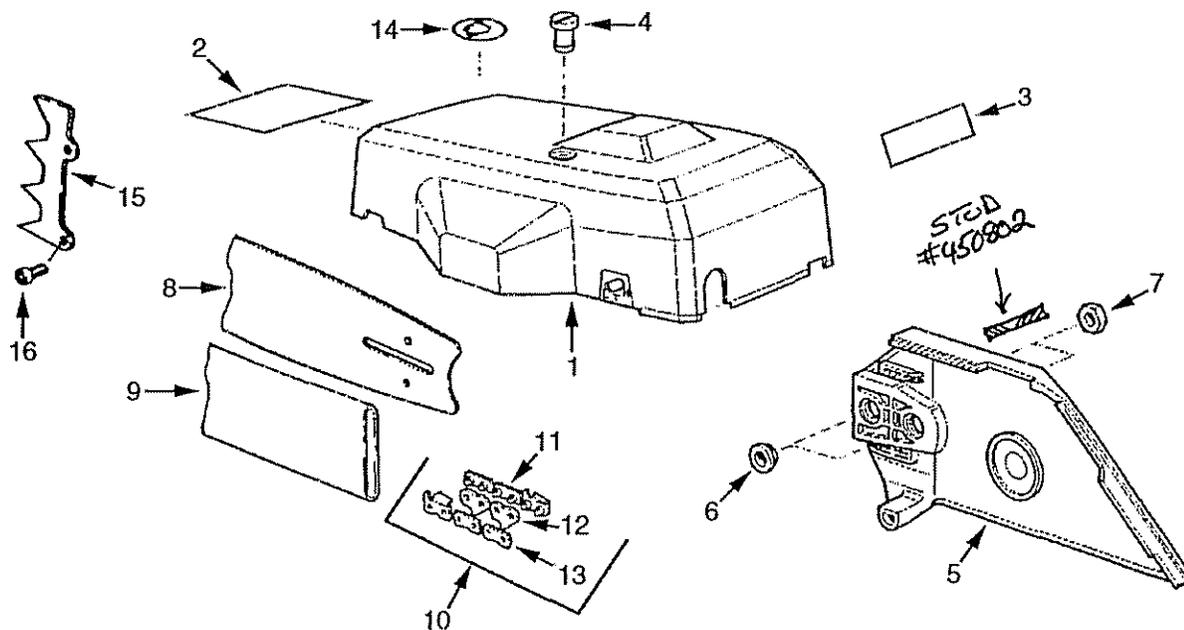

Ref. No.	LESCO No.	Description	No. Used
1	450754	Cover, Top	1
2	450747	Insulating Foil	1
3	N/A	Decal, "LCS4500"	1
4	450748	Screw	1
5	450918	Guard, Chain (Side Cover)	1
6	450749	Sleeve	2
7	450755	Hex Nut	2
8	450924	Guide Bar, 16"	1
9	450750	Scabbard	1
10	450756	Chain, 16" Loop	1
11	450751	Tie Strap w/Rivet	As Req'd.
12	450757	Link, Drive	As Req'd.
13	450753	Tie Strap w/o Rivet	As Req'd.
14	N/A	Decal	1
15	450675	Bucking Spike	1
16	450752	Screw, Flat Hd.	2



LIMITED WARRANTY FOR HAND HELD POWER EQUIPMENT

LESCO, Inc.'s limited warranty promises to you, the original retail purchaser, that the unit of LESCO hand held power equipment you purchased (the "Product") will be free from defects in material and workmanship for a period of one (1) year from the date of retail purchase (the "Warranty period").

LESCO agrees to repair or replace, at LESCO's option, any defective Product free of charge during the Warranty Period. Upon completion of your purchase, the Serial Number of the Product will be registered with LESCO, Inc. This will initiate and validate your limited warranty. Please keep your purchase receipt and present it to an authorized LESCO servicing facility for warranty service. Parts replaced or repaired under this limited warranty are warranted only to the end of the Warranty Period. All defective parts replaced under this Limited Warranty become the property of LESCO, Inc. For warranty service, you must, at your own expense, deliver the Product to, and pick it up from, an authorized LESCO servicing facility. To locate your nearest authorized LESCO servicing facility, call LESCO, Inc. toll free at 1-800-321-5325.

This limited warranty is given by LESCO to the original retail purchaser only, and is not transferable to subsequent owners. This warranty does not cover damage to the Product resulting from any cause other than defects in material or workmanship. This warranty specifically does not cover damage caused by:

1. Lack of lubrication or engine failure due to the use of oils other than LESCO-approved oils.
2. The use of gasohol containing methyl (wood) alcohol or gasoline containing less than 89 octane. Only use gasoline which contains 89 octane or higher or gasohol which contains a maximum 10% ethyl (grain) alcohol or 15% MTBE (methyl tertiary-butyl ether). (The prescribed mixing ratio of gasoline to oil is listed on the LESCO oil label.)
3. Defects, malfunctions or failures resulting from abuse, misuse, modifications, alterations, improper servicing or maintenance, improper storage, use of unauthorized attachments, including, without limitation, failure to provide or perform required maintenance services as described in the Operator's Manual.
4. Tampering with engine speed governors or running engines above specified and recommended engine speeds.
5. Dirt, salt water corrosion, rust, varnish and moisture.
6. Operation of the Product with improperly serviced, damaged or removed air filter.
7. Failure to follow the set-up, pre-delivery service and adjustments outlined in the Operator's Manual.
8. Parts which are not warranted. (This limited warranty does not cover parts which are normal wear or maintenance items, including & without limitation, spark plugs, filters, lubricants, engine tune-up parts, spark arrestor screen, cutting line and starter cords.)
9. Engine damage caused by the use of ether or any starting fluids.
10. Damage caused by the pressure of steam cleaning the Product.
11. Repairs or alterations made to the Product by an unauthorized party.

THIS LIMITED WARRANTY IS IN PLACE OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES. ANY IMPLIED WARRANTY, SUCH AS FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, IS EXCLUDED. REPAIR OR REPLACEMENT UNDER THIS LIMITED WARRANTY IS EXPRESSLY AGREED TO BE THE EXCLUSIVE REMEDY. LESCO, INC. WILL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH VARY FROM STATE TO STATE.

HOW TO ORDER PARTS

Contact your LESCO Salesperson, OR phone us (use the numbers below), OR write us (use the address below). We will need the following information:

1. Your account number if available.
2. Your name and address and the address where you want the parts to be shipped.
3. The Model/Serial No. of the equipment.
4. The LESCO Part No. and the quantity desired. (Please do not use reference numbers.)

NOTE: Inspect all shipments on receipt for damage or missing parts. File a claim with the carrier before accepting a damaged shipment.

We reserve the right to change designs, specifications and equipment at any time without notice and without incurring any obligations.

LESCO, Inc., 20005 Lake Road, Rocky River, Ohio 44116-1545
Toll Free (800) 321-5325 • In the Cleveland Area (216) 333-9250

