



OPERATOR'S MANUAL



6x4 Utility Vehicle

Rear Electric Outlet


39A-102-100

IMPORTANT: READ SAFETY RULES AND INSTRUCTIONS CAREFULLY

CUB CADET LLC P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

Assembling Horn

- Raise hood to get access to under the dash panel.
- Remove power switch plug in dash and place power switch into dash hole. See Illustrated Parts.
- Plug switch into a marked connector that already exists on the vehicle wire harness.
- Plug power switch fuse into second slot from left in the lower row of fuse block.
- Lower hood and secure hood to vehicle.
- In the rear of the vehicle, secure the power reciprocal under the right side of the cargo box frame with the hardware provided. See Illustrated Parts.

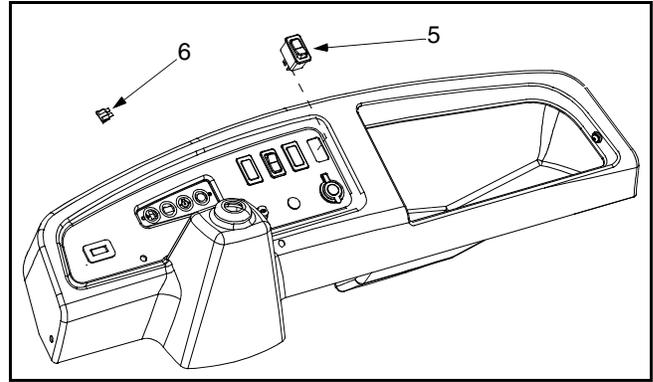

Calling Customer Support

If you have difficulty assembling this product or have any questions regarding the controls, operation or maintenance of this unit, please call the Customer Dealer Referral Line. Call **1-877-282-8684** to reach the Customer Dealer Referral Line. Please have your unit's model number and serial number ready when you call.

REF. NO.	PART NO.	DESCRIPTION
1.	725-04017	Power Reciprocal
2.	725-04018	Plug Reciprocal
3.	710-04016	Machine Screw 10-32 x .50
4.	712-04003	Hex Lock Nut #10-32
5.	725-04016	Power Switch
6.	725-04009	Fuse 15 amp

Illustrated Parts

