


# LBB - 4400

---


## Parts List

# ENGINE, LBB - 4400 BACKPACK BLOWER

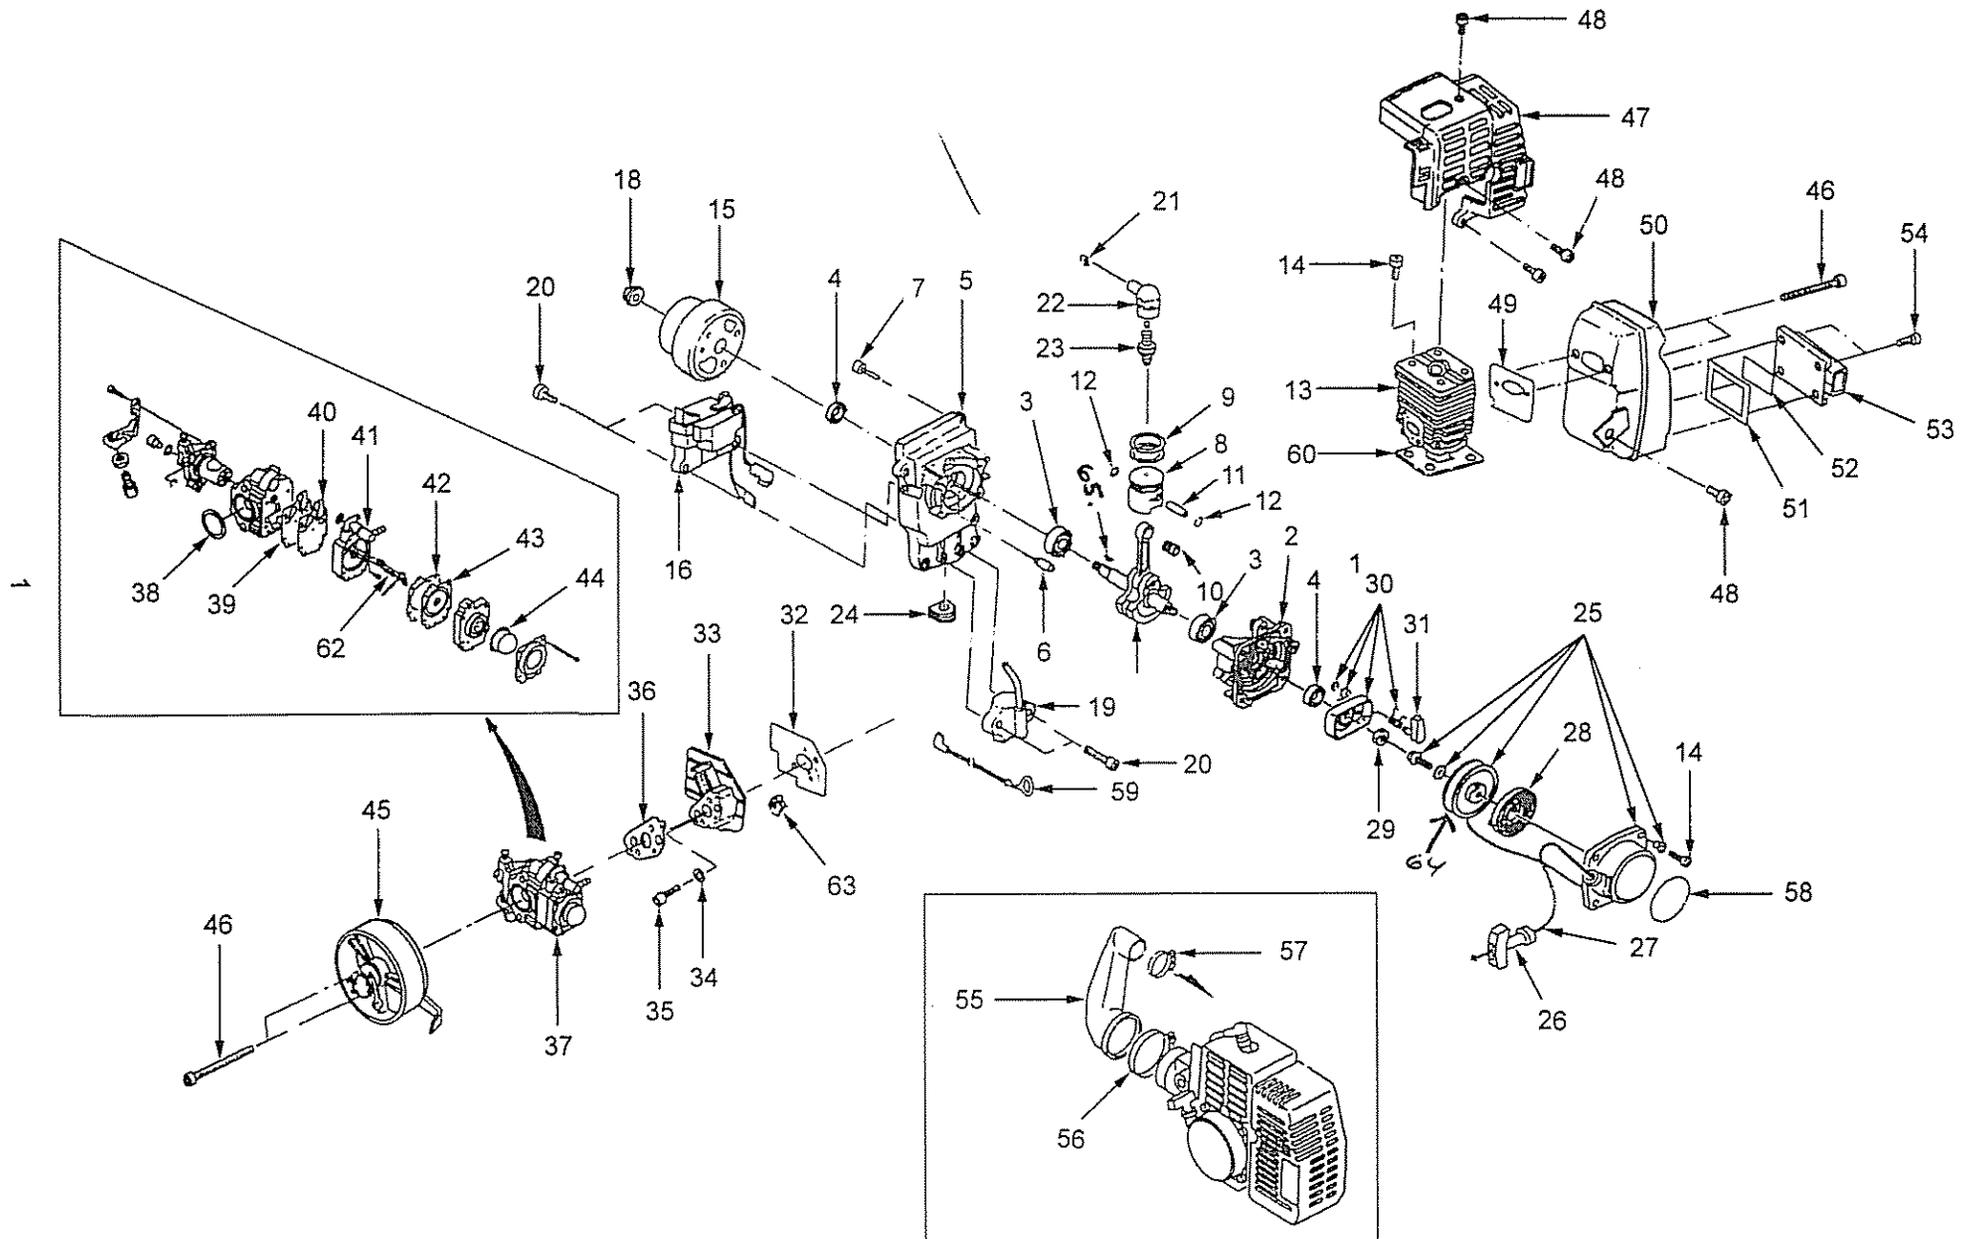



# BLOWER, LBB - 4400 BACKPACK BLOWER

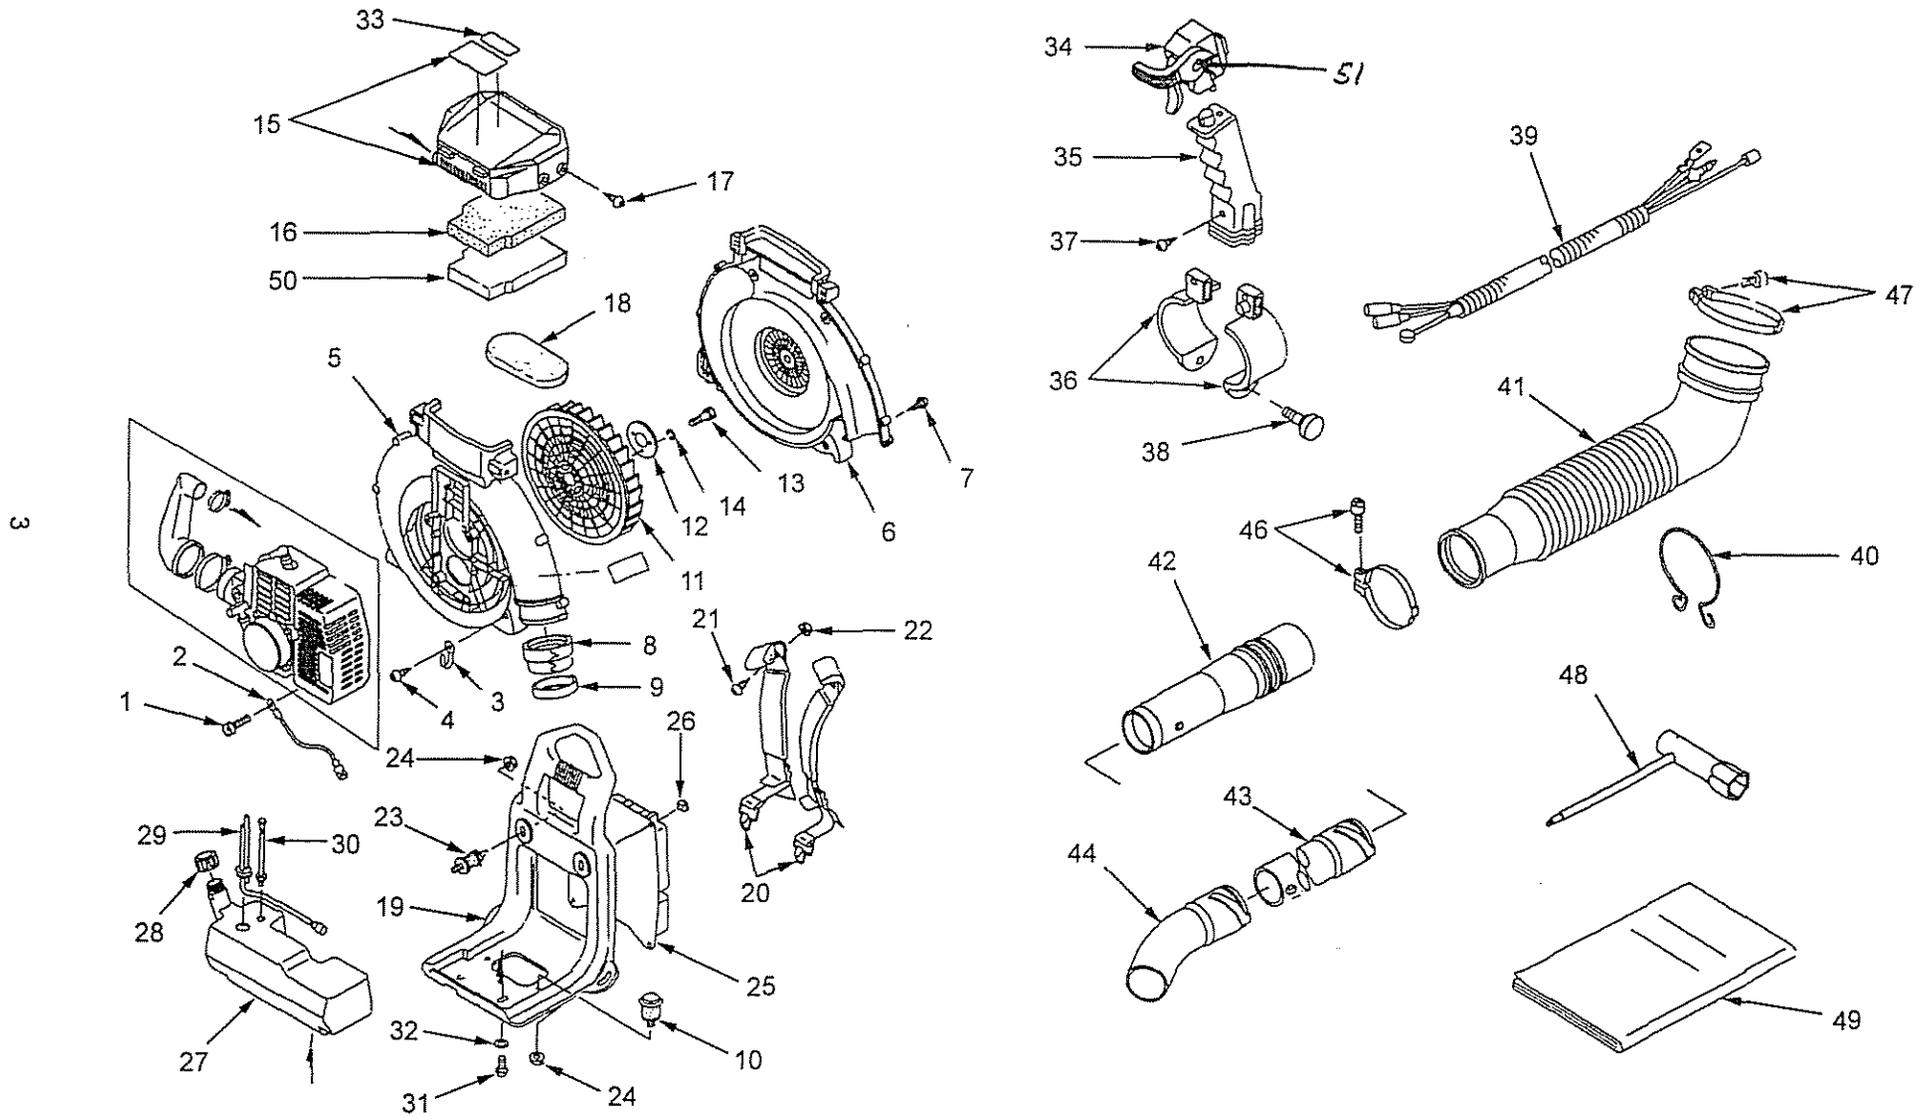

# BLOWER, LBB - 4400 BACKPACK BLOWER — PARTS LIST

Ref. LESCO		Description	No. Used	Ref. LESCO		Description	No. Used
No.	No.			No.	No.		
1	451038	Bolt, M6x30 .....	4	36	451071	Band Assembly .....	1
2	451039	Harness, Wire .....	1	37	451072	Screw, 5x20 .....	2
3	451040	Clamp .....	1	38	451073	Bolt, M6x30 .....	1
4	451041	Screw, 5x10 .....	1	39	451074	Wire Complete, Throttle .....	1
5	451042	Casing .....	1	40	451075	Clip .....	1
6	451043	Casing .....	1	41	451076	Pipe, Flexible .....	1
7	451044	Screw, 5x25 .....	11	42	451077	Pipe, Straight .....	1
8	451045	Slide .....	1	43	451078	Pipe, Straight .....	2
9	451046	Band .....	1	44	451079	Pipe, Curve .....	1
10	451047	Rubber .....	2	46	451081	Band Assembly .....	1
11	451048	Fan .....	1	47	451082	Band Assembly .....	1
12	451049	Plate .....	1	48	450119	Wrench, Spanner Box 19 .....	1
13	451050	Bolt, M6x40 .....	3	49	451083	Manual, Operator's .....	1
14	030148	Washer, Spring .....	3	50	451084	Element "B", Air Filter .....	1
15	451051	Silencer Assembly (Includes Ref. 16, 33, and 50) .....	1	51	451258	LEVER	
16	451052	Element "A", Air Filter .....	1				
17	451053	Screw, 6x15 .....	4				
18	451054	Sponge .....	1				
19	451055	Fram .....	1				
20	451056	Harness .....	2				
21	451057	Screw, M6x16 .....	2				
22	451058	Nut .....	2				
23	451059	Rubber .....	2				
24	451060	Nut .....	2				
25	451061	Custion .....	1				
26	451062	Fastener .....	4				
27	451063	Tank, Fuel .....	1				
28	450084	Cap Assembly, Fuel Tank .....	1				
29	451064	Filter, Assembly, Fuel .....	1				
30	451065	Valve Assembly, Reversing .....	1				
31	451066	Screw, M5x14 .....	2				
32	451067	Washer .....	2				
33	451068	Caution Plate .....	1				
34	451069	Lever, Throttle .....	1				
35	451070	Grip .....	1				

520-408-2000