



INSTRUCTION SHEET



Utility Vehicle

Electric Bed Lift

39A-126-100

39A-127-100

IMPORTANT: READ SAFETY RULES AND INSTRUCTIONS CAREFULLY

CUB CADET LLC P.O. BOX 361131 CLEVELAND, OHIO 44136-0019



INSTRUCTIONS FOR 6X4

Assembling Electric Bed Lift

- Raise hood to get access to under the dash panel.
- Remove electric switch plug in dash and place electric switch into dash hole. See Illustrated Parts.
- Plug switch into the yellow/white, orange, orange wires that already exist on the vehicle wire harness.
- Plug relays into sockets per label located beside relay box.
- Raise cargo box manually to upright position using the handle on the drivers side of box.
- Connect electric lift actuator to the rear frame assembly and cargo box frame with clevis pin and cotter pin. See Illustrated Parts.
- ******Connect the electric lift wire harness into the two-pin harness connector with red/yellow wires.
- ******Install the two relays to the wire harness, which is located above the battery. Relay location is shown on label beside relay box.
- ******Plug 30A fuse into the relay box where indicated on label. This is the last step of installation.
- ******Lower hood and secure hood to vehicle.

****Instructions for both 6x4 and 4x2**

Illustrated Parts

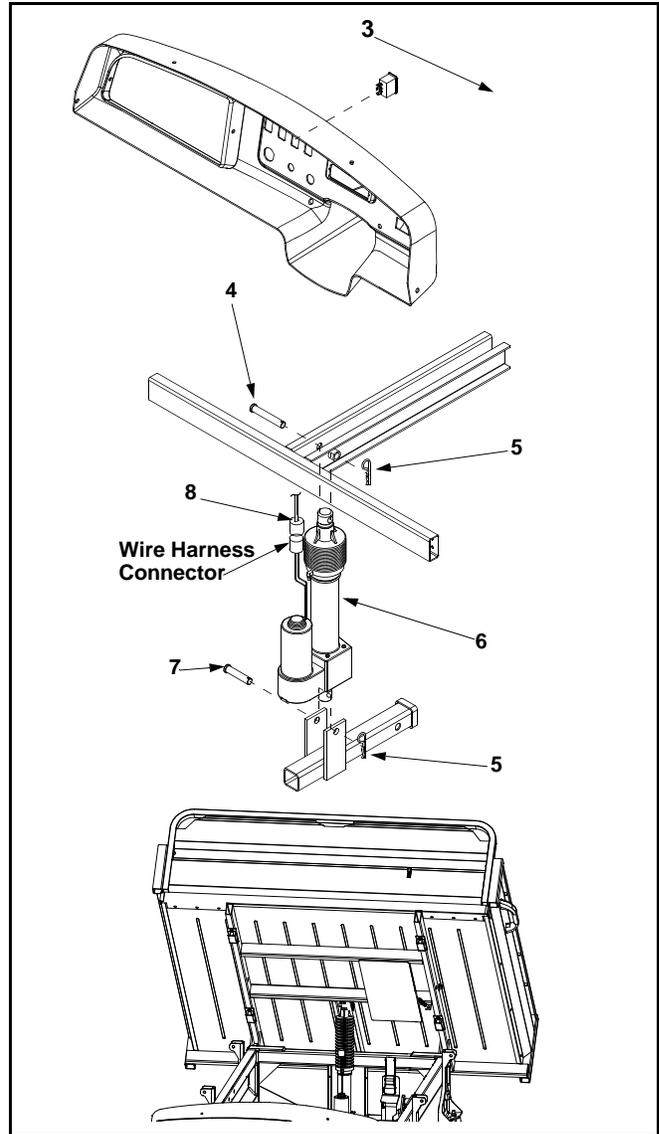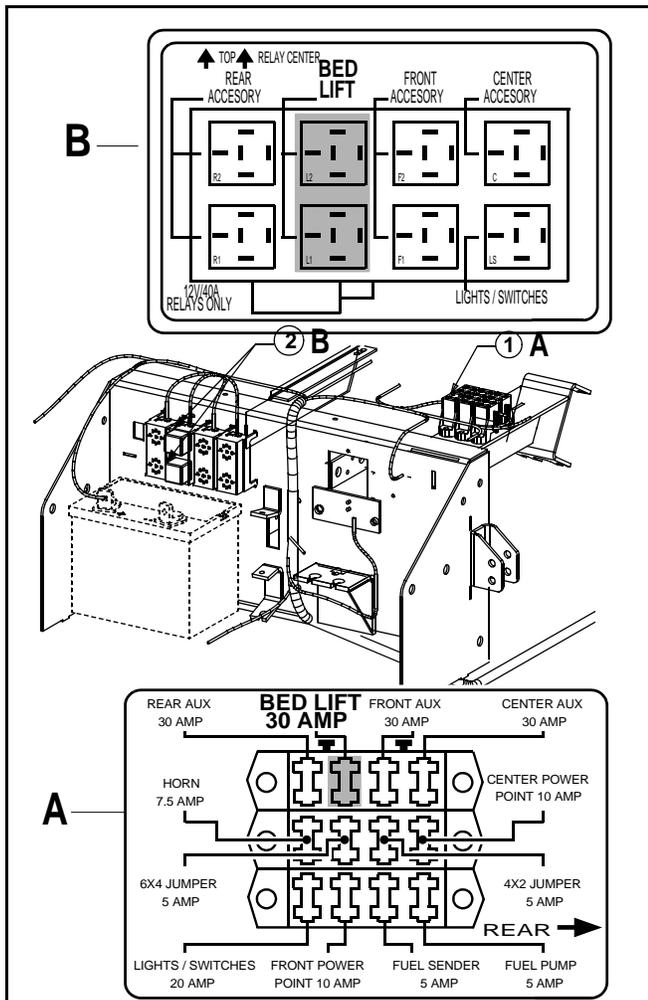

REF. NO.	PART NO.	QTY.	DESCRIPTION
1.	725-1543	1	Fuse 30 Amp
2.	725-1718	2	Relay 12V 40A (2)
3.	725-04012	1	Cargo Box Switch
4.	711-04006	1	Clevis Pin 3.0"
5.	714-04003	2	Internal Cotter Pin
6.	725-04077	1	Electric Lift Actuator
7.	711-04007	1	Clevis Pin 2.25"
8.	725-04078	1	Pigtail, Harness

INSTRUCTIONS FOR 4X2

Assembling Electric Bed Lift



39A-126-100 must be ordered with 39A-127-100.

- Raise cargo box manually to upright position using the handle on the drivers side of box.
- Connect electric lift actuator to the rear frame assembly and cargo box frame with clevis pins and cotter pins. See Illustrated Parts.
- Connect the electric lift wire harness into the two-pin harness connector with red/yellow wires.

- ******Connect the electric lift wire harness into the two-pin harness connector with red/yellow wires.
- ******Install the two relays to the wire harness, which is located above the battery. Relay location is shown on label beside relay box.
- ******Plug 30A fuse into the relay box where indicated on label. This is the last step of installation.
- ******Lower hood and secure hood to vehicle.

****Instructions for both 39A-126-100 and 39A-127-100**

Illustrated Parts

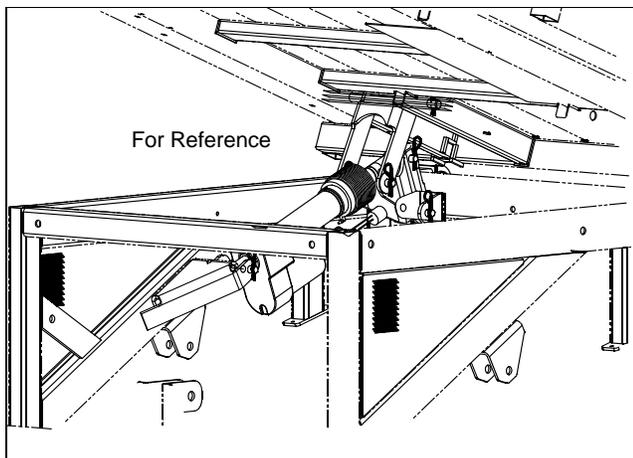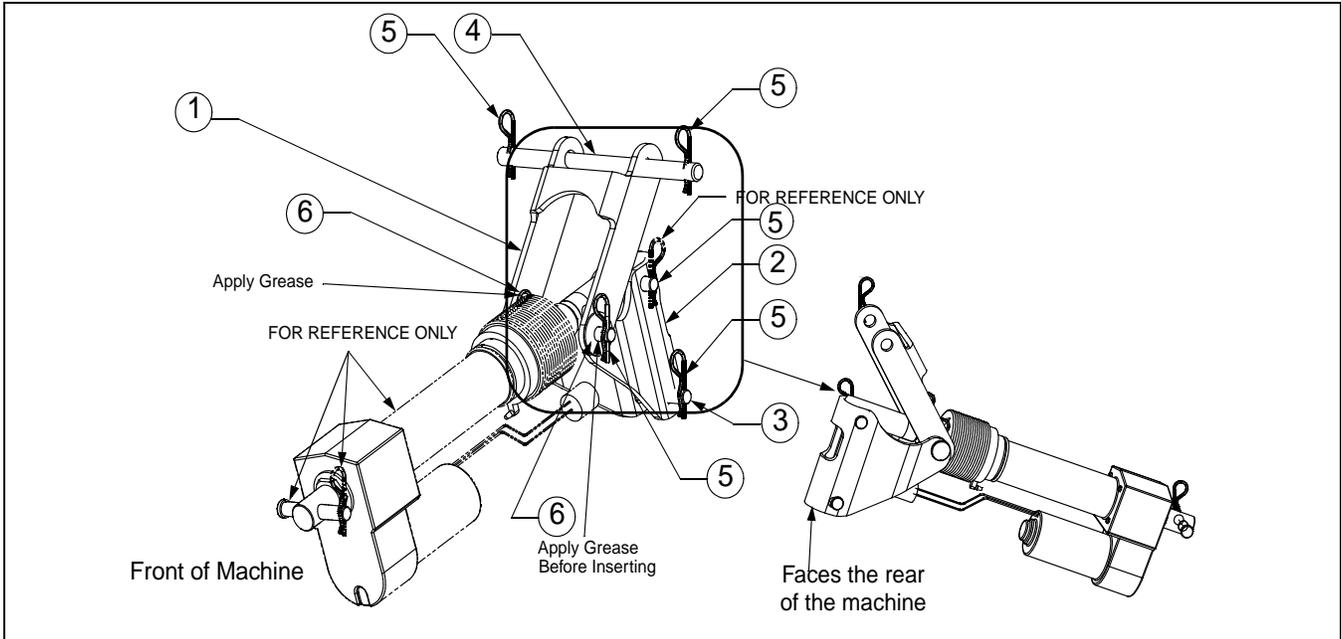

REF. NO.	PART NO.	QTY.	DESCRIPTION
1.	607-04036	1	Link Ass'y, Bed Lift
2.	707-04159	1	Link, Lift, Bed, Bottom
3.	711-04006	1	Clevis Pin.5 Dia x 3.0 LG
4.	711-04096	1	Rod, Mount .625 x 8.625
5.	714-04003	5	Internal Cotter Pin
6.	736-0208	2	Flat Washer,.51 ID x 1.5 OD x.07

Calling Customer Support

If you have difficulty assembling this product or have any questions regarding the controls, operation or maintenance of this unit, please call the Customer Dealer Referral Line. Call **1-877-282-8684** to reach the Customer Dealer Referral Line. Please have your unit's model number and serial number ready when you call.