

This Manual Must be Read Before Operating The Equipment

Owner/Operator's Manual



FOR MODEL

LES-TL80 Serial # and higher
LES-TL80SS Serial # and higher




CUSTOMER COPY

1301 East 9th Street, Suite 1300
Cleveland, Ohio 44114
Toll Free (800) 321-5325


Assembly Views

LES-TL80/LES-TL80SS

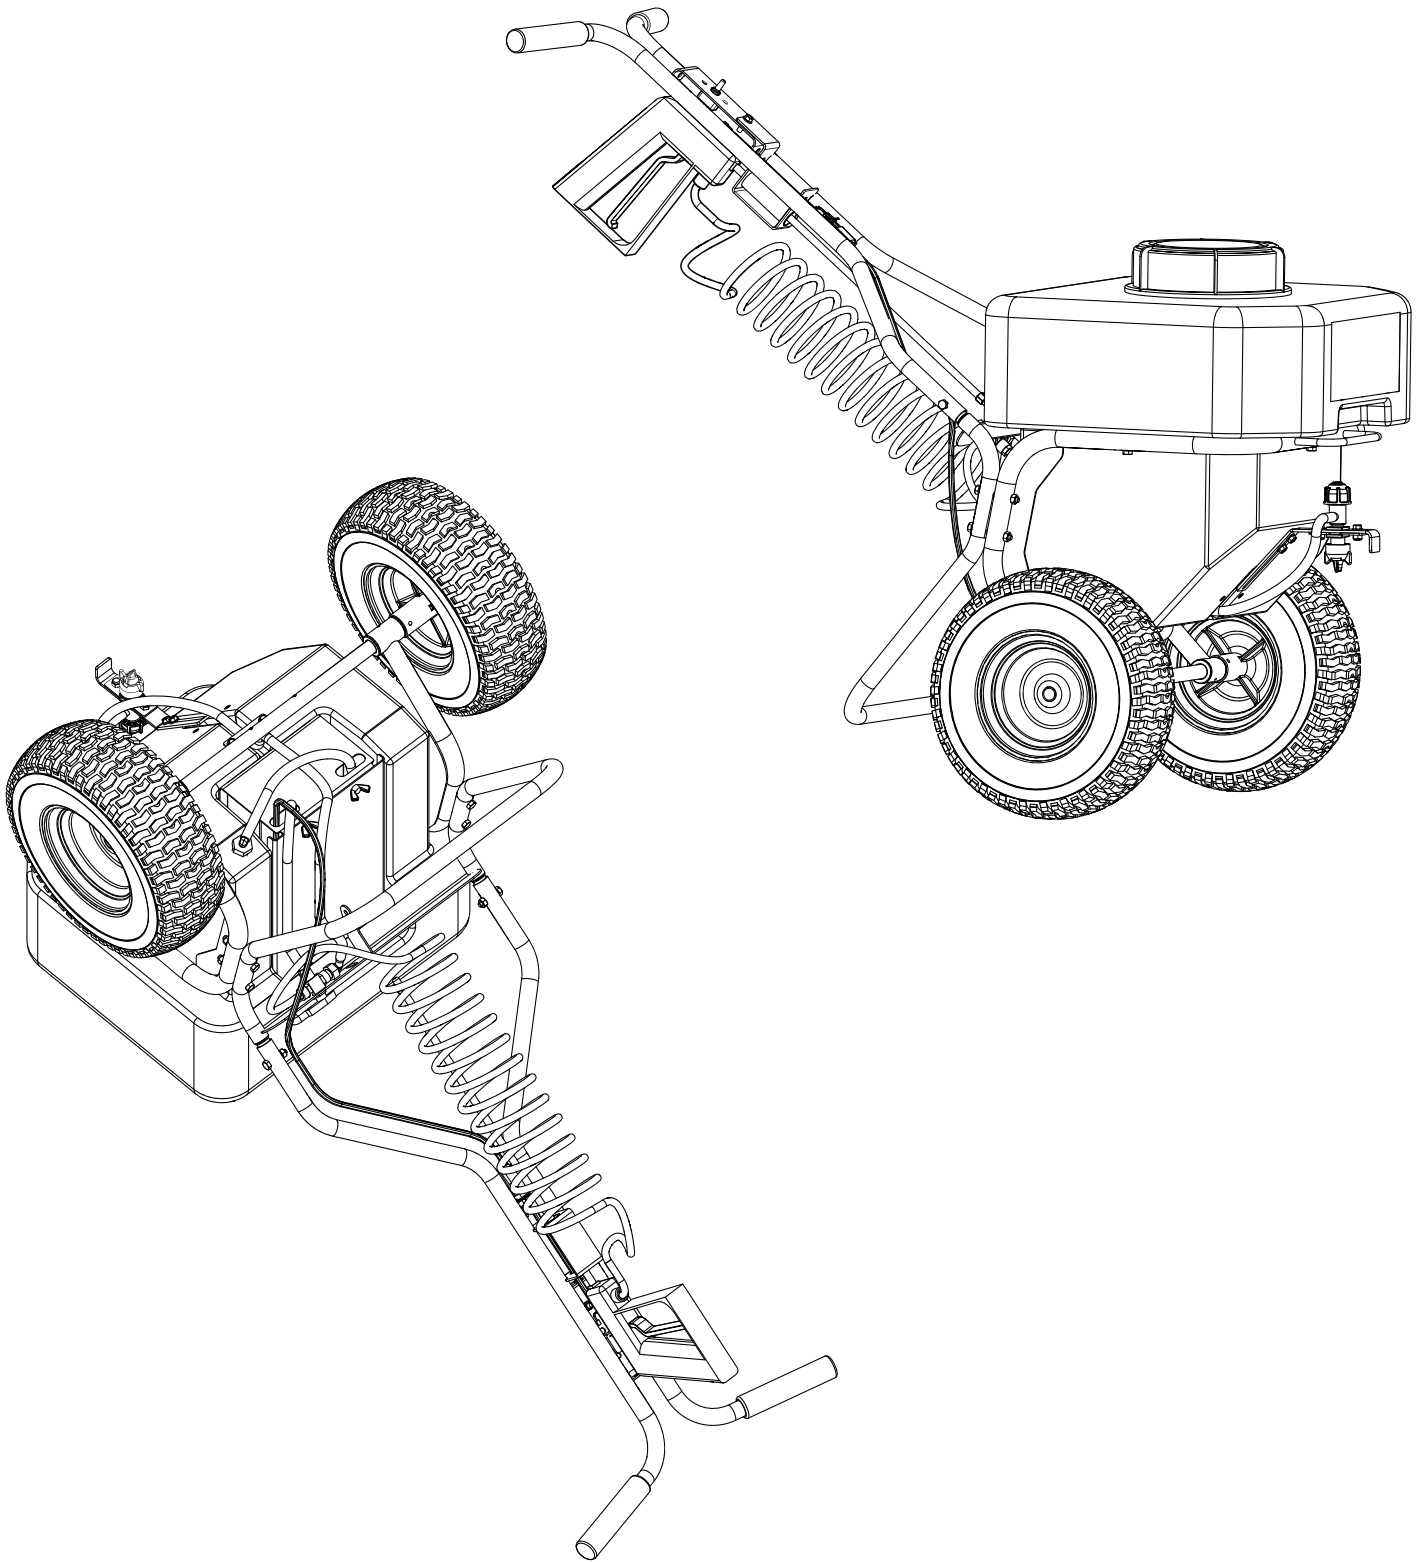


Handle Assembly Parts Breakdown

Model # LES-TL80

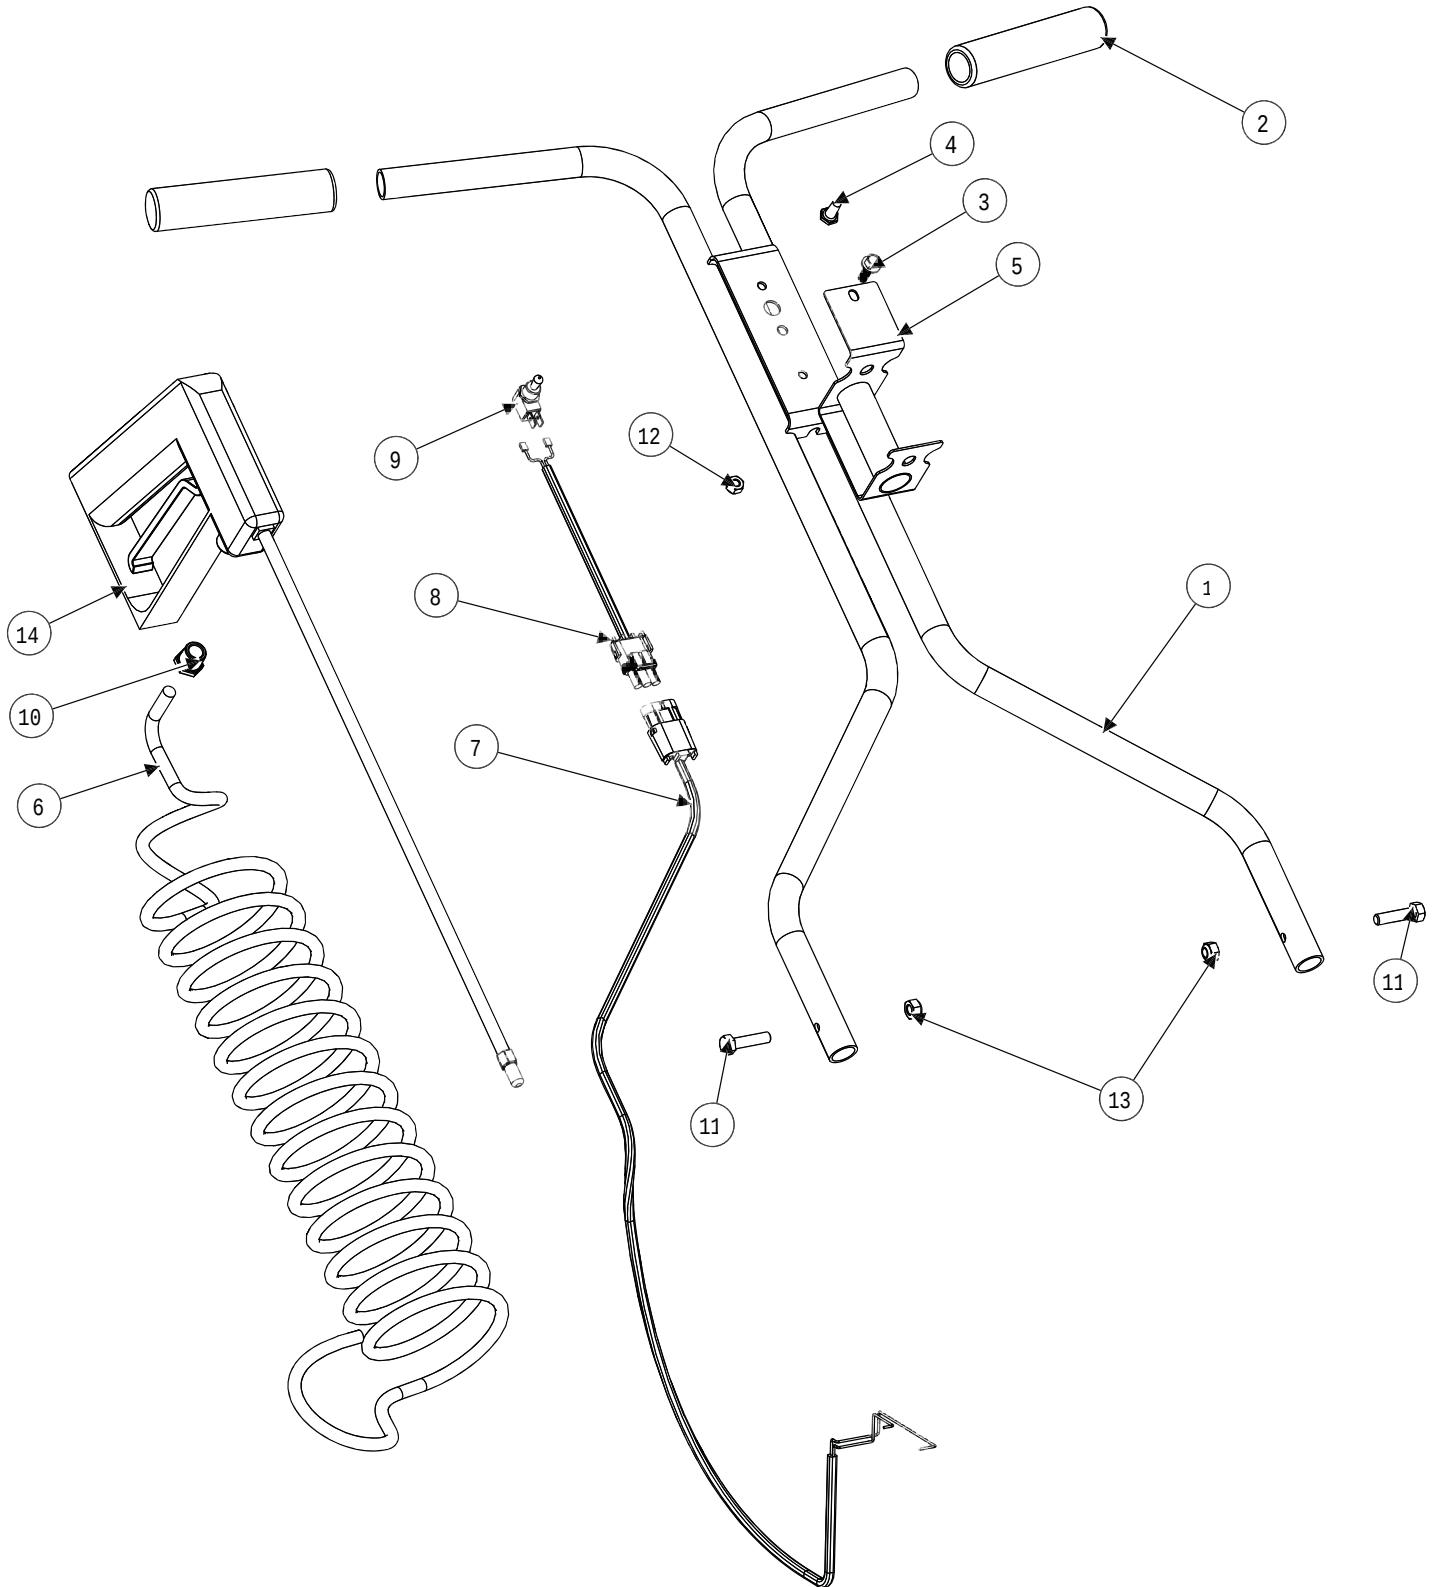

Handle Assembly Parts Breakdown


Model # Les-TL80

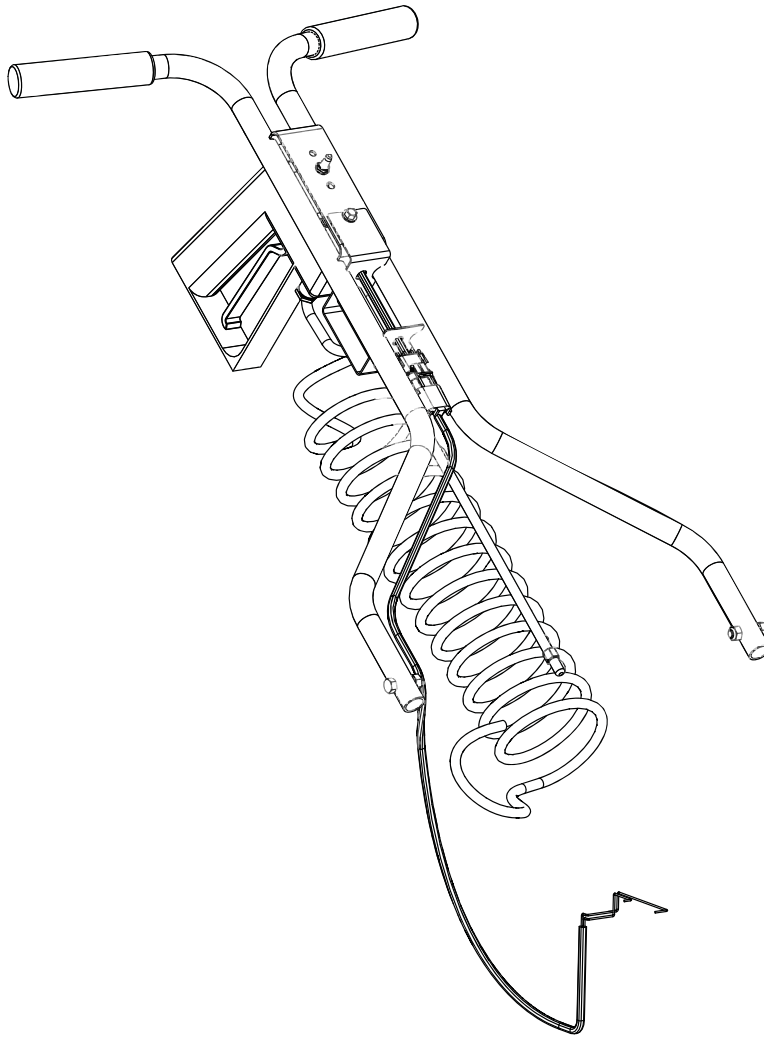

ID #	Part #	Description	Qty
1	D5908	Push Spreader Handle	1
2	D5917	Handle Grip 7/8" X 5-1/2"	2
3	D6132	Bolt 1/4"-20 X 3/4" Serrated Flange Stainless	1
4	D6406	Rubber Switch Boot	1
5	F50001	Wand Holder Bracket	1
6	F50008	Coil Hose 1/4" X 10'	1
7	F50016	Harness Push Sprayer Pump	1
8	F50106	Harness Push Sprayer Switch	1
9	F50107	Switch SPST Side Terminals	1
10	F50111	Reducing Bushing 3/8" X 1/4" Brass	1
11	F50112	Bolt 5/16"-18 X 1-1/4" Hex Head Stainless	2
12	T15016	Nut 1/4"-20 Nylox Waxed Stainless	1
13	T15018	Nut 5/16"-18 Nylox Waxed Stainless	2
14	T20307	Spot Spray Wand	1


Tank Assembly Parts Breakdown

Model # LES-TL80

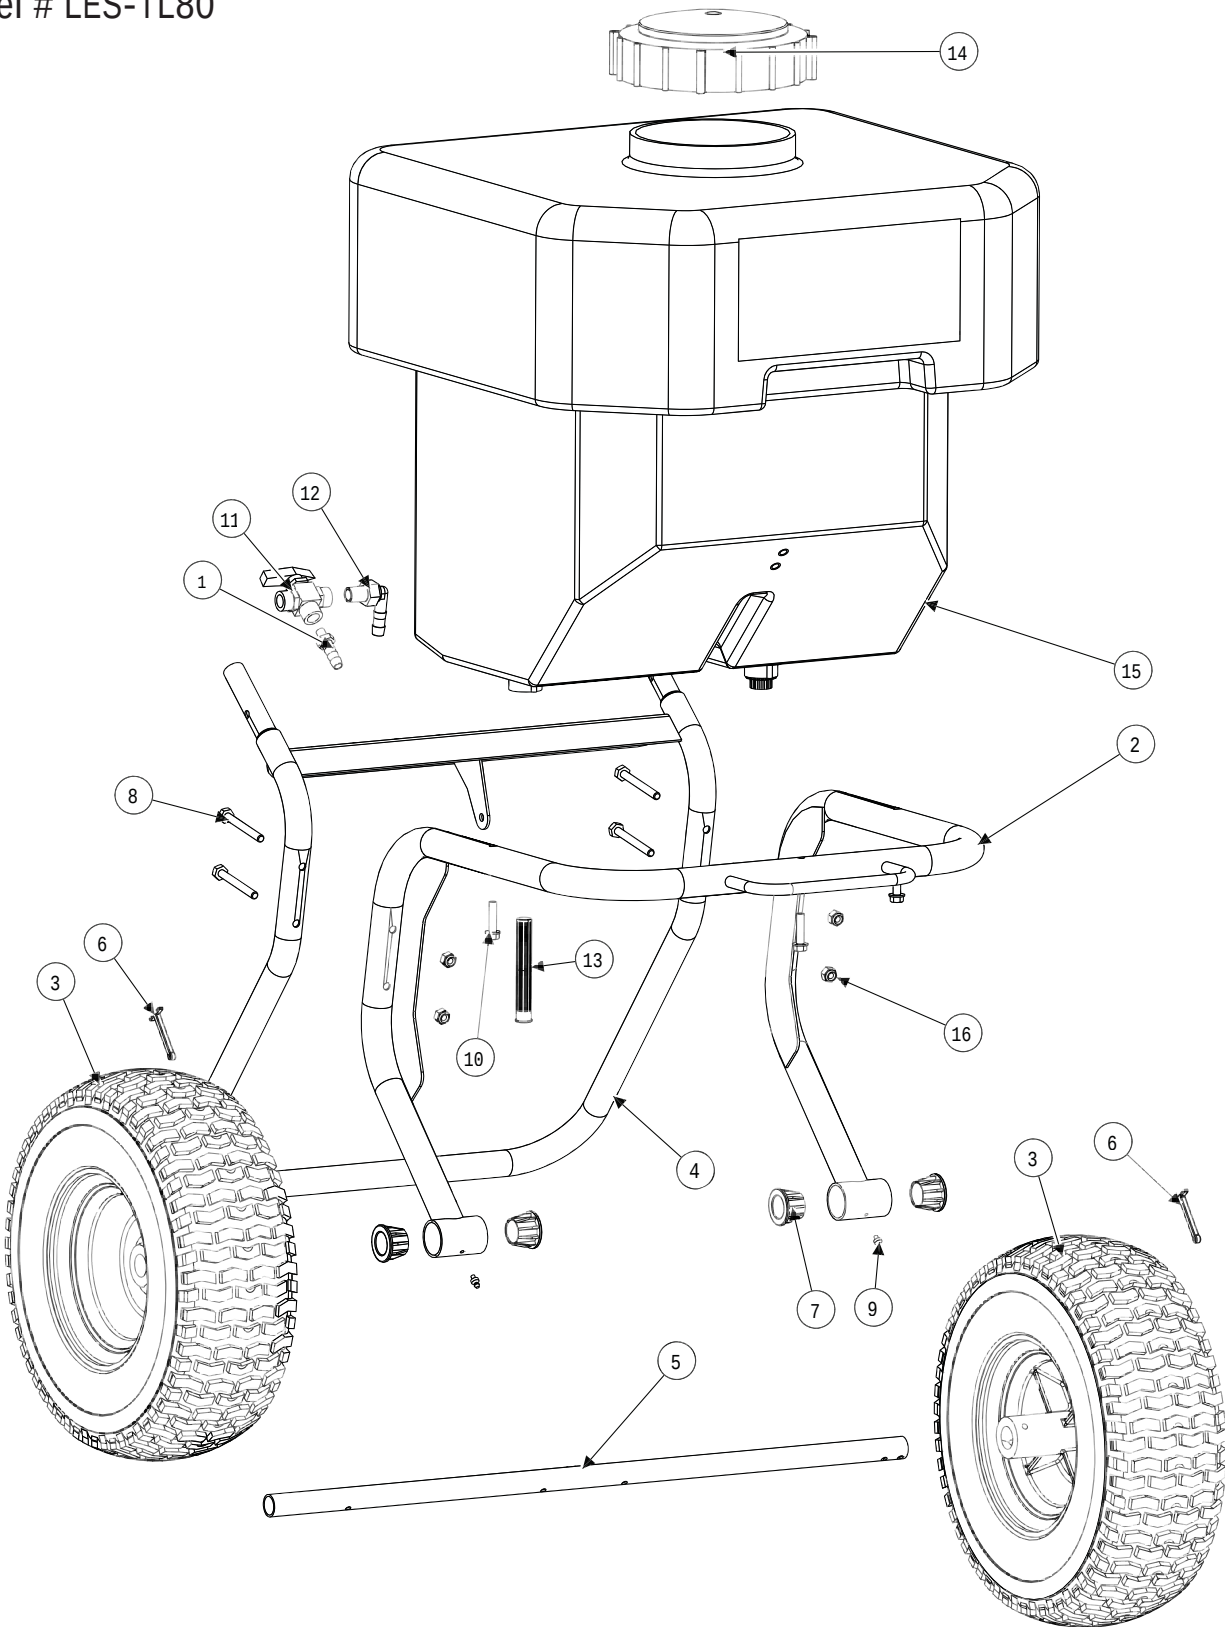

Tank Assembly Parts Breakdown


Model # LES-TL80

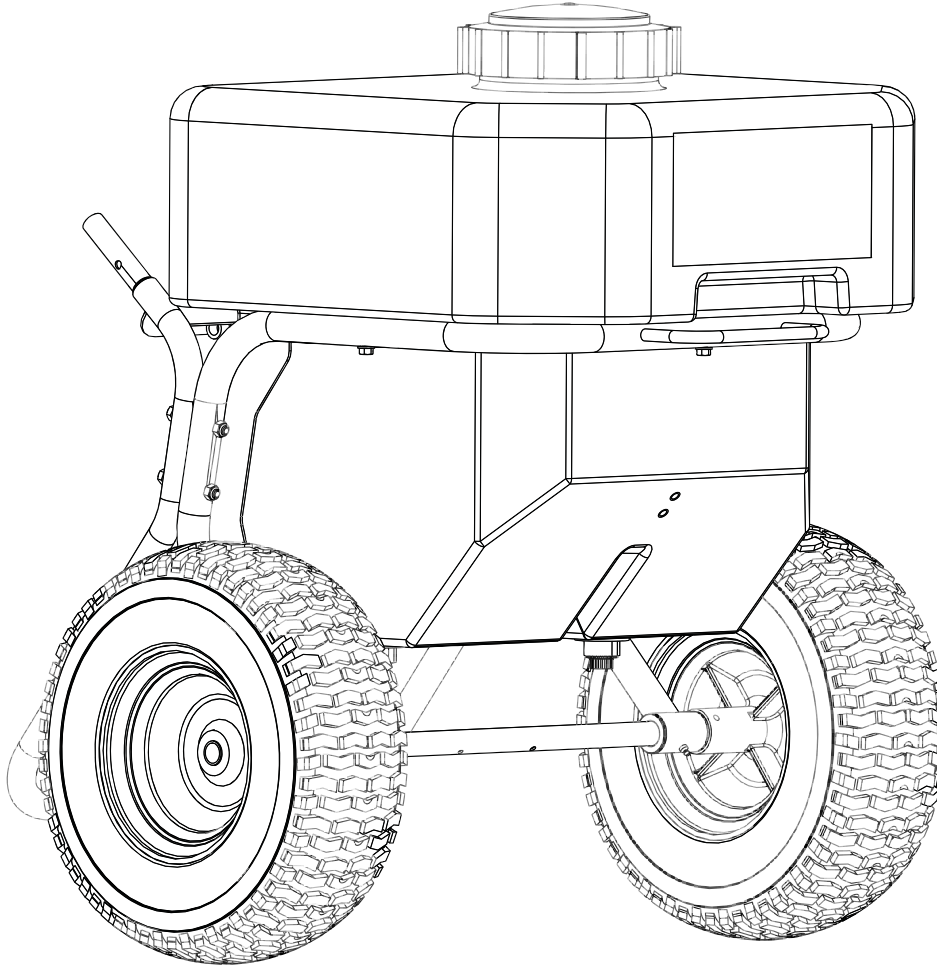

ID #	Part #	Description	Qty
1	D5381	Hose Barb 1/4" Male Thread X 3/8"	1
2	D5901	Hopper Frame 2.0 CU. FT Push Spreader	1
3	D5904	Wheel 13" X 5"	2
4	D5906	Frame Stand	1
5	D5915	Axle 3/4" Dia X 24.3"LG Stainless	1
6	D5919	Cotter Pin 3/16" X 2" Stainless	2
7	D5923	Wheel Bushing Nylon	4
8	D5943	Bolt 1/4"-20 X 2-1/4"LG Hex Head Stainless	4
9	D5994	Grease Fitting Straight 1/8" Drive Zinc	2
10	D6854	Bolt 1/4"-20 X 1" Serrated Flange Stainless	3
11	F50011	3-Way Panel Mount Valve	1
12	F50013	Hose Barb 1/4" Male Thread X 3/8" 90 Degree	1
13	F50108	Tank Strainer	1
14	F50487	6 Inch Lid With Vented Gasket	1
15	F50558	Tank 12 Gallon Lesco Gray	1
16	T15016	Nut 1/4"-20 Nylox Waxed Stainless	4

Pump Assembly Parts Breakdown


Model # LES-TL80

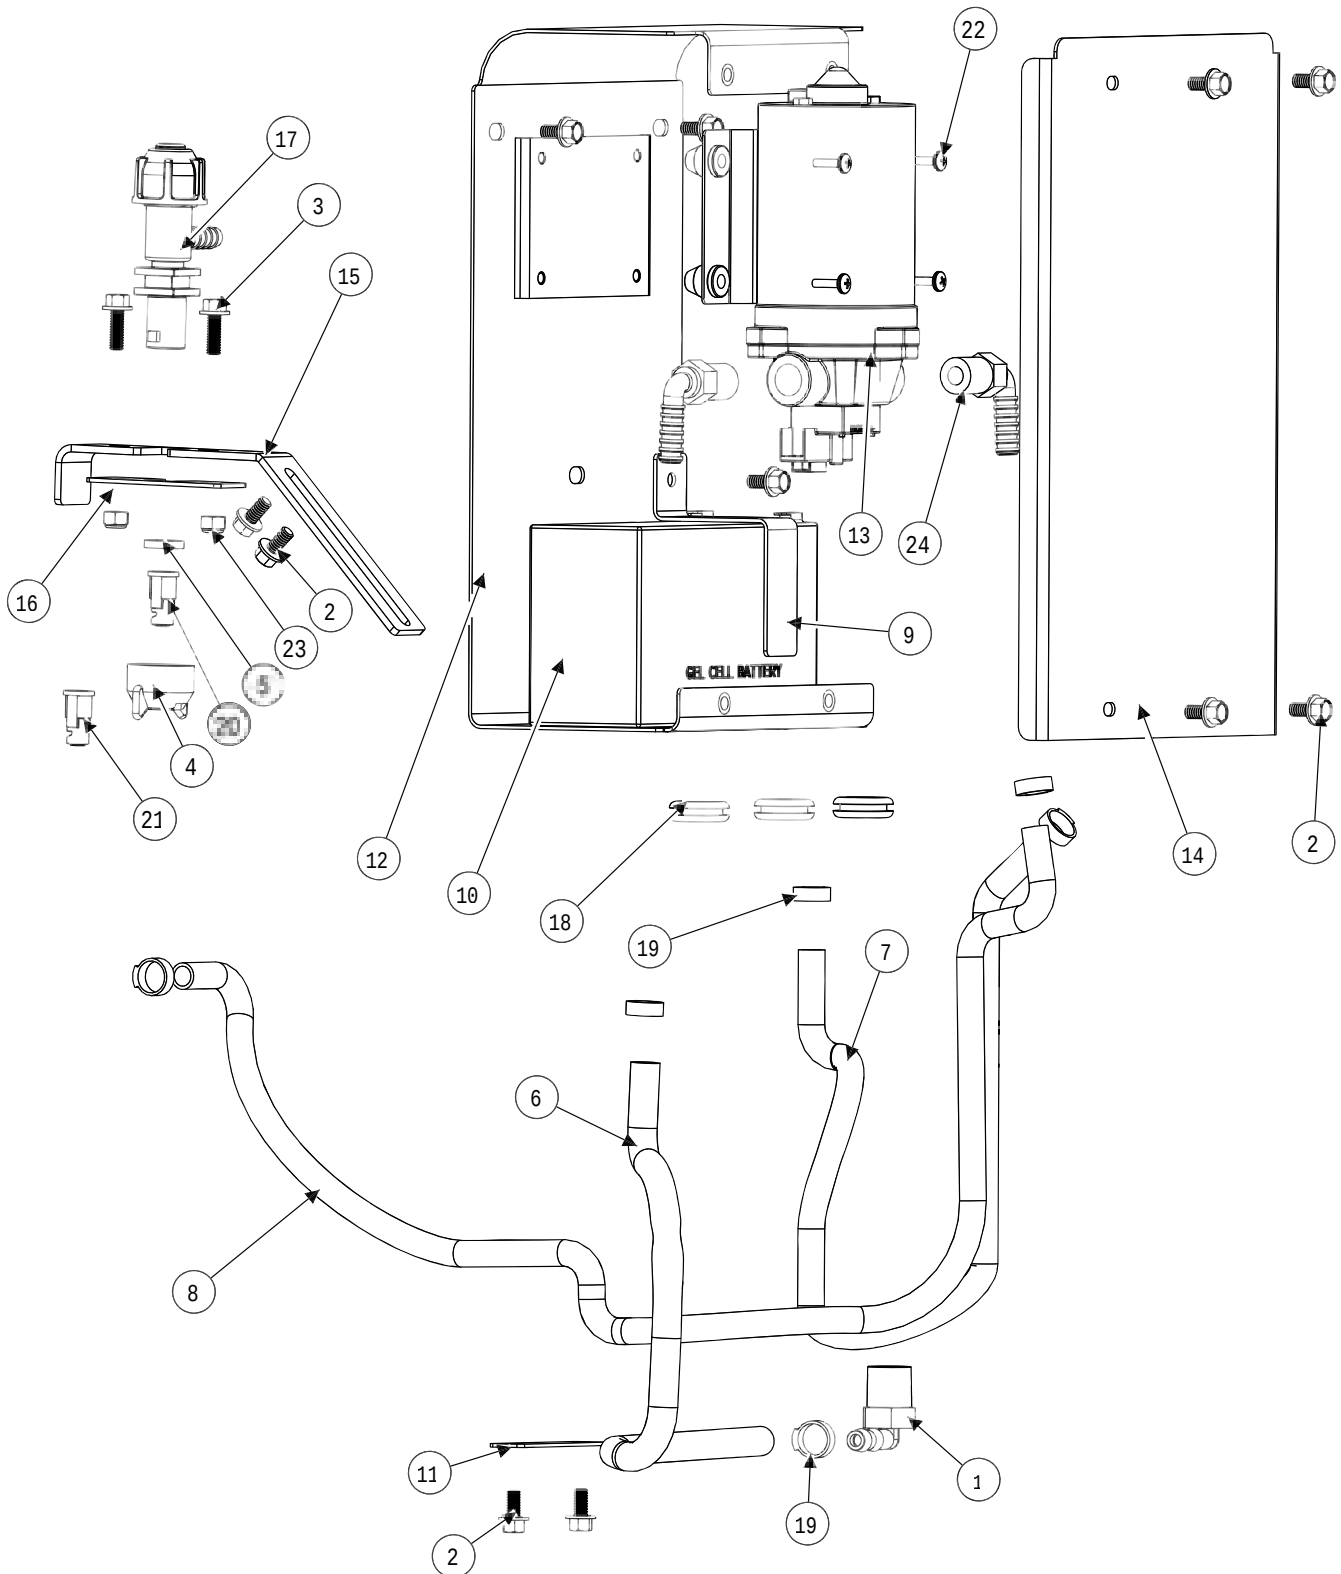

Pump Assembly Parts Breakdown

Model # LES-TL80


F50078 - 12 Volt Battery Charger

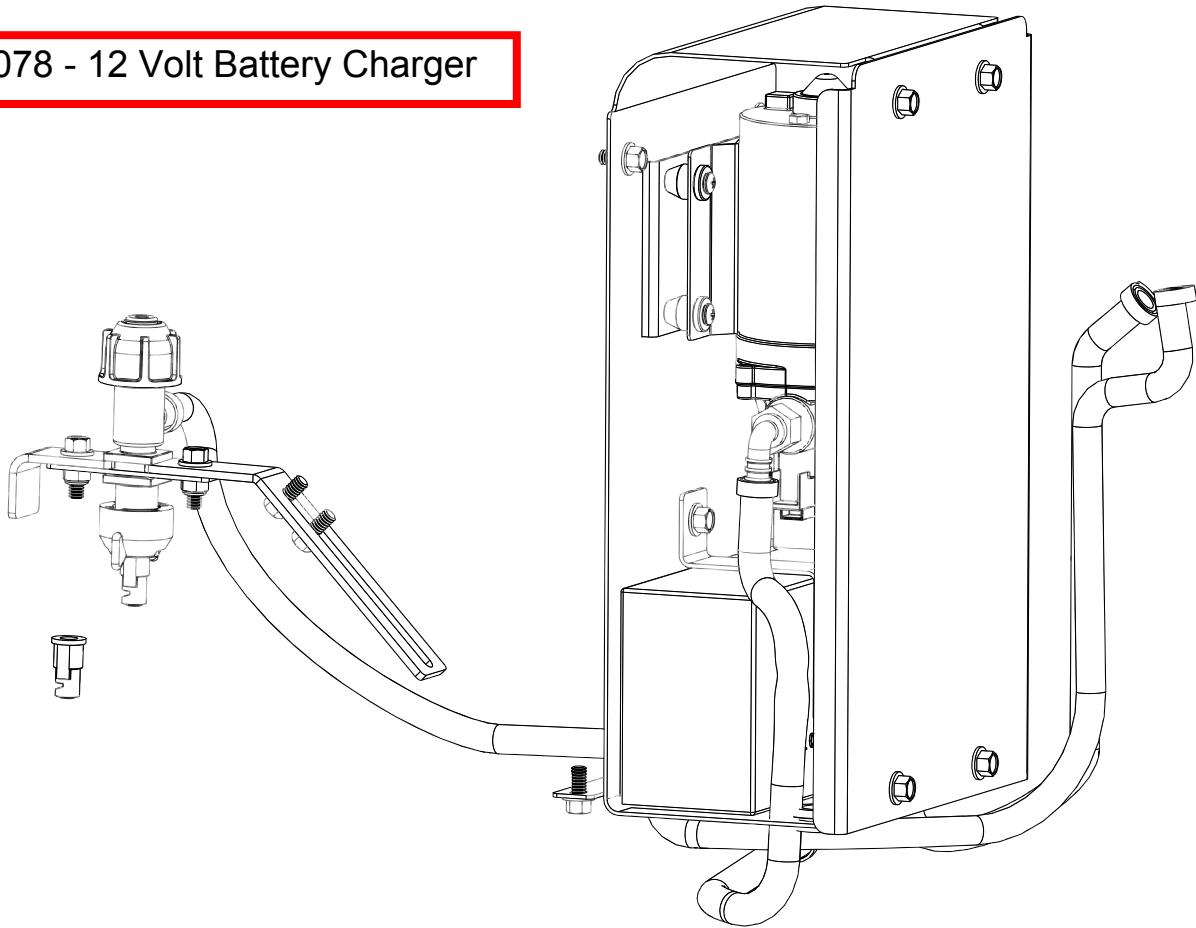

ID #	Part #	Description	Qty
1	D5377	Hose Barb 1/2" Male Thread X 3/8" 90°	1
2	D6131	Bolt 1/4"-20 X 1/2" Serrated Flange Stainless	11
3	D6132	1/4"-20 X 3/4" SERR. FLANGE STAINLESS	2
4	D6957	Spray Tip Cap Green Nylon	1
5	D6961	Nozzle Seat Gasket	1
6	D6988-16.5	Hose 3/8" X 16.5" PVC Clear	1
7	D6988-19.5	Hose 3/8" X 19.5" PVC Clear	1
8	D6988-32	Hose 3/8" X 32" PVC Clear	1
9	F50000	Battery Hold Down Bracket	1
10	F50002	Battery Lead Acid 7.2 Amp Hour	1
11	F50003	Hose Guide Bracket	1
12	F50004	Pump Mount Enclosure	1
13	F50005	Pump 1.0 GPM Diaphragm	1
14	F50006	Pump Enclosure Cover	1
15	F50007	Inside Nozzle Body Bracket	1
16	F50012	Nozzle Body Clamp	1
17	F50015	Nozzle Body Hose Barb 3/8"	1
18	F50109	Rubber Grommet 5/8"	3
19	F50145	Hose Clamp Double Tooth Poly 1/2"	6
20	F50461	Spray Nozzle 0.8 GPM Broadcast Polymer	1
21	F50462	Spray Nozzle 0.6 GPM Broadcast Polymer	1
22	F50548	Screw #10-32 X 5/8" Phil Pan MS Stainless	4
23	T15016	Nut 1/4"-20 Nylox Waxed Stainless	2
24	T20117	Hose Barb 3/8" Male Thread X 3/8 90°	2


Handle Assembly Parts Breakdown

Model # LES-TL80SS

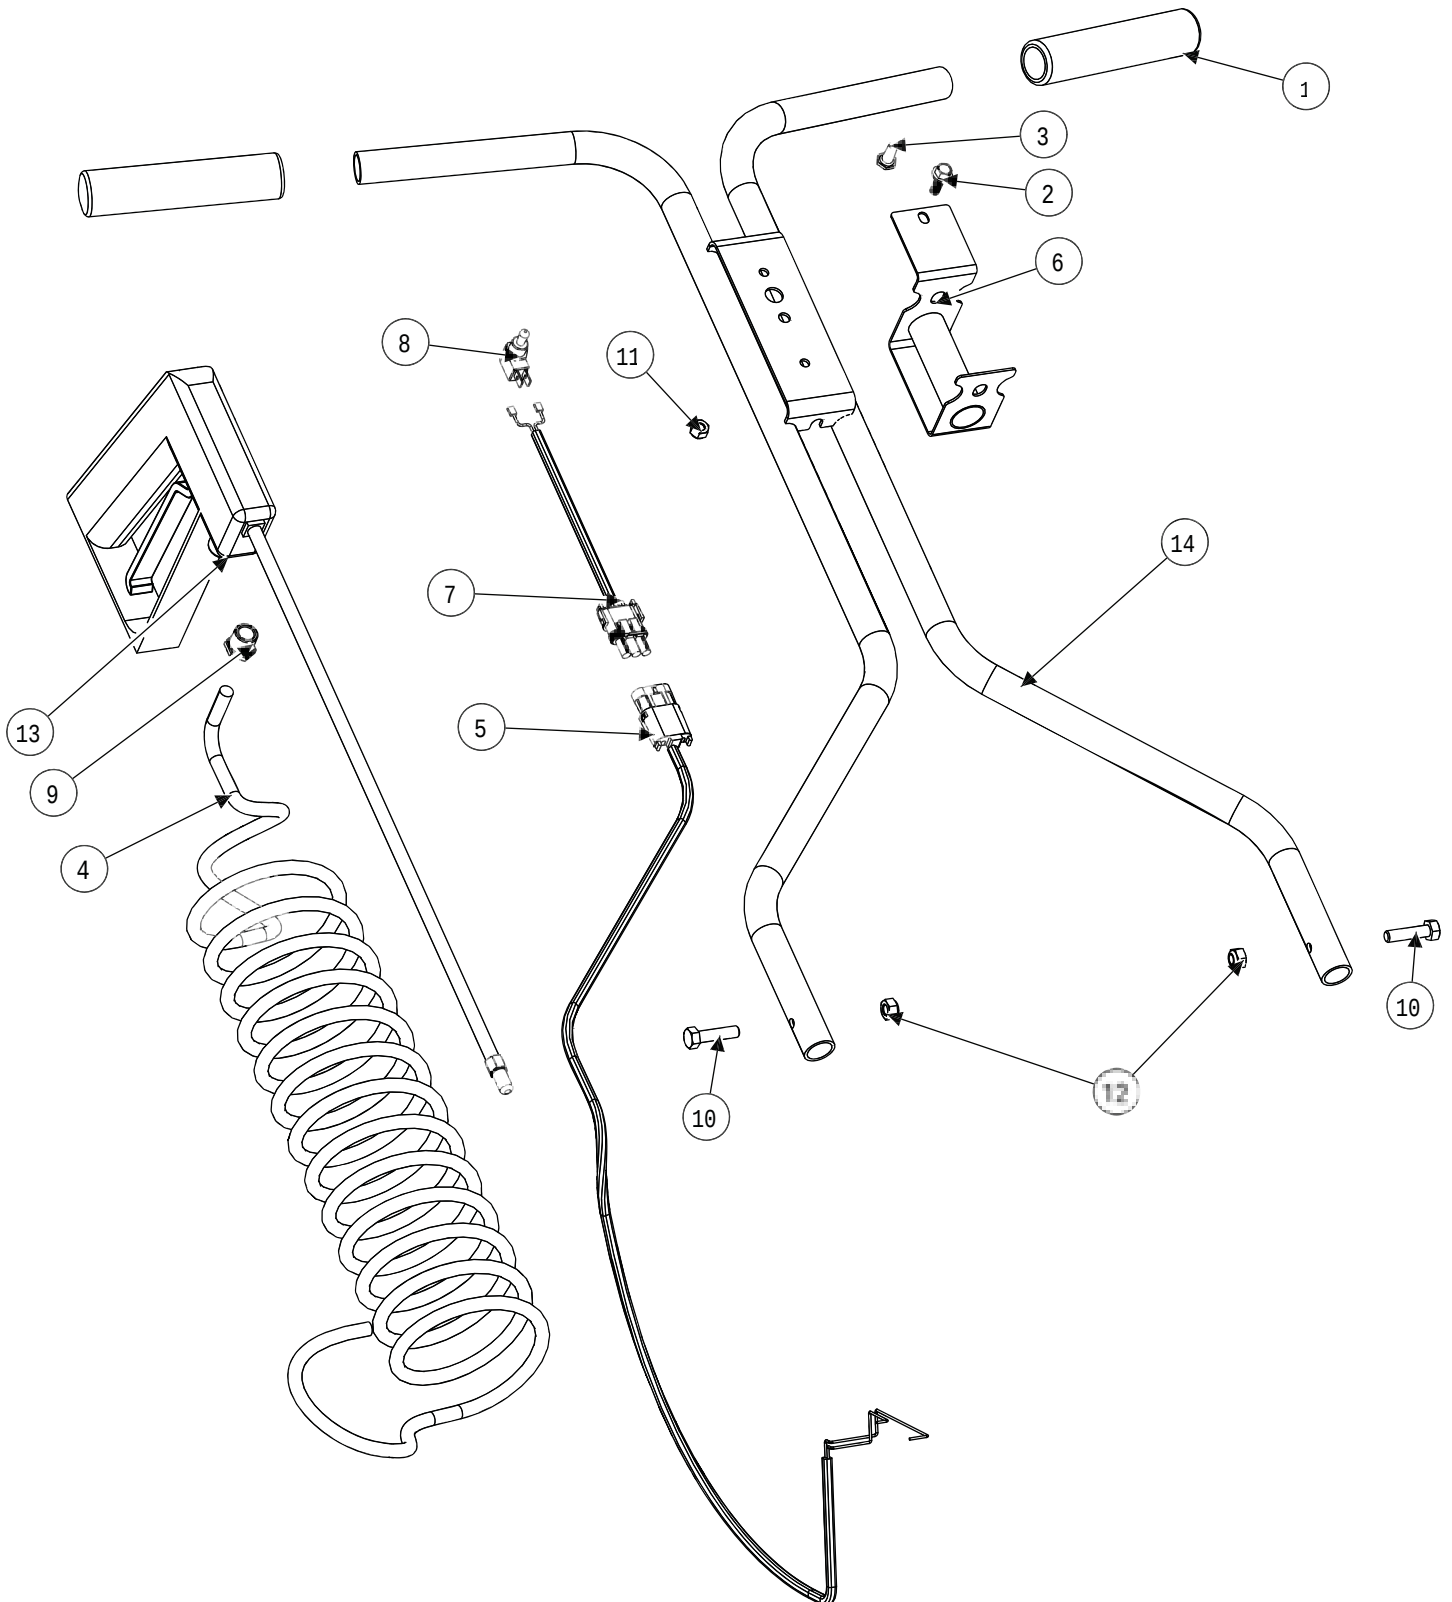

Handle Assembly Parts Breakdown


Model # LES-TL80SS

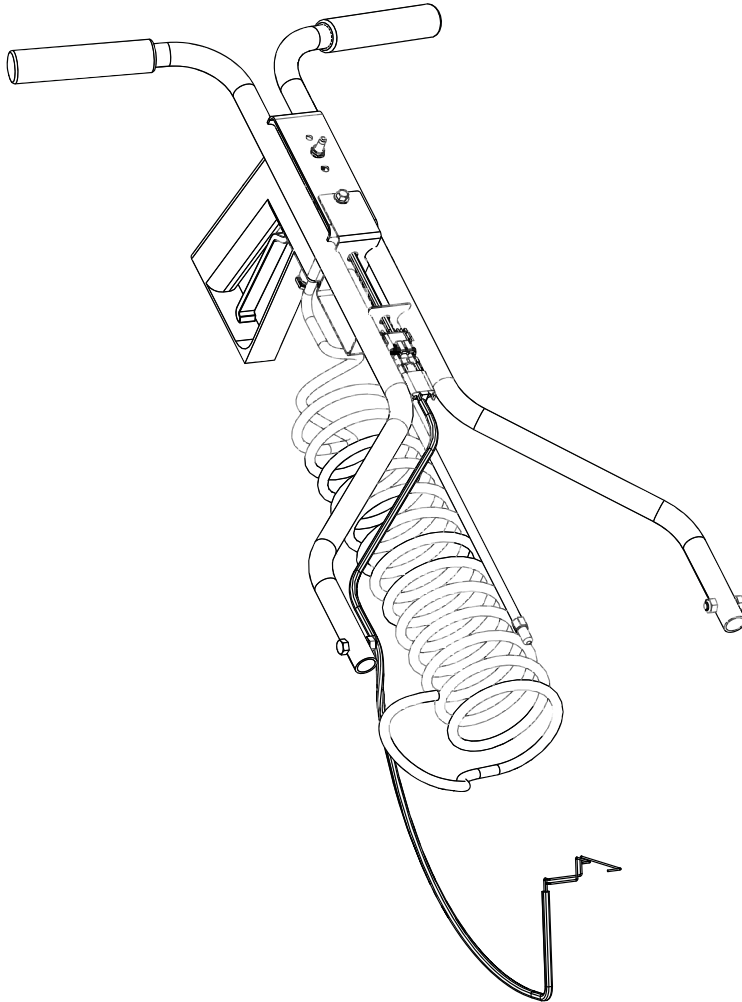

ID #	Part #	Description	Qty
1	D5917	Handle Grip 7/8" X 5-1/2"	2
2	D6132	Bolt 1/4"-20 X 3/4" Serrated Flange Stainless	1
3	D6406	Rubber Switch Boot	1
4	F50008	Coil Hose 1/4" X 10'	1
5	F50016	Harness Push Sprayer Pump	1
6	F50020	Wand Holder Bracket Stainless	1
7	F50106	Harness Push Sprayer Switch	1
8	F50107	Switch SPST Side Terminals	1
9	F50111	Reducing Bushing 3/8" X 1/4" Brass	1
10	F50112	Bolt 5/16"-18 X 1-1/4" Hex Head Stainless	2
11	T15016	Nut 1/4"-20 Nylox Waxed Stainless	1
12	T15018	Nut 5/16"-18 Nylox Waxed Stainless	2
13	T20307	Spot Spray Wand	1
14	T30153	Push Spreader Handle Stainless	1


Tank Assembly Parts Breakdown

Model # LES-TL80SS

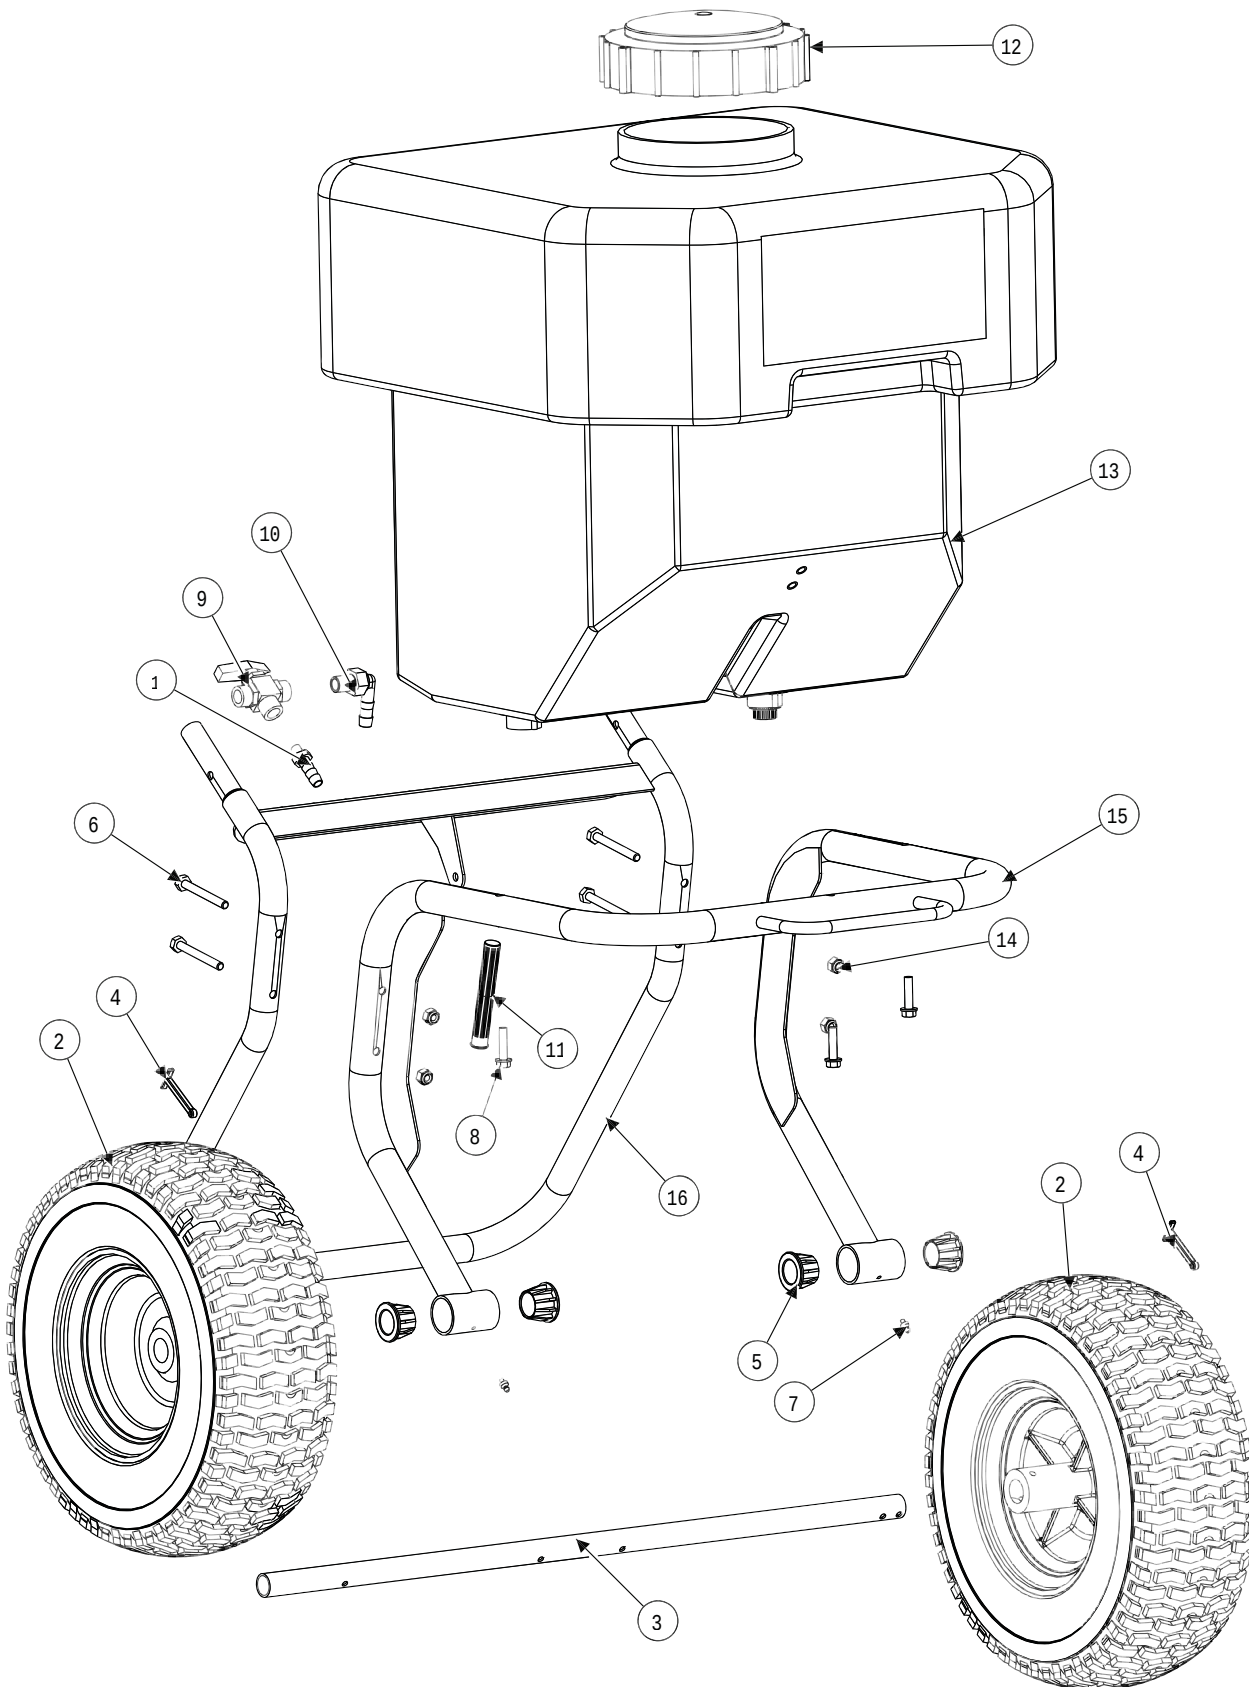

Tank Assembly Parts Breakdown


Model # LES-TL80SS

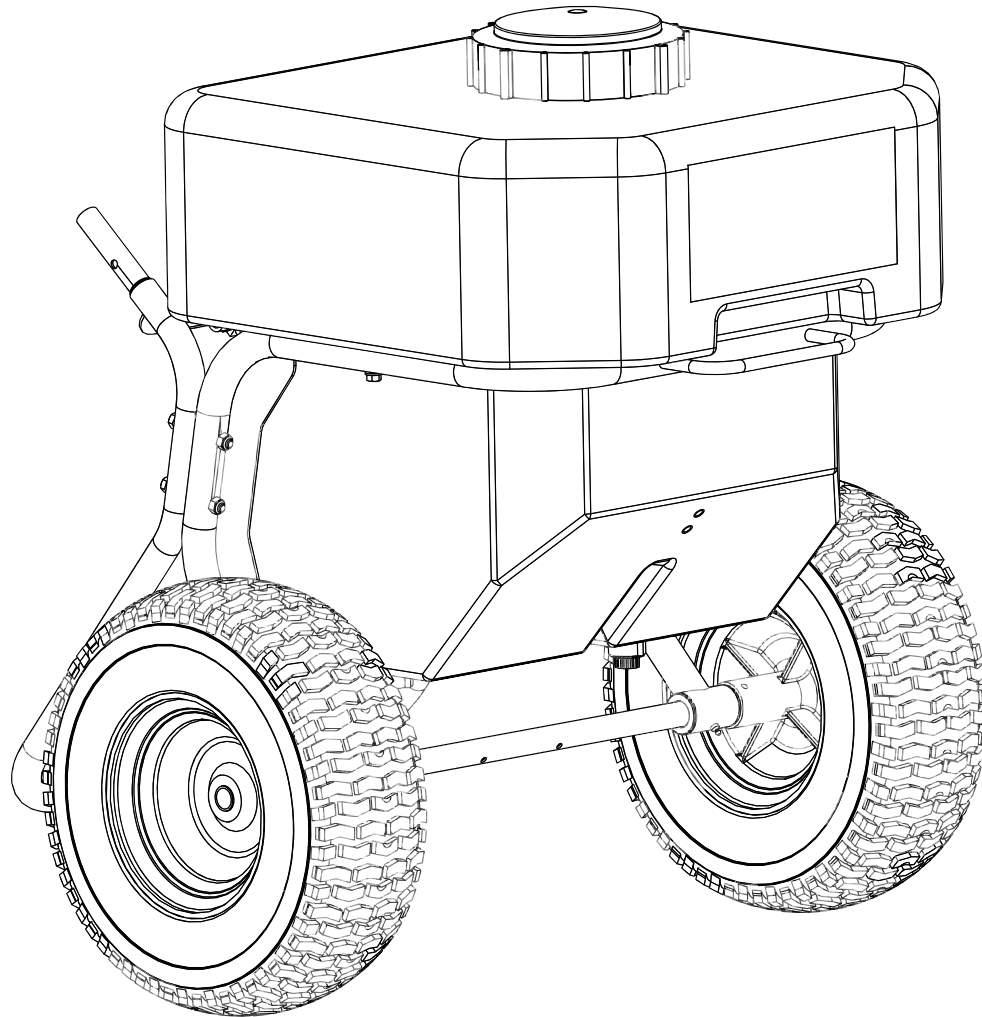

ID #	Part #	Description	Qty
1	D5381	Hose Barb 1/4" Male Thread X 3/8"	1
2	D5904	Wheel 13"X 5"	2
3	D5915	Axle 3/4" X 24.3" STAINLESS	1
4	D5919	Cotter Pin 3/16" X 2" Stainless	2
5	D5923	Wheel Bushing Nylon	4
6	D5943	Bolt 1/4"-20 X 2-1/4" Hex Head Stainless	4
7	D5994	Grease Fitting Straight 1/8" Drive Zinc	2
8	D6854	Bolt 1/4"-20 X 1" Serrated Flange Stainless	3
9	F50011	3-Way Panel Mount Valve	1
10	F50013	Hose Barb 1/4" Male Thread X 3/8" 90 Degree	1
11	F50108	Tank Strainer	1
12	F50487	6 Inch Lid With Vented Gasket	1
13	F50558	Tank 12 Gallon Lesco Gray	1
14	T15016	Nut 1/4"-20 Nylox Waxed Stainless	4
15	T30151	Hopper Frame 2.0 Cu. Ft. Pushspreader Stainless	1
16	T30152	Frame Stand Stainless	1


Pump Assembly Parts Breakdown

Model # LES-TL80SS

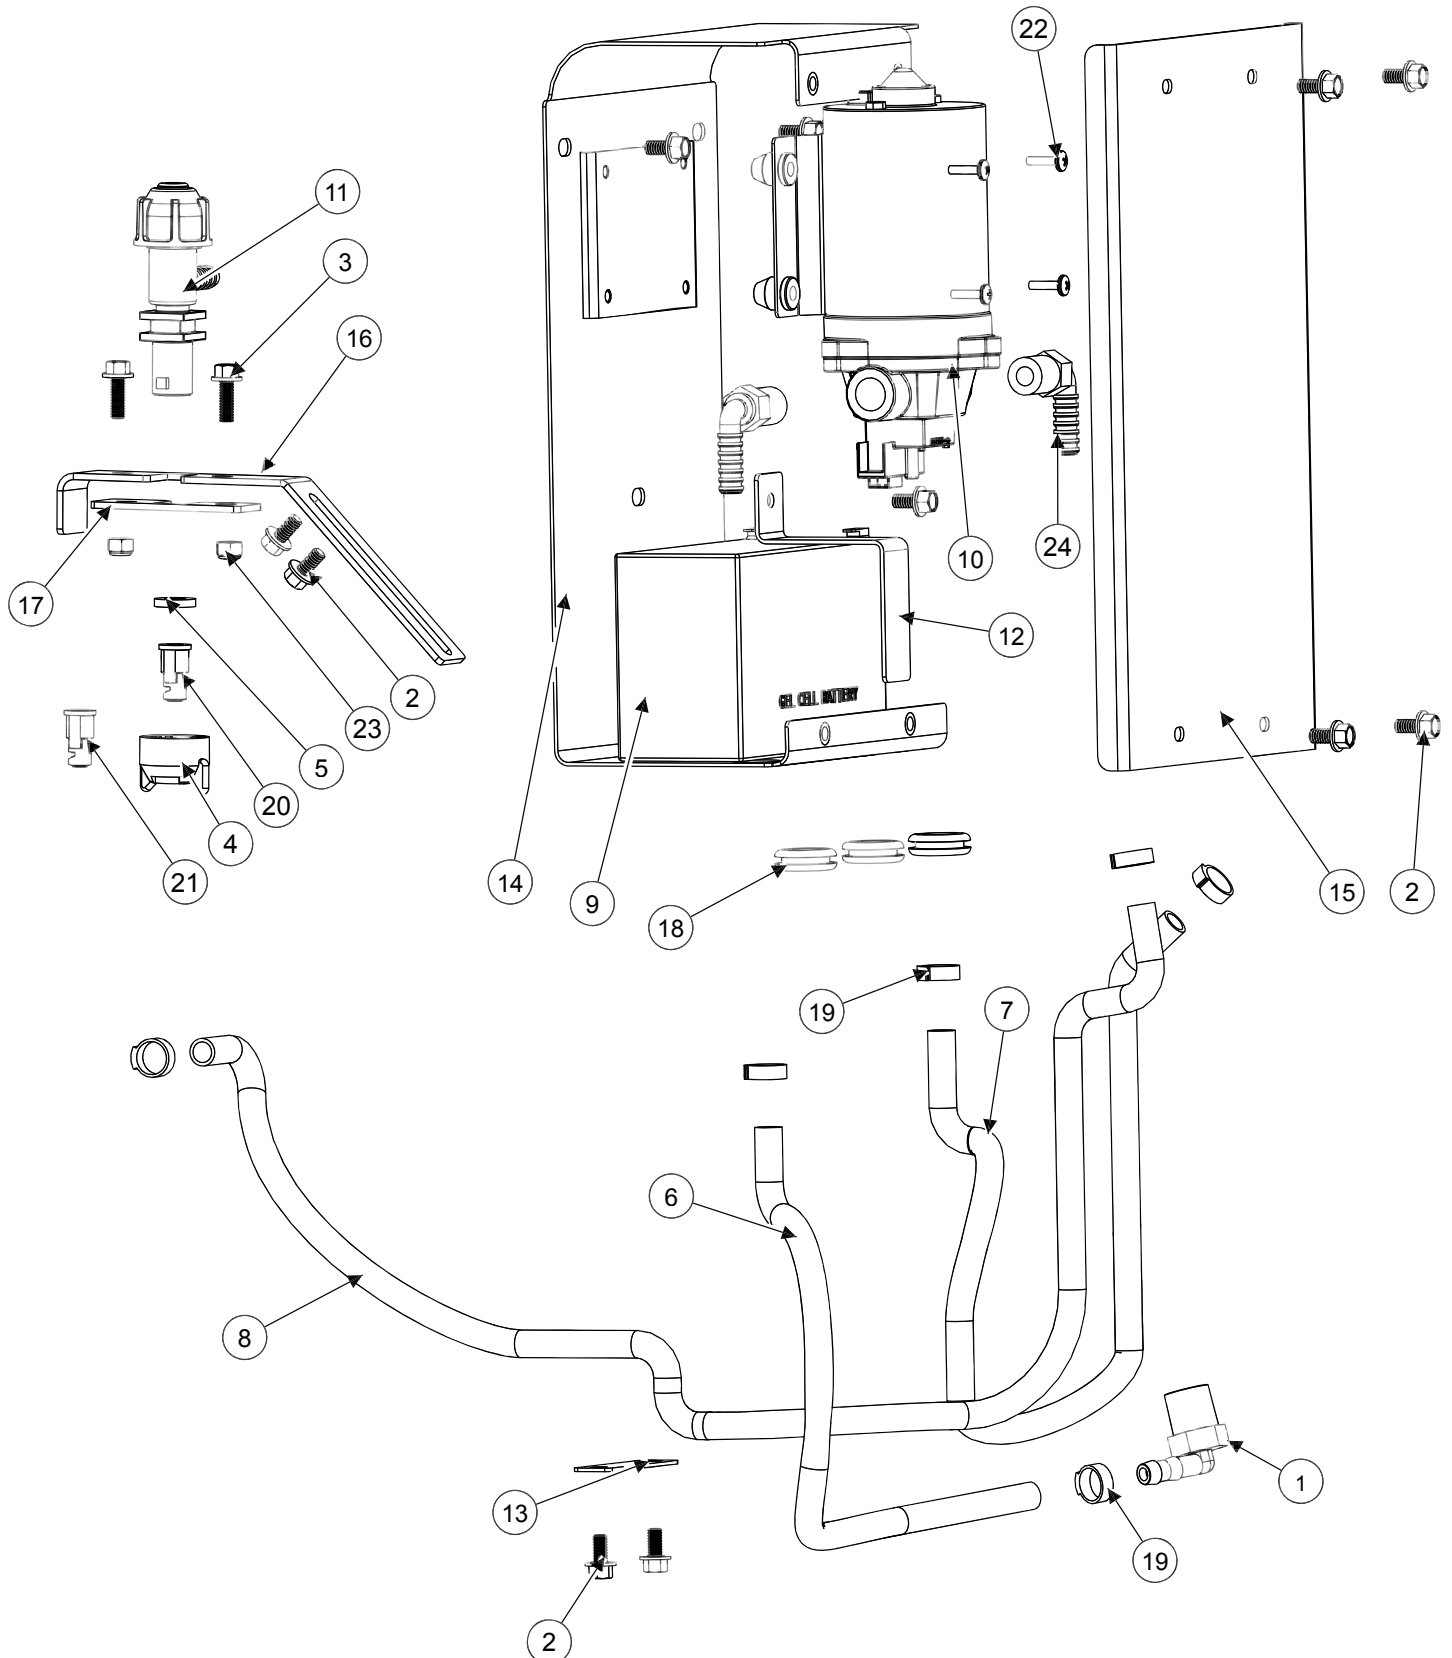

Pump Assembly Parts Breakdown

Model # LES-TL80SS

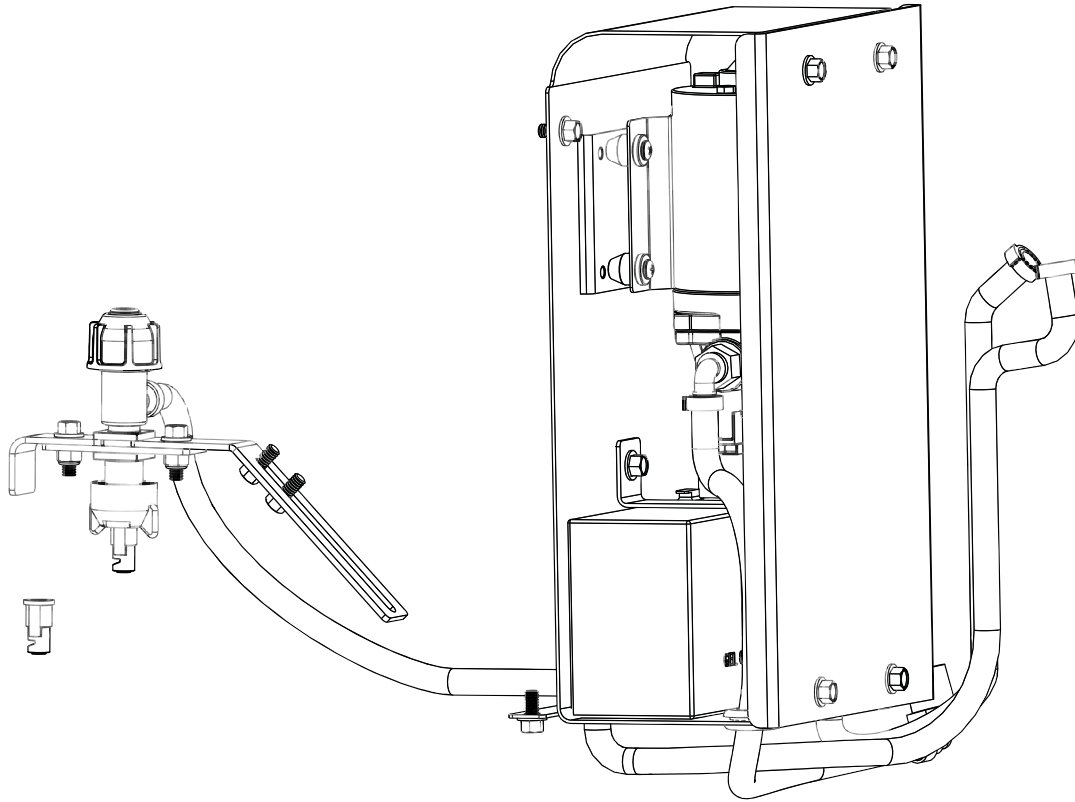

ID #	Part #	Description	Qty
1	D5377	Hose Barb 1/2" Male Thread X 3/8" 90°	1
2	D6131	Bolt 1/4"-20 X 1/2" Serrated Flange Stainless	11
3	D6132	1/4"-20 X 3/4" Serrated Flange Stainless	2
4	D6957	Spray Tip Cap Green Nylon	1
5	D6961	Nozzle Seat Gasket	1
6	D6988-16	Hose 3/8" X 16" PVC Clear	1
7	D6988-19.5	Hose 3/8" X 19.5" PVC Clear	1
8	D6988-32	Hose 3/8" X 1" PVC Clear	1
9	F50002	Battery Lead Acid 7.2 Amp Hour	1
10	F50005	Pump 1.0 GPM Diaphragm	1
11	F50015	Nozzle Body Hose Barb 3/8"	1
12	F50019	Battery Hold Down Bracket	1
13	F50021	Hose Guide Bracket	1
14	F50022	Pump Mount Enclosure Stainless	1
15	F50023	Pump Enclosure Cover	1
16	F50024	Inside Nozzle Body Bracket	1
17	F50025	Nozzle Body Clamp	1
18	F50109	Rubber Grommet 5/8"	3
19	F50145	Hose Clamp Double Tooth Poly 1/2"	6
20	F50461	Spray Nozzle 0.8 GPM Broadcast Polymer	1
21	F50462	Spray Nozzle 0.6 GPM Broadcast Polymer	1
22	F50548	Screw #10-32 X 5/8" Phil Pan MS Stainless	4
23	T15016	Nut 1/4"-20 Nylox Waxed Stainless	2
24	T20117	Hose Barb 3/8" Male Thread X 3/8 90°	2

[illegible]

[illegible]