


**BRUSH CUTTER
PARTS CATALOG
MODEL LST-2100
SERIAL NUMBER 008650 & UP**

**LESCO, INCORPORATED
20005 LAKE ROAD
ROCKY RIVER, OH 44116**

LST-2100

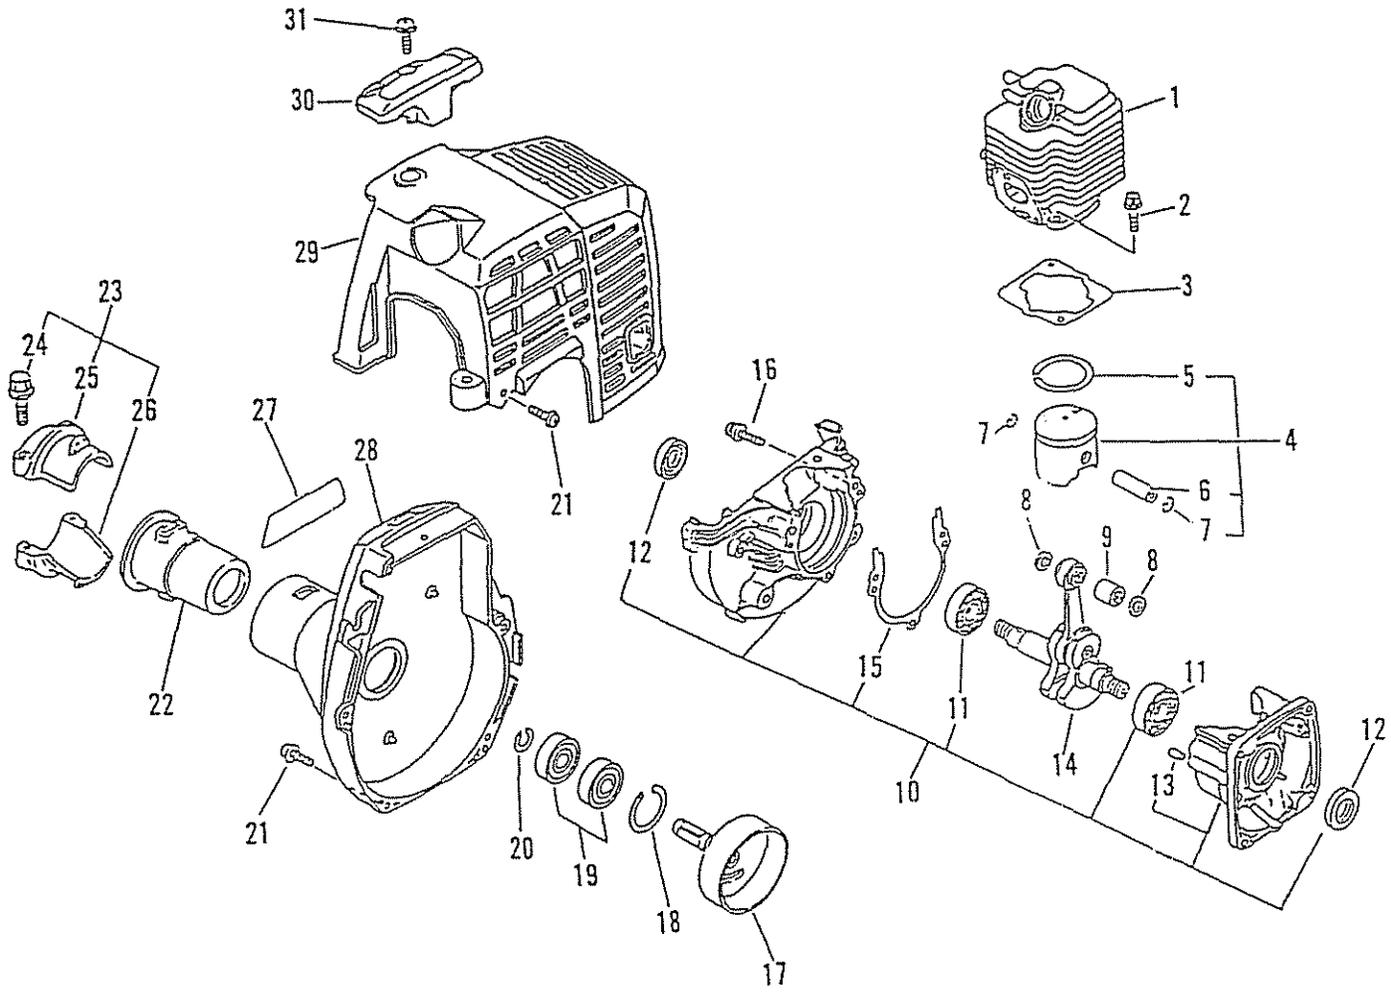

LST-2100

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	077102	1	CYLINDER	
2	080256	2	BOLT, H.S. 5X22	
3	051462	1	GASKET, CYLINDER BASE	USE KIT 889000 42031
4	066718	1	PISTON KIT	INCLUDES ITEMS 5 - 8
5	023943	1	RING, PISTON	
6	029168	1	PIN, PISTON	
7	048344	2	CIRCLIP, PISTON PIN	
8	093607	2	SPACER, PISTON PIN	
9	075288	1	BEARING, NEEDLE	
10	081945	1	CRANKCASE KIT	INCLUDES ITEMS 11 - 13, 15 & 16
11	027812	2	BEARING, BALL 6201	
12	060114	2	OILSEAL	
13	094428	2	PIN, DOWEL	
14	064169	1	CRANKSHAFT	INCLUDES ITEM 9
15	-----	1	GASKET, CRANKCASE	USE KIT 889000 42031
16	069562	3	SCREW 5X28	
17	057765	1	DRUM, CLUTCH	
18	030759	1	CIRCLIP 28	
19	090845	2	BEARING, BALL 6001	
20	035029	1	CIRCLIP 12	
21	051382	6	BOLT, H.S. 4X16	
22	057810	1	CUSHION	
23	039539	1	HOLDER KIT	INCLUDES ITEMS 24 - 26
24	025844	2	BOLT 5X25	
25	071747	1	HOLDER	
26	025860	1	HOLDER	
27	041527	1	LABEL, MODEL	
28	085726	1	COVER ASY, FAN	
29	062562	1	COVER, CYLINDER	
30	097298	1	GUARD, TOP	
31	090247	1	SCREW 5X16	


ENGINE REPOWER

084744	1	SHORT BLOCK	INCLUDES FACTORY ASSEMBLED CYLINDER, CRANKCASE, PISTON CRANKSHAFT, BEARING & SEALS
--------	---	-------------	--

OPTIONAL

034008	1	GASKET KIT	
051462	1	GASKET, CYLINDER BASE	
-----	1	GASKET, CRANKCASE	
089887	1	GASKET, INTAKE	
019595	1	GASKET, INTAKE	
078844	1	GASKET, MUFFLER LID	
016866	2	GASKET, MUFFLER	

LST-2100

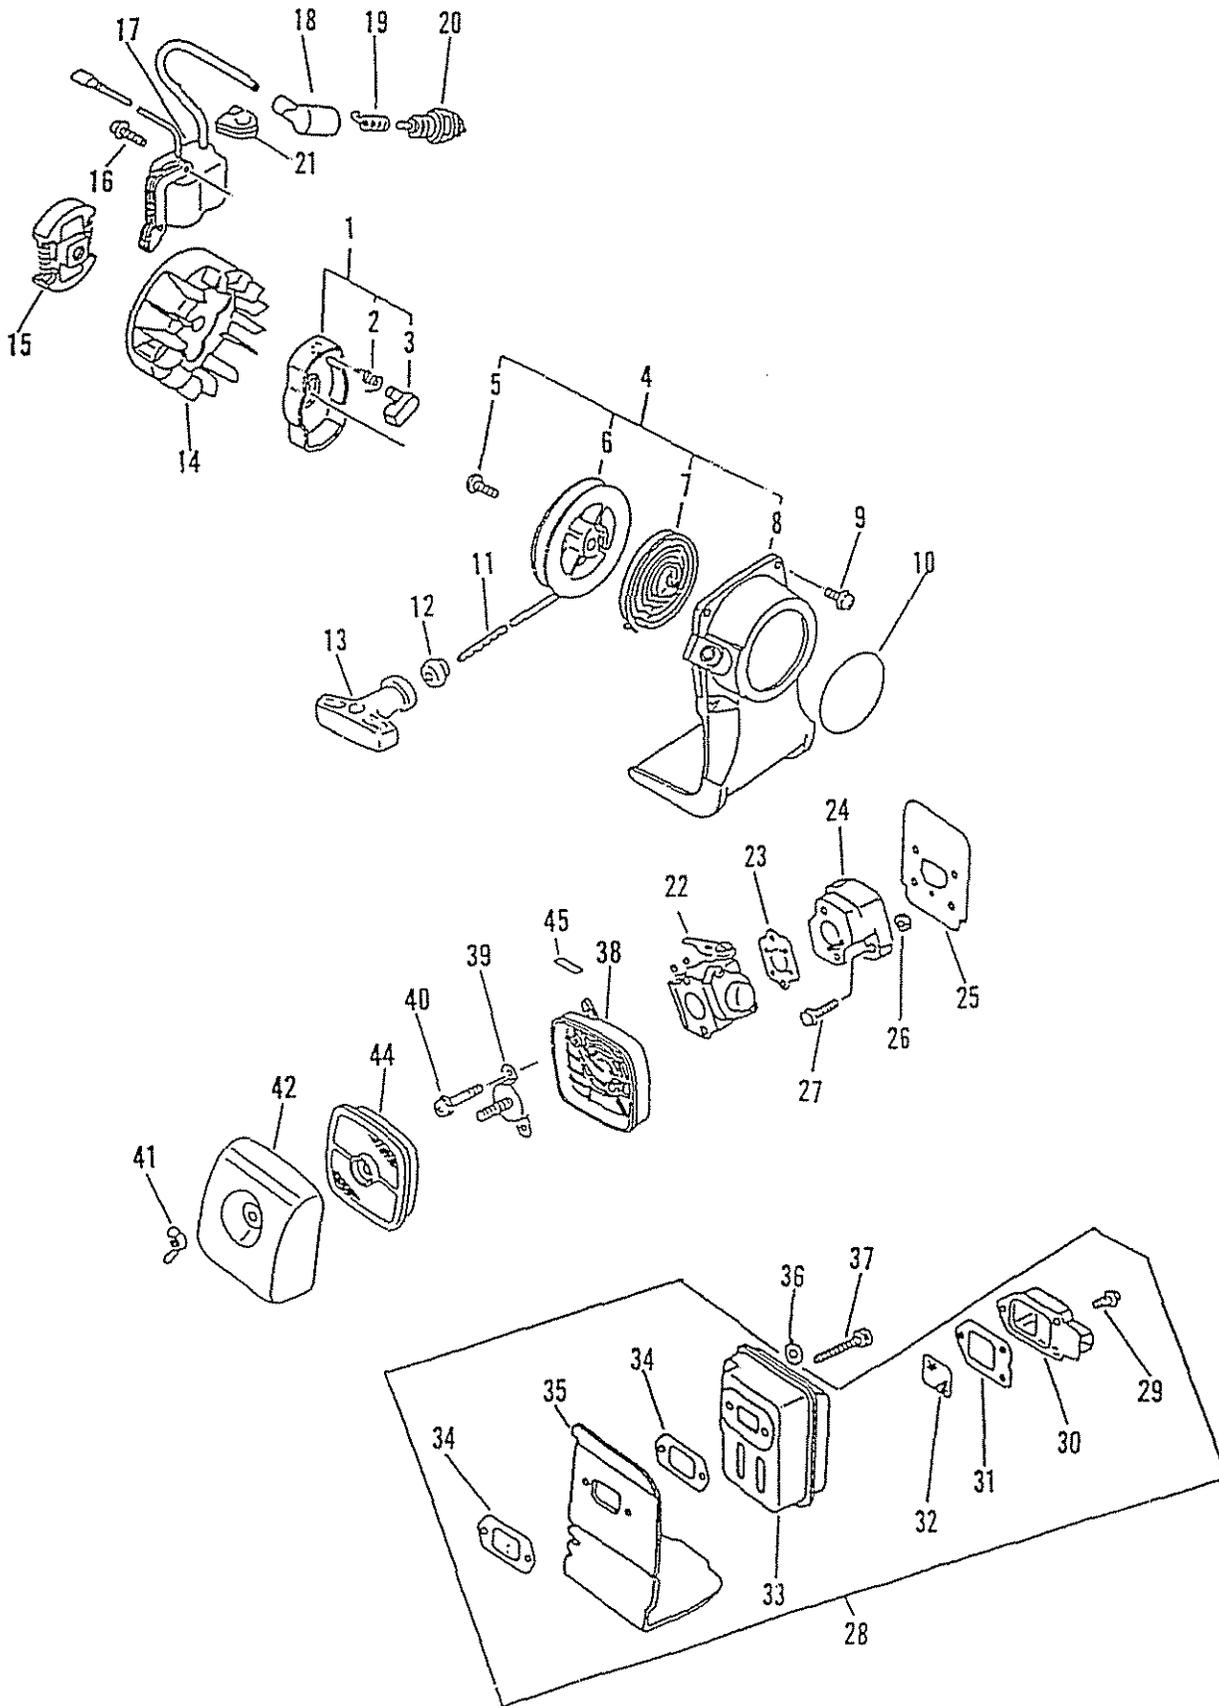


LST-2100

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	038794	1	PAWL ASY, STARTER	INCLUDES ITEMS 2 & 3
2	088528	1	SPRING, RETURN	
3	058912	1	PAWL, STARTER	
4	092466	1	STARTER ASY	
5	051434	1	SCREW	
6	053724	1	DRUM, STARTER	
7	039005	1	SPRING, REWIND	
8	051474	1	CASE, STARTER	
9	031055	2	SCREW 4X16	
10	071358	1	LABEL, BRAND	
11	038661	1	ROPE, STARTER	USE BULK ROPE 050553 DIA. 3.0 MM (.12") X 890 MM (35.0")
12	038471	1	GUIDE, ROPE	
13	029106	1	GRIP, STARTER	
14	067507	1	FLYWHEEL	
15	035639	1	CLUTCH ASY	
16	051383	2	BOLT, H.S. 4X22	
17	072722	1	COIL, IGNITION	
18	022650	1	CAP, SPARK PLUG	
19	024780	1	COIL, SPARK PLUG CAP	
20	058125	1	PLUG, SPARK BPM-7A	
21	025986	1	GROMMET	
22	024513	1	CARBURETOR C1U-K16	
23	089887	1	GASKET, INTAKE	
24	065479	1	INSULATOR	
25	019595	1	GASKET, INTAKE	
26	034589	1	NUT 5	
27	059557	2	SCREW 5X20	
28	038428	1	MUFFLER ASY	INCLUDES ITEMS 29 - 35
29	080124	3	SCREW 4X10	
30	087124	1	HOLDER, SCREEN	
31	078844	1	GASKET, MUFFLER LID	
32	071174	1	SCREEN, MUFFLER	
33	NSS	1	MUFFLER	ORDER 038428
34	016866	2	GASKET, MUFFLER	
35	061818	1	COVER, MUFFLER	
36	044153	2	WASHER 5	
37	069886	2	BOLT, H.S. 5X55	
38	051475	1	CASE, AIR CLEANER	
39	053031	1	PLATE, PREVENT	
40	019264	1	SCREW 5X65	
41	063446	1	NUT, WING 5	
42	051385	1	COVER, AIR CLEANER	
44	051388	1	FILTER, AIR H.D.	
45	059399	1	LABEL, CHOKE	

REVISED 03/94


LST-2100

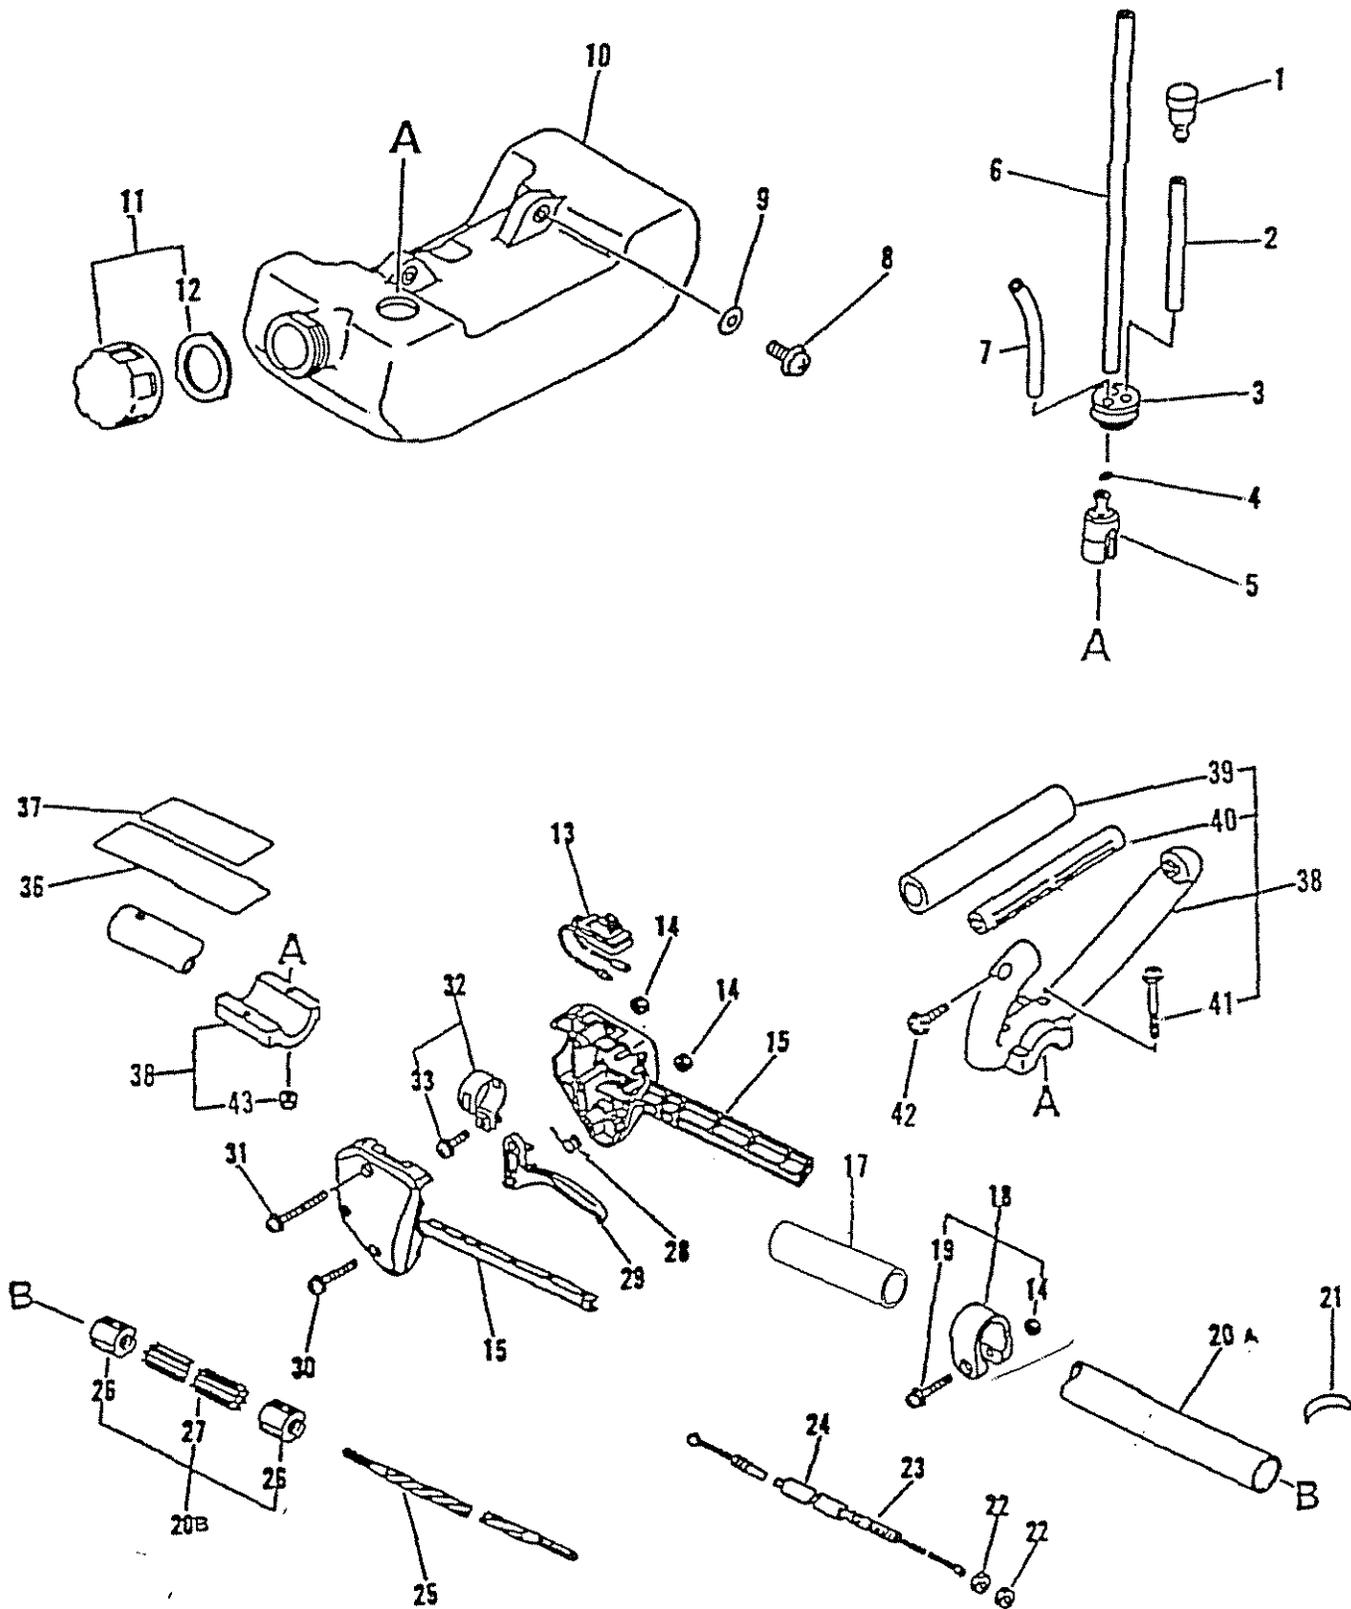

LST-2100

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	033688	1	VENT ASY	
2	070395	1	PIPE 3X5X70	
3	093287	1	GROMMET, FUEL	
4	076965	1	CLIP	
5	076420	1	STRAINER, FUEL	
6	084229	1	PIPE, FUEL	
7	074945	1	PIPE 3X5X90	
8	072951	2	SCREW 5X16	
9	060744	2	WASHER 5	
10	052545	1	TANK, FUEL	
11	051476	1	CAP ASY, FUEL	INCLUDES ITEM 12
12	097180	1	GASKET, FUEL TANK CAP	
13	052635	1	SWITCH, IGNITION	
14	034589	2	NUT 5	
15	050729	1	BRACKET SET, THROTTLE	INCLUDES ITEMS 14, 30 & 31
17	093832	1	GRIP, FRONT HANDLE	
18	062130	1	BAND 25	INCLUDES ITEMS 14 & 19
19	043896	1	SCREW 5X28	
20	042973	1	HOUSING ASY, DRIVESHAFT	INCLUDES ITEMS 26 & 27
21	097745	1	LABEL, CAUTION	
22	082143	2	NUT 6 (3)	
23	032443	1	WIRE, THROTTLE	
24	098041	1	TUBE	
25	092682	1	SHAFT, FLEXIBLE	
26	077792	2	FIXTURE, LINER	
27	063719	1	LINER, FLEXIBLE	
28	029694	1	SPRING, THROTTLE RETURN	
29	024451	1	CONTORL, THROTTLE	
30	099564	1	SCREW 5X25	
31	062841	1	SCREW 5X35	
32	077443	1	BAND	INCLUDES ITEM 33
33	051241	1	SCREW 5X14	
34	045872	2	SCREW 5X40	
35	044153	2	WASHER 5	
36	088570	1	LABEL, CAUTION	
37	067142	1	LABEL, CAUTION	
38	087791	1	HANDLE ASY, LOOP	INCLUDES ITEMS 39 - 43
39	083333	1	GRIP, FRONT HANDLE	
40	094854	1	HANDLE, FRONT	
41	087434	4	SCREW 6X35	
42	022034	2	SCREW 5X30	
43	027008	4	NUT 6	


LST-2100

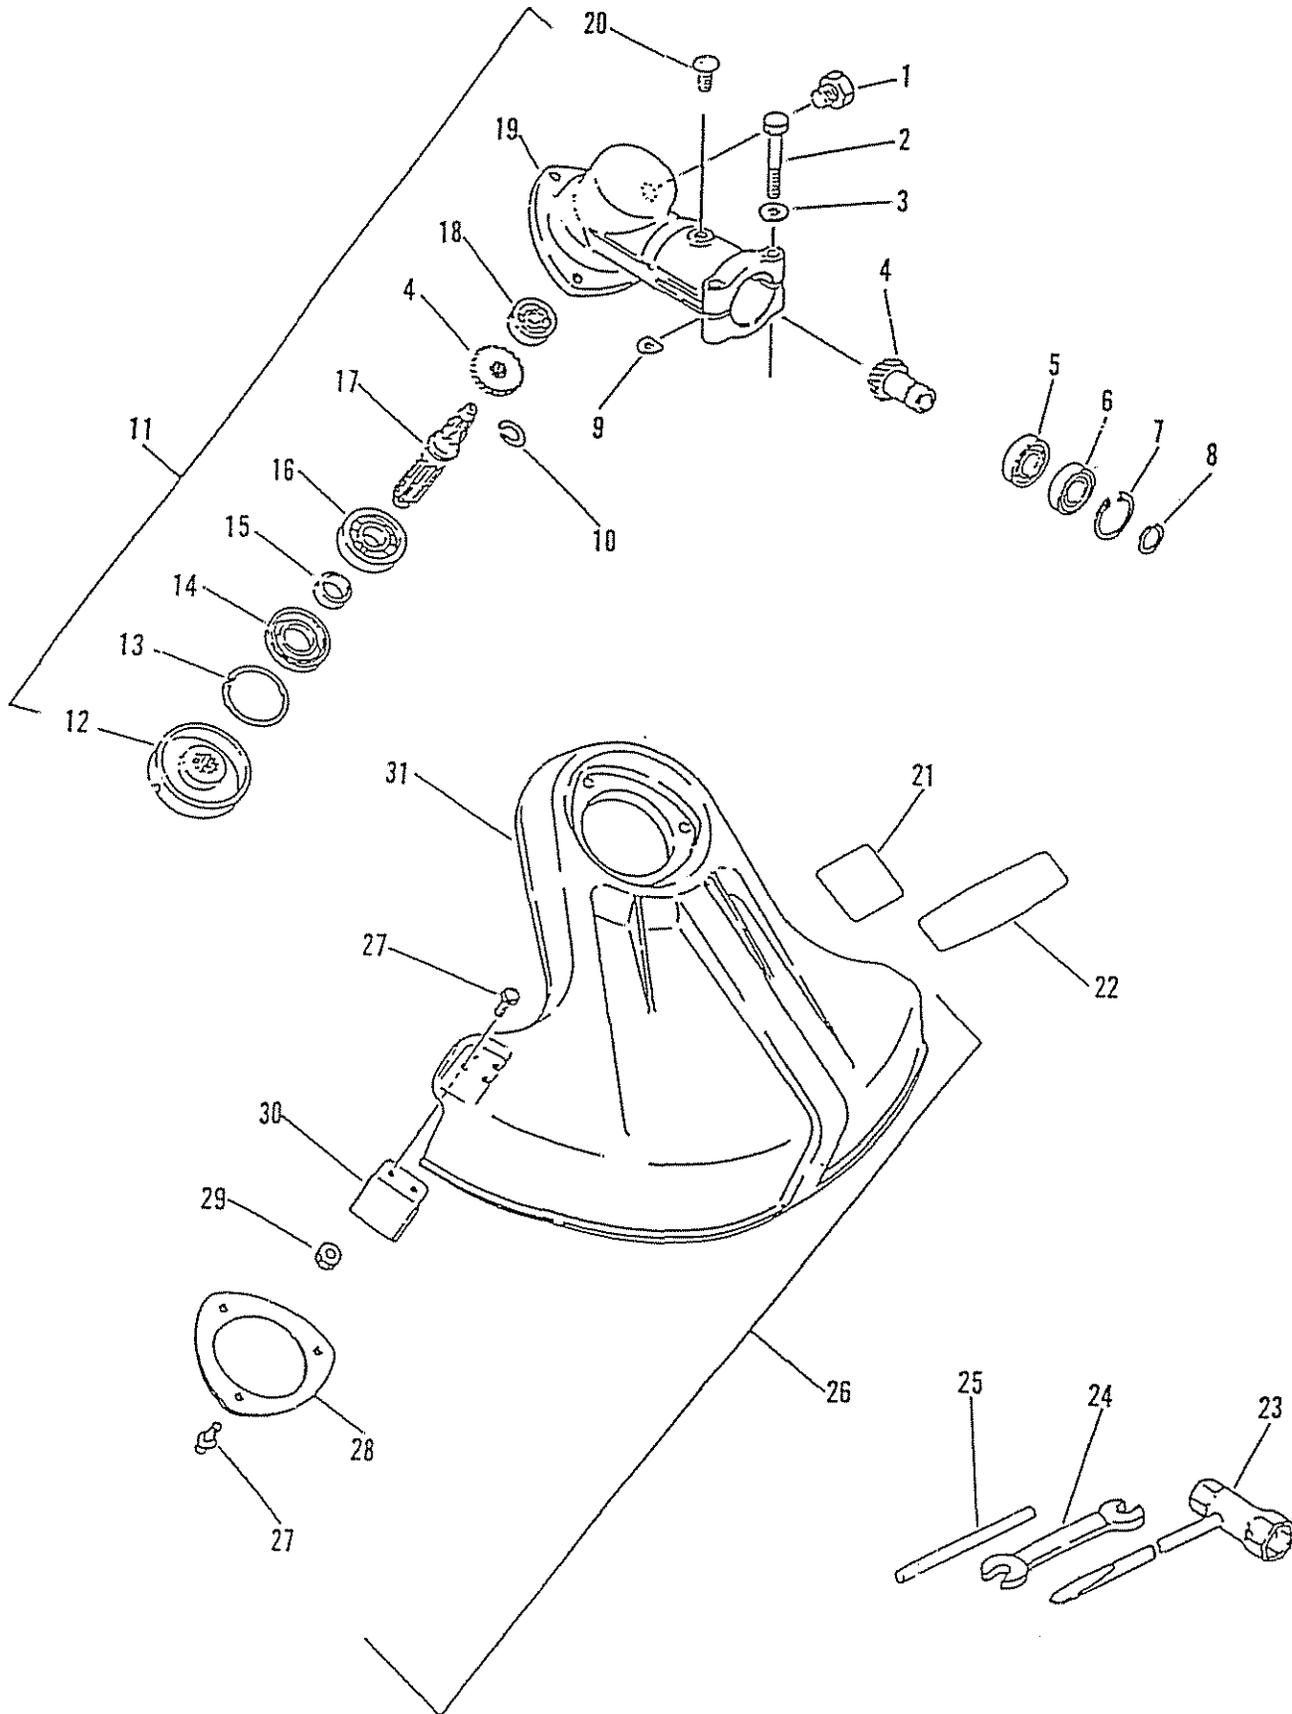

LST-2100

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	039571	1	BOLT 8X8	
2	043164	2	BOLT 5X35	
3	044153	2	WASHER 5	
4	053611	1	GEAR SET, BEVEL	
5	079385	1	BEARING, BALL 6900	
6	081725	1	BEARING, BALL 6900	
7	056909	1	CIRCLIP 22	
8	077700	1	CIRCLIP 12	
9	042538	2	WASHER, SHIM	
10	030764	1	CIRCLIP 10	
11	061013	1	HOUSING ASY, GEAR	INCLUDES ITEMS 1 - 10, 12 - 20
12	067937	1	PLATE, ADAPTER (U)	
13	037941	1	CIRCLIP 32	
14	036615	1	OILSEAL	
15	084977	1	SPACER	
16	033069	1	BEARING, BALL 6201	
17	028260	1	SHAFT, P.T.O.	
18	061068	1	BEARING, BALL 609	
19	078899	1	HOUSING, GEAR	
20	035267	1	SCREW 5X10	
21	096069	1	LABEL, CAUTION	
22	095522	1	LABEL, BRAND	
23	067062	1	WRENCH, W/SCREWDRIVER	
24	057704	1	SPANNER 8X10	
25	097929	1	LOCKING TOOL	
26	040679	1	SHIELD ASY	INCLUDES ITEMS 27 - 31
27	038658	4	SCREW 5X16	
28	024256	1	BRACKET, SHIELD	
29	034589	1	NUT 5	
30	086152	1	KNIFE, CORD	
31	088446	1	SHIELD, BLADE	

LST-2100

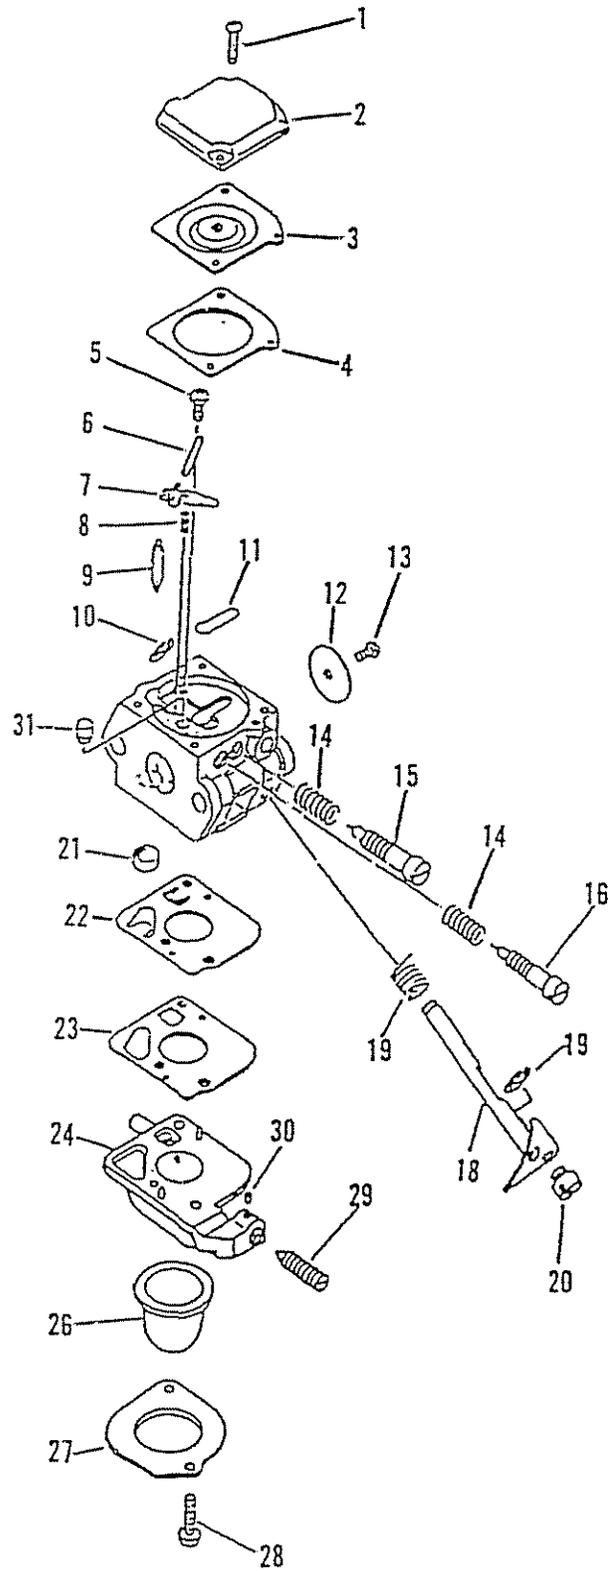

LST-2100

KEY	PART NUMBER	QTY	DESCRIPTION	REMARKS
	024513	1	CARBURETOR C1U-K16	INCLUDES THE FOLLOWING ITEMS
1	067978	2	SCREW	
2	046630	1	COVER, DIAPHRAGM	
3	A B	1	DIAPHRAGM	
4	A B	1	GASKET, DIAPHRAGM	
5	097890	1	SCREW	
6	A	1	PIN	
7	A	1	LEVER, METERING	
8	A	1	SPRING, COIL	
9	A	1	VALVE, NEEDLE	
10	035101	1	CLIP	
11	A	1	PLUG, WELCH	
12	095383	1	VALVE, THROTTLE	
13	055878	1	SCREW	
14	046496	2	SPRING, COIL	
15	088094	1	NEEDLE, HIGH SPEED	
16	052890	1	NEEDLE, IDLE	
17	094719	1	SPRING, THROTTLE RETURN	
18	042781	1	SHAFT, THROTTLE	
19	091307	1	CLIP	
20	031619	1	SWIVEL	
21	A	1	STRAINER	
22	A B	1	DIAPHRAGM, FUEL PUMP	
23	A B	1	GASKET, FUEL PUMP	
24	039961	1	COVER, PUMP	
26	074606	1	PUMP, PRIMER	
27	076192	1	RING	
28	053638	2	SCREW	
29	032655	1	SCREW, IDLE ADJUST	
30	037461	1	PIECE, FRICTION	
31	077617	1	NOZZLE, CHECK VALVE	
A	080611	1	REBUILD KIT	
B	099111	1	GASKET/DIAPHRAGM KIT	